


ENGINE (European Spec.)

HOW TO PROCEED WITH TROUBLESHOOTING

DIS1H-10

When using hand-held tester, troubleshoot in accordance with the procedure on the following pages.

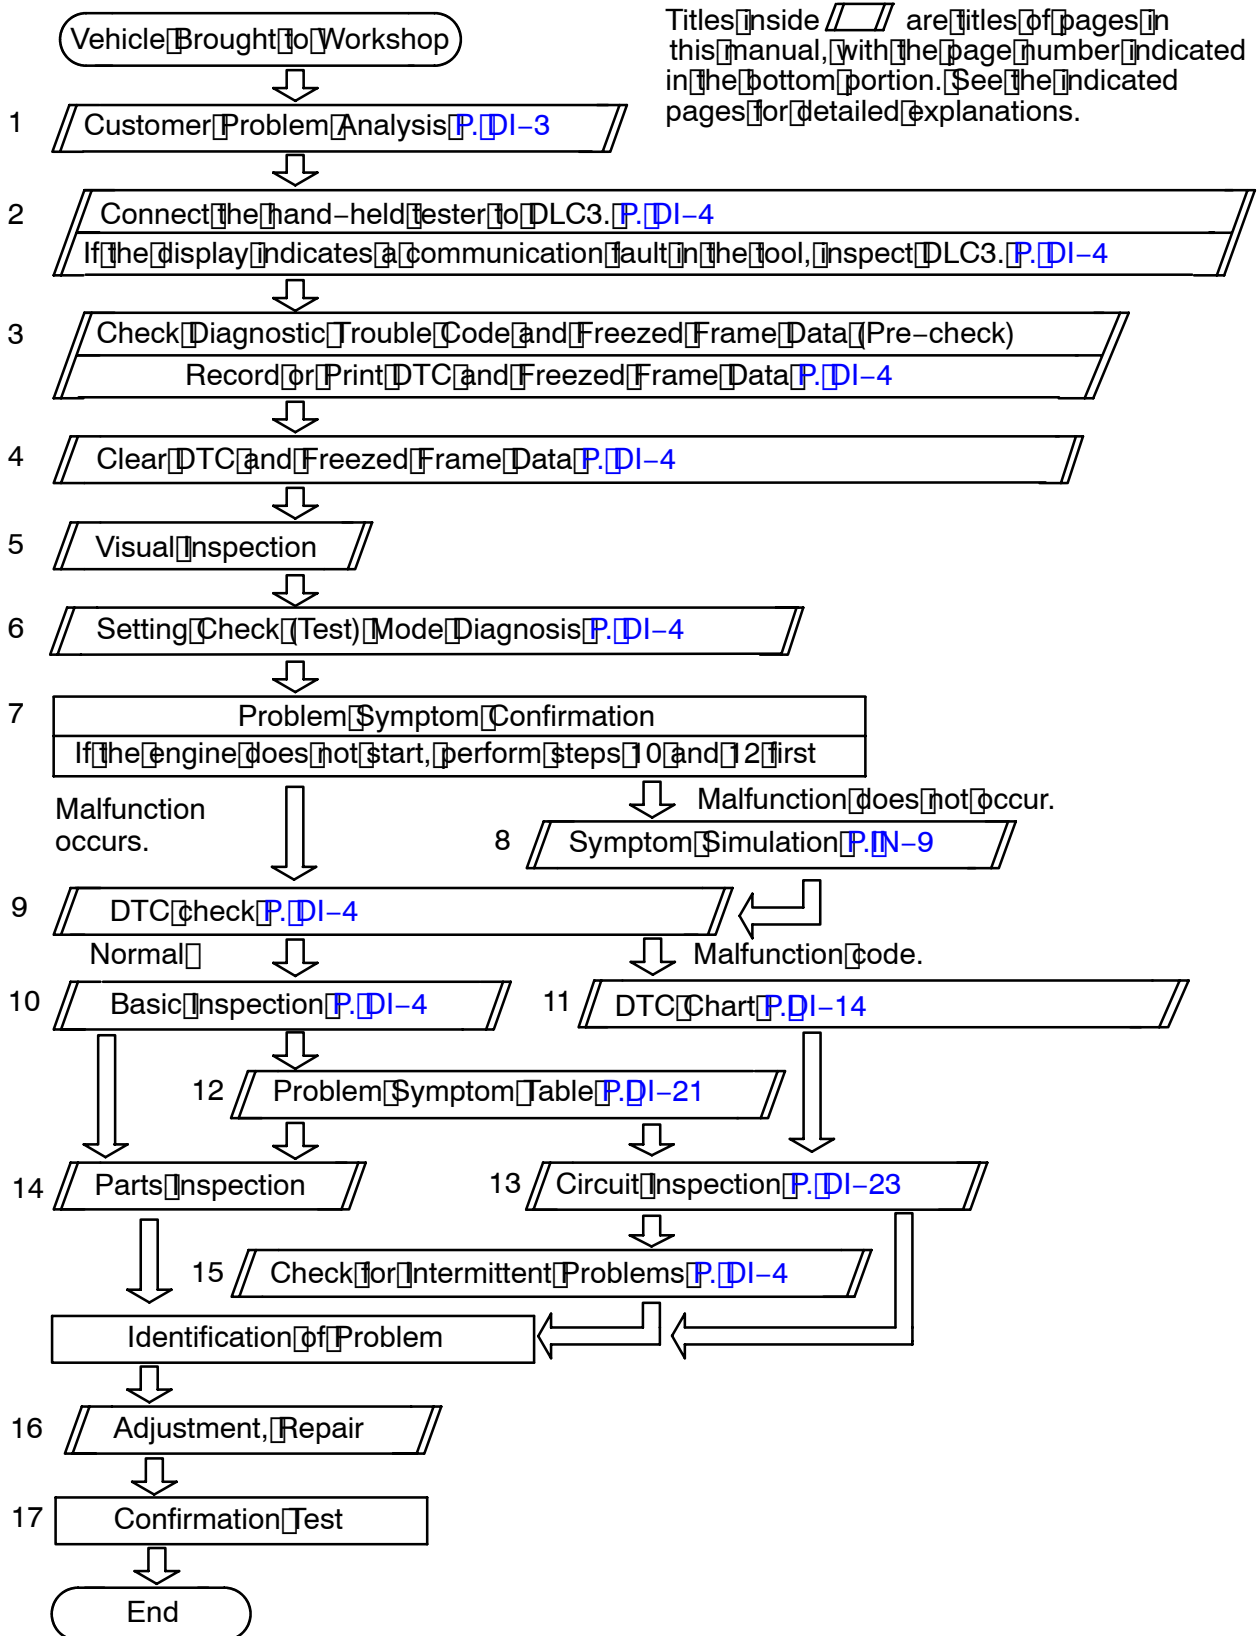

When not using hand-held tester, troubleshoot in accordance with the procedure on the following pages.

