


## 1 LAND CRUISER (LHD)

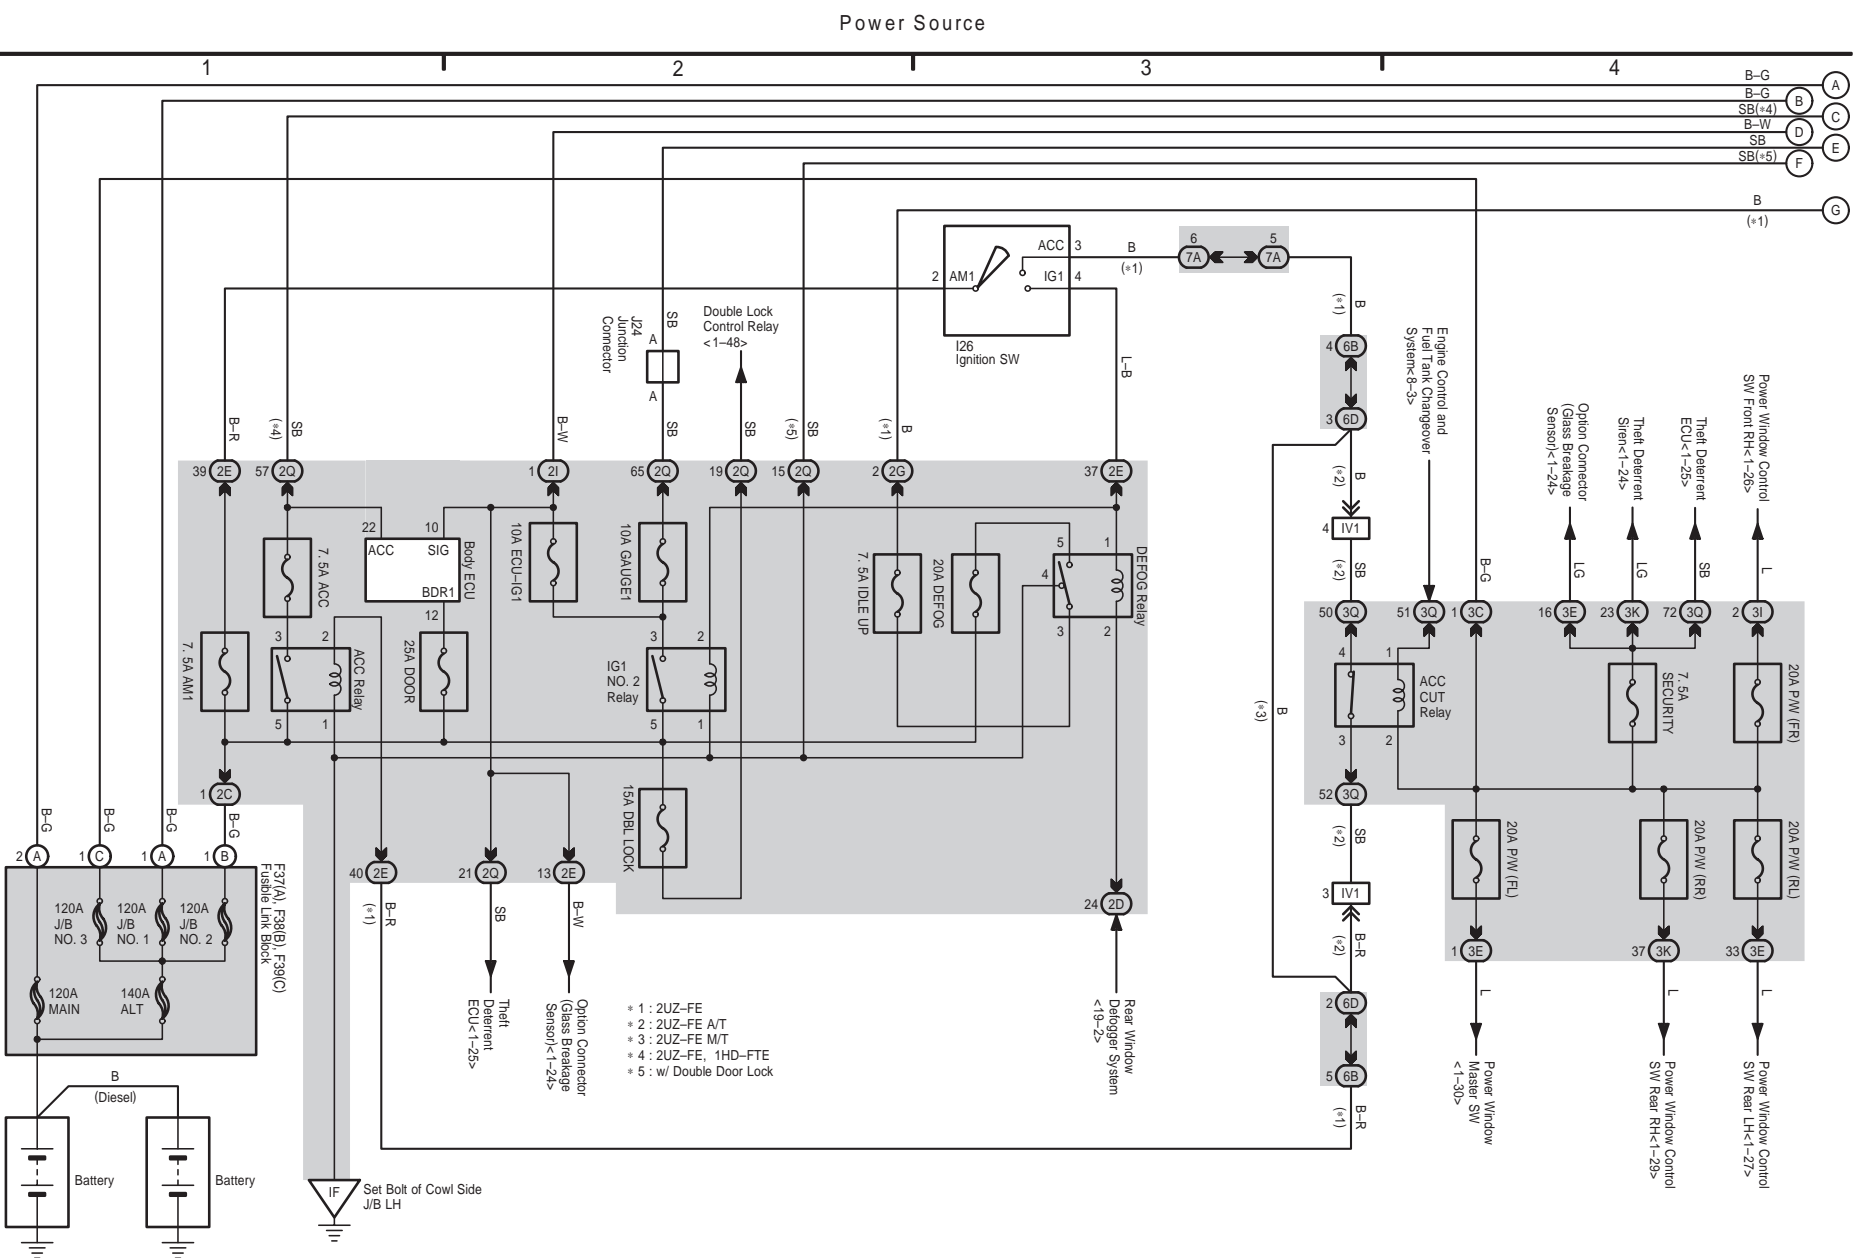




(Cont. next page)

- \* 4 : 2UZ-FE, 1HD-FTE
- \* 5 : w/ Double Door Lock
- \* 6 : w/ Moon Roof
- \* 7 : w/o Moon Roof w/ Overhead Console
- \* 8 : w/o Moon Roof w/o Overhead Console


Multiplex Communication System

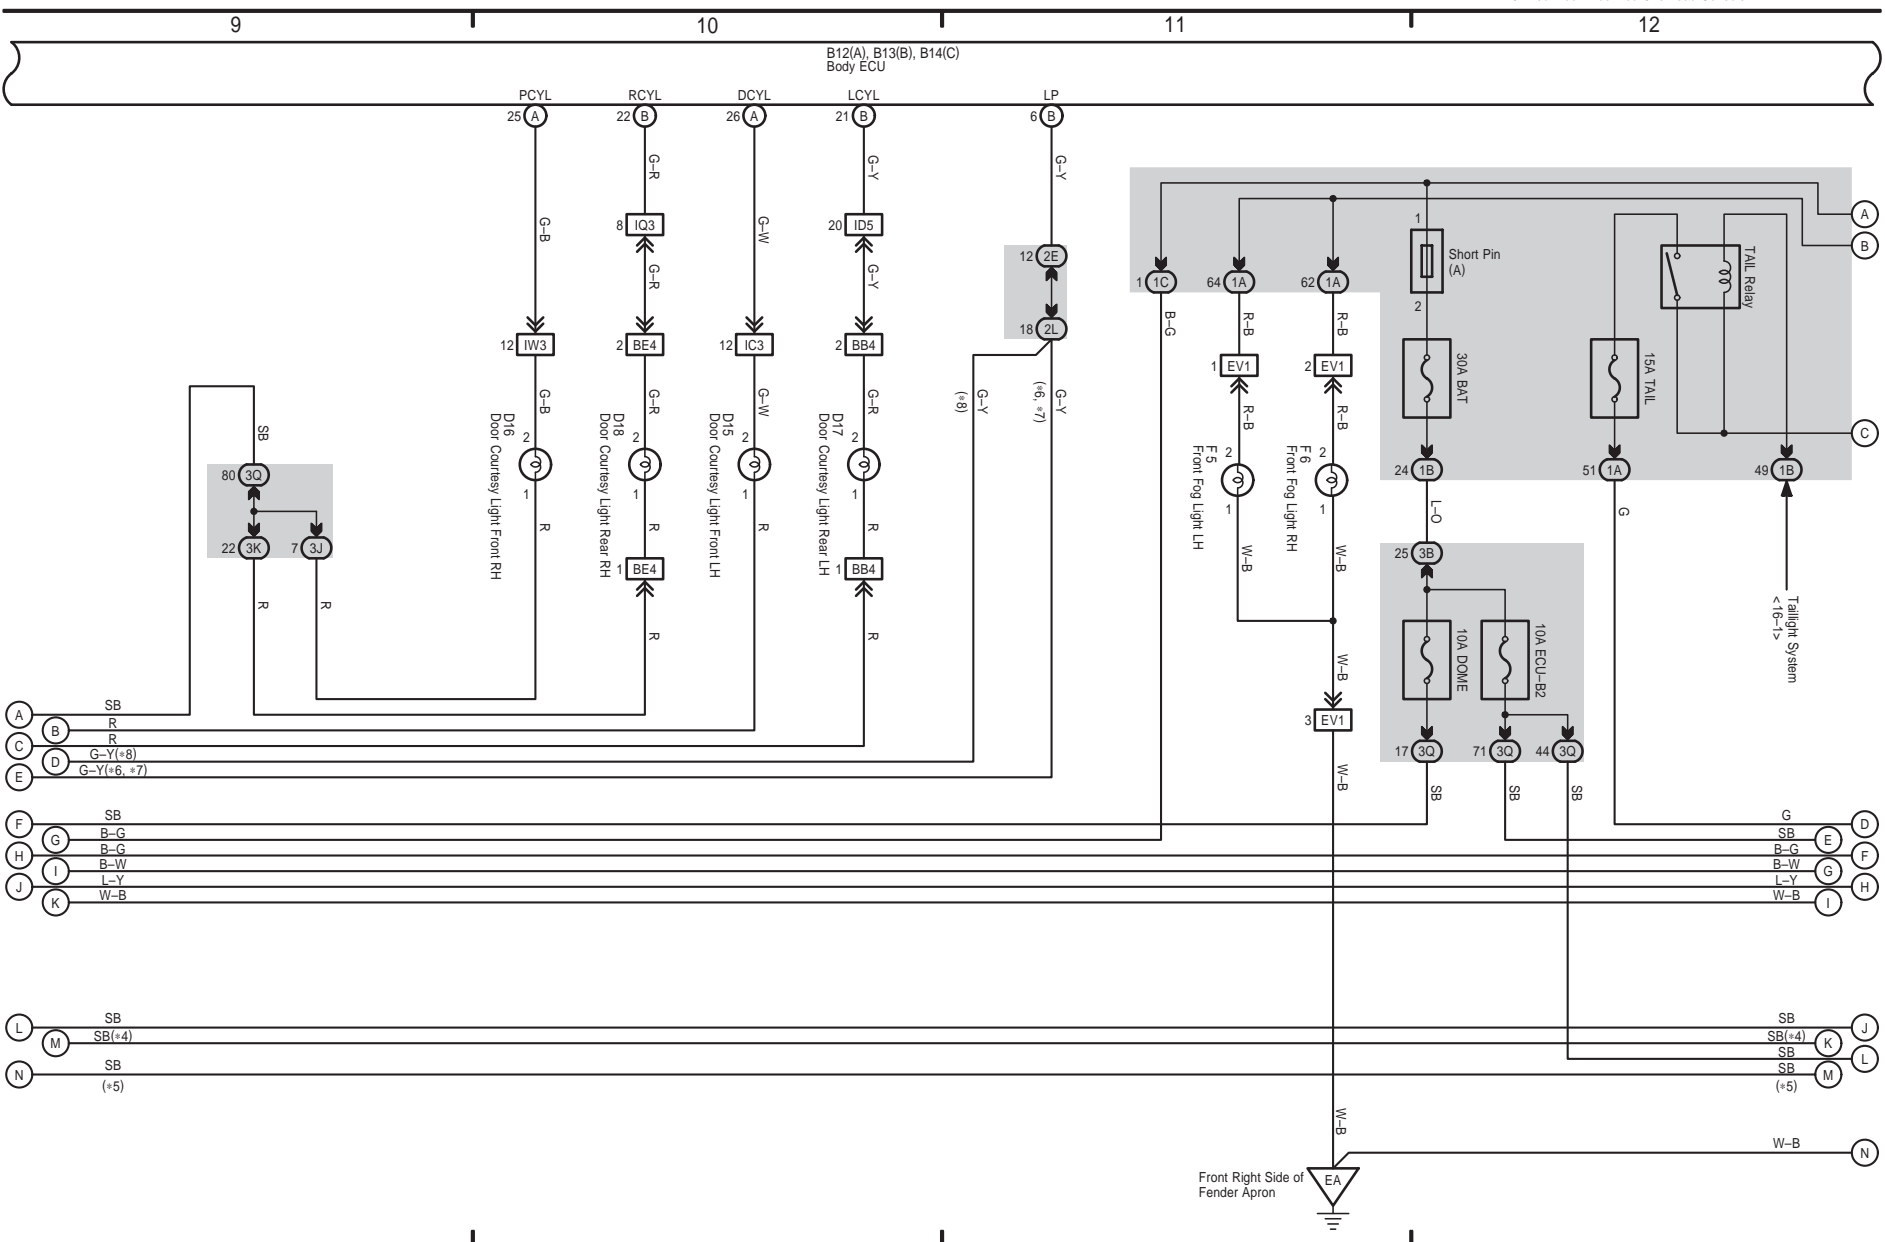

1 LAND CRUISER (LHD) (Cont' d)

- \* 4 : 2UZ-FE, 1HD-FTE
- \* 5 : w/ Double Door Lock
- \* 9 : w/ HID
- \* 10 : w/o HID
- \* 11 : Europe


Multiplex Communication System

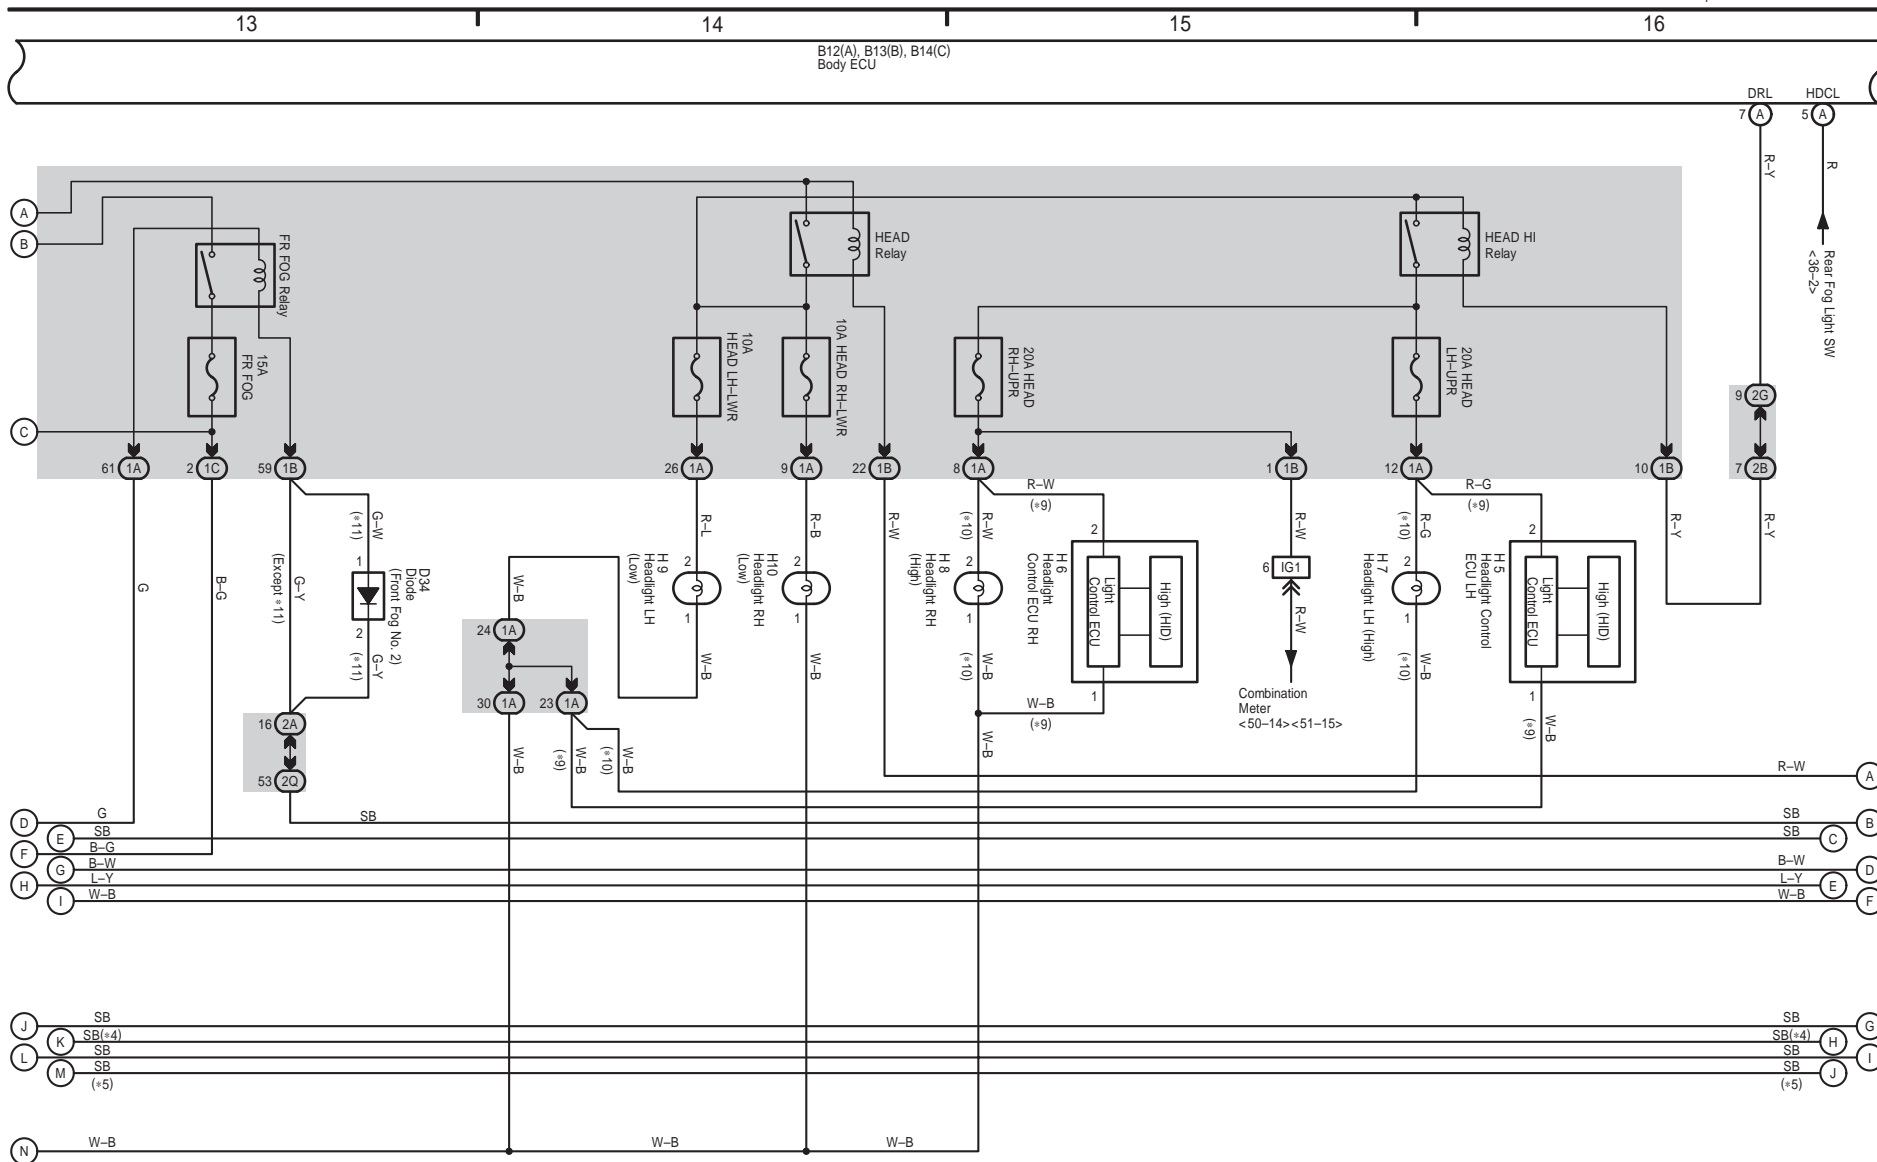

(Cont. next page)

- \* 4 : 2UZ-FE, 1HD-FTE
- \* 5 : w/ Double Door Lock
- \* 12 : w/ Daytime Running Light
- \* 13 : w/o Daytime Running Light
- \* 14 : Automatic A/C


## Multiplex Communication System

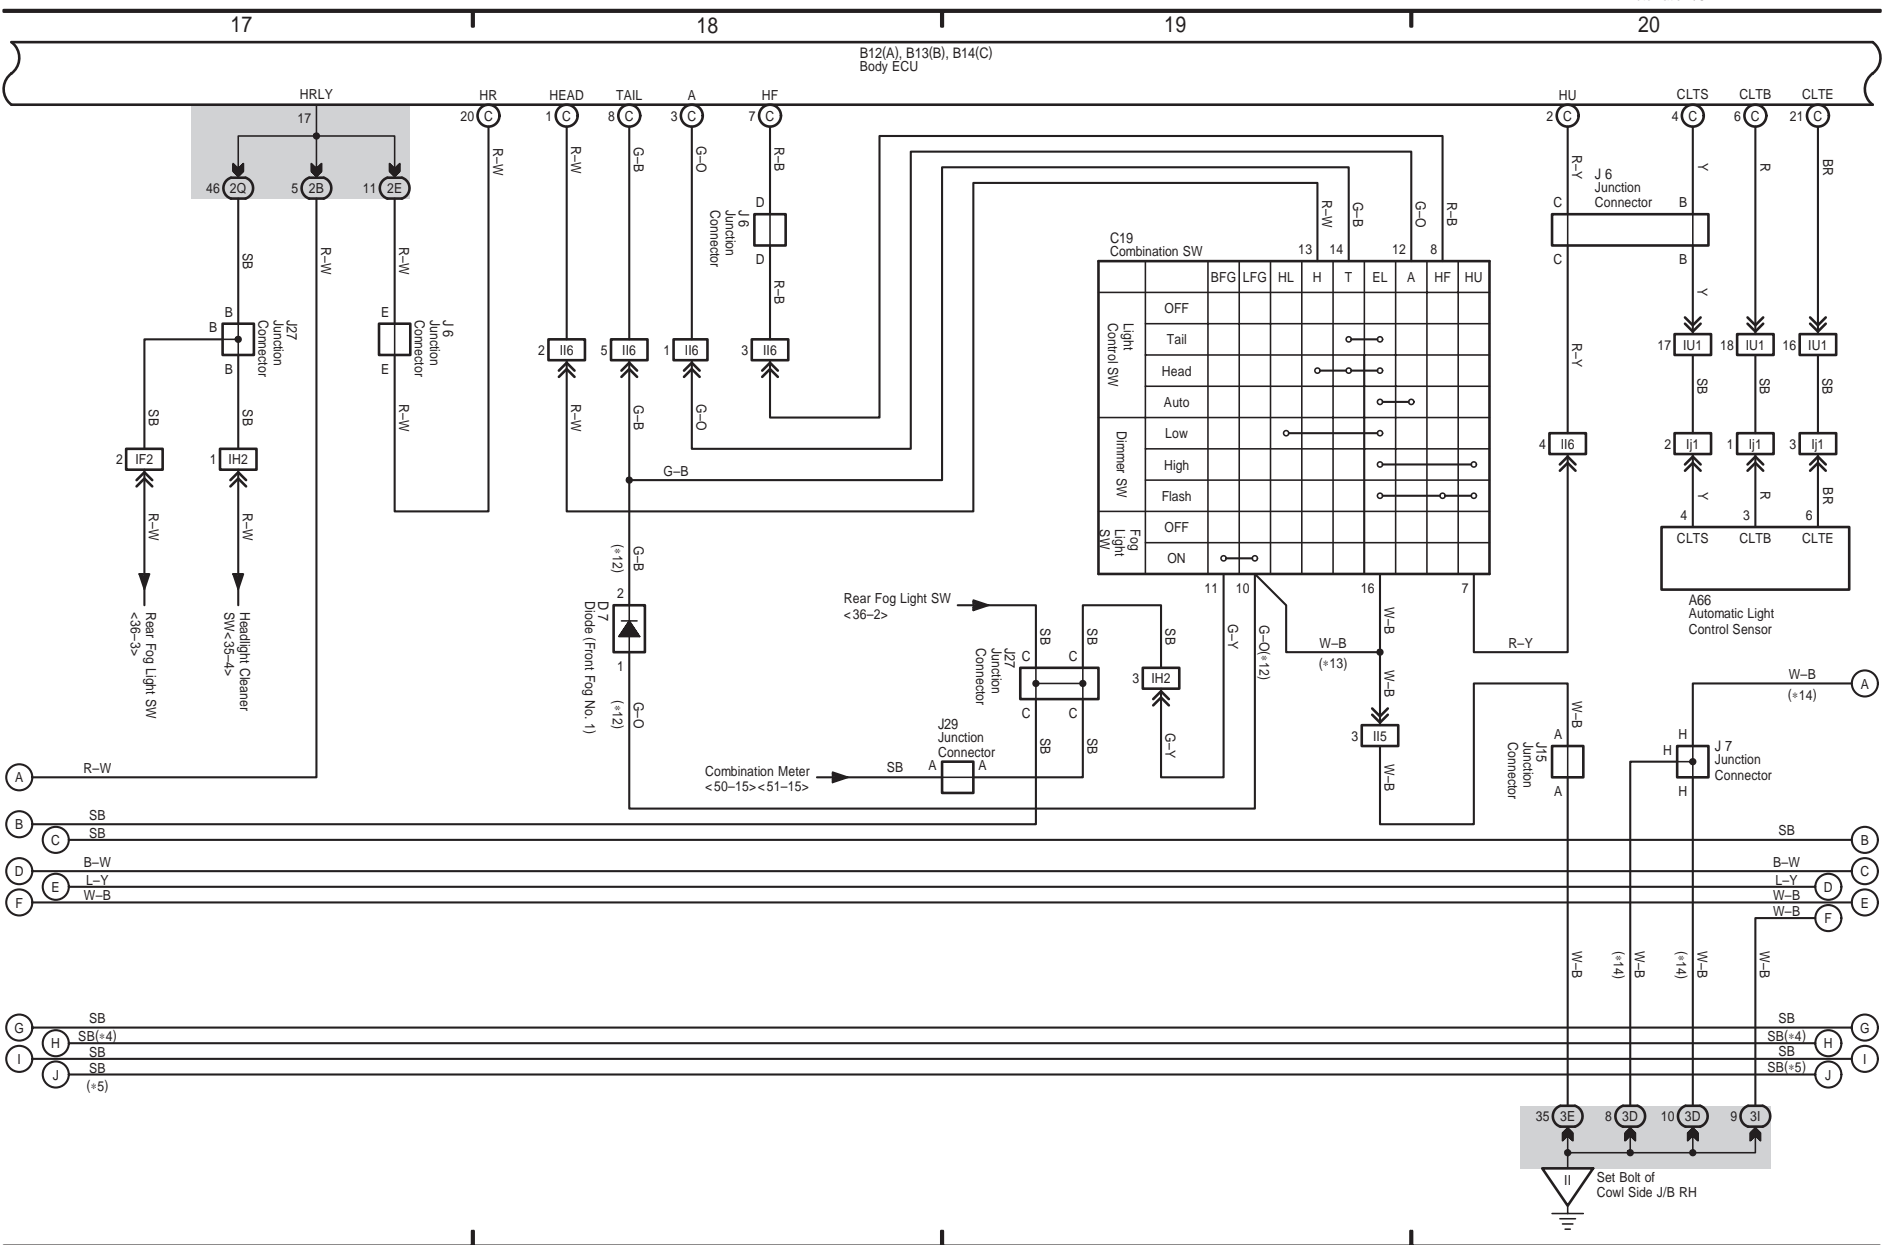


Multiplex Communication System

\* 4 : 2UZ-FE, 1HD-FTE  
\* 5 : w/ Double Door Lock  
\* 14 : Automatic A/C  
\* 15 : Except \*14

\*16 : w/ Navigation System  
\*17 : w/o Navigation System  
\*18 : w/o Power Window

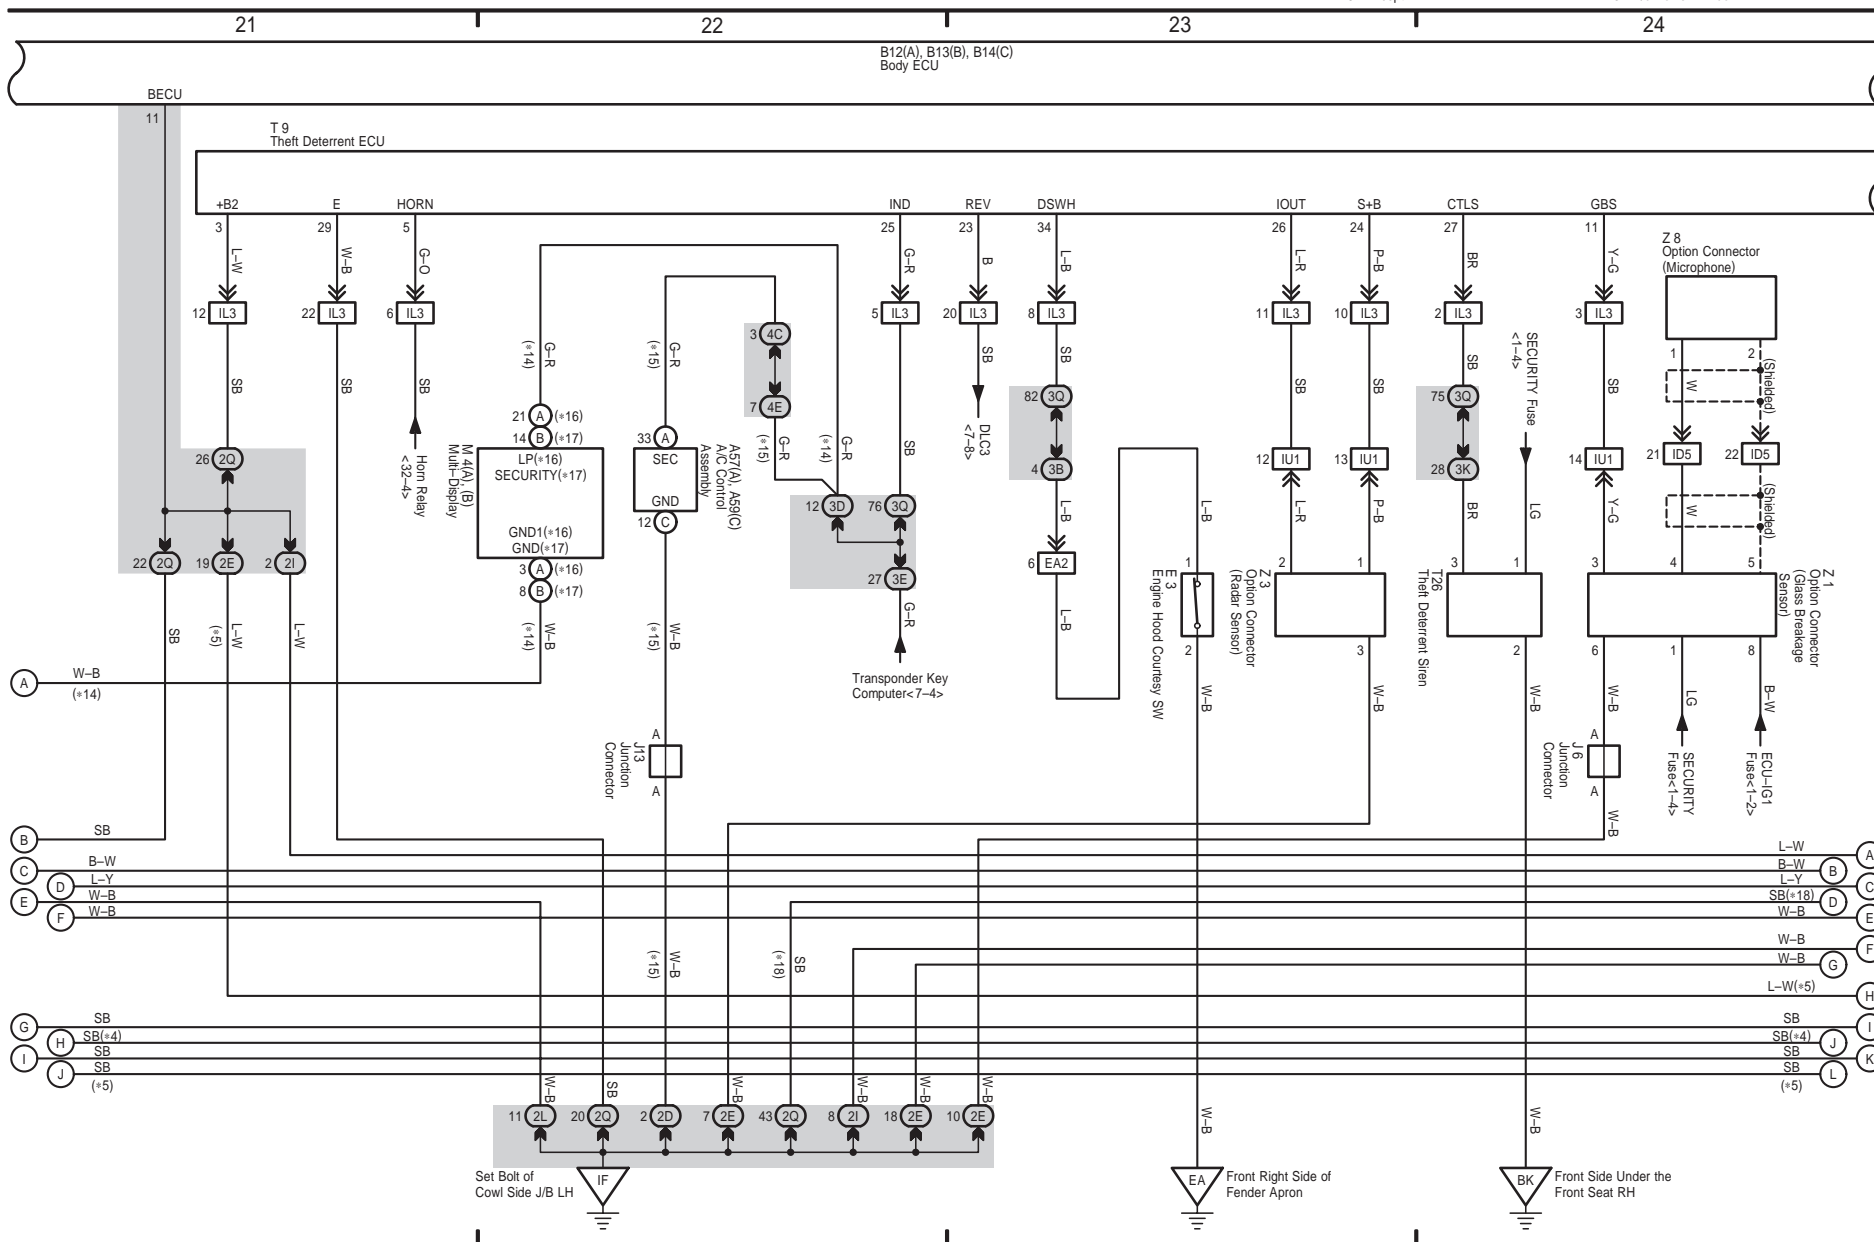

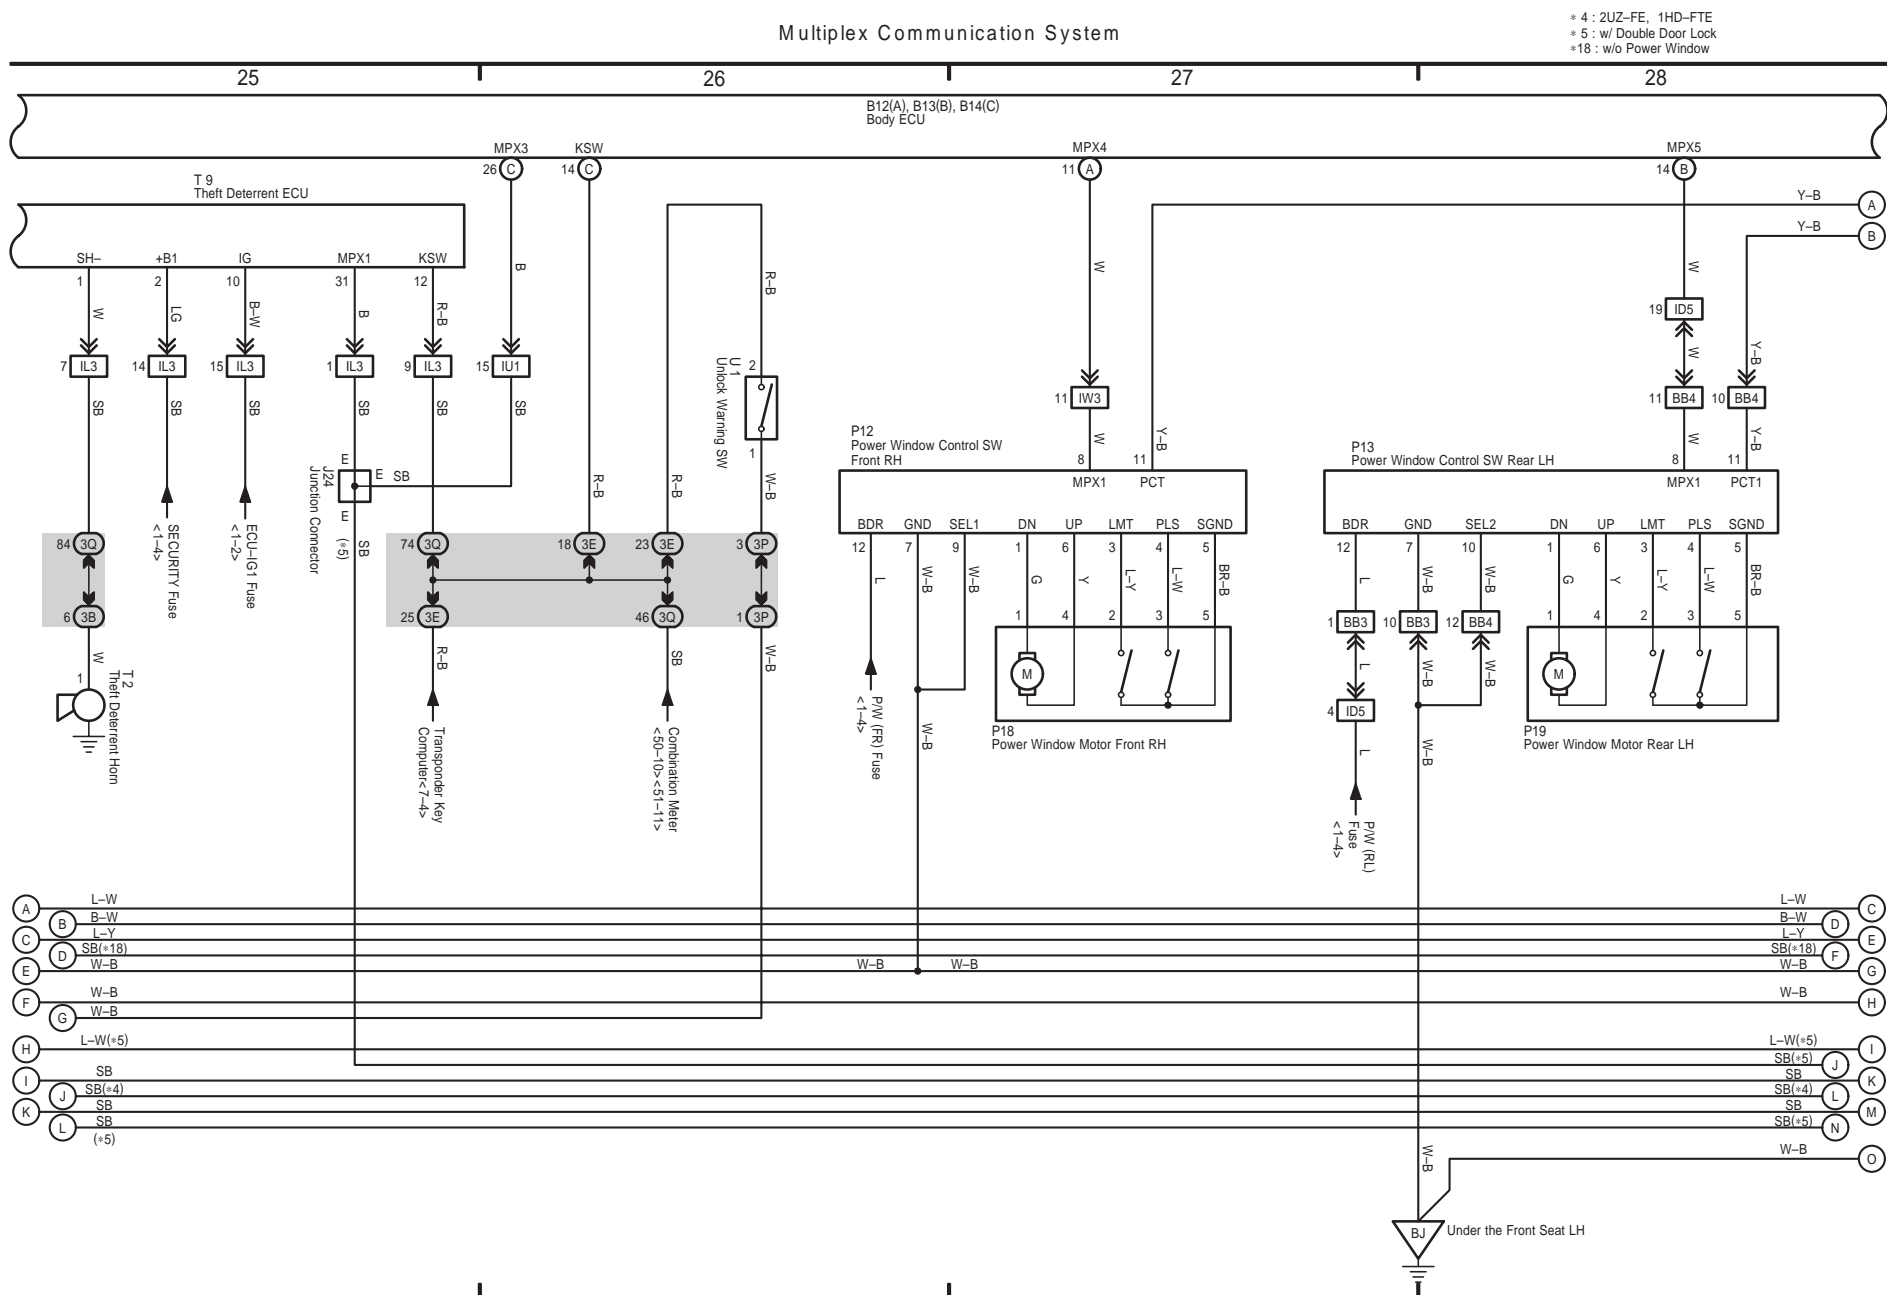

Wiring diagram for the Body ECU (B12(A), B13(B), B14(C)).


Legend:

- \* 4 : 2UZ-FE, 1HD-FTE
- \* 5 : w/ Double Door Lock
- \*16 : w/ Navigation System
- \*17 : w/o Navigation System
- \*18 : w/o Power Window
- \*19 : w/ Power Window
- \*20 : Liftgate Type
- \*21 : Swing Type
- \*22 : w/o Double Door Lock


Components and Connections:


- P14 Power Window Control SW Rear RH**: BDR (12), GND (7), DN (1), UP (6), LMT (3), PLS (4), SGND (5). Motor (P20) is connected to DN (1) and UP (6).
- P15 Power Window Master SW**: CPUB (9), SIG (20), BDR (10), DN (11), UP (1), LMT (5), PLS (15), SGND (13). Motor (P17) is connected to DN (11) and UP (1).
- Door Lock Control SW**: D9, 3 (Unlock), 5 (Lock), 6 (W-B), 11 (IF2), 18 (SB), 19 (A).
- Fuses**: PW (RR) Fuse, PW (FL) Fuse, BK (Front Side Under the Front Seat RH).
- Relays and Switches**: BE3, BE4, BE5, BE6, BE7, BE8, BE9, BE10, BE11, BE12, BE13, BE14, BE15, BE16, BE17, BE18, BE19, BE20, BE21, BE22, BE23, BE24, BE25, BE26, BE27, BE28, BE29, BE30, BE31, BE32, BE33, BE34, BE35, BE36, BE37, BE38, BE39, BE40, BE41, BE42, BE43, BE44, BE45, BE46, BE47, BE48, BE49, BE50, BE51, BE52, BE53, BE54, BE55, BE56, BE57, BE58, BE59, BE60, BE61, BE62, BE63, BE64, BE65, BE66, BE67, BE68, BE69, BE70, BE71, BE72, BE73, BE74, BE75, BE76, BE77, BE78, BE79, BE80, BE81, BE82, BE83, BE84, BE85, BE86, BE87, BE88, BE89, BE90, BE91, BE92, BE93, BE94, BE95, BE96, BE97, BE98, BE99, BE100.



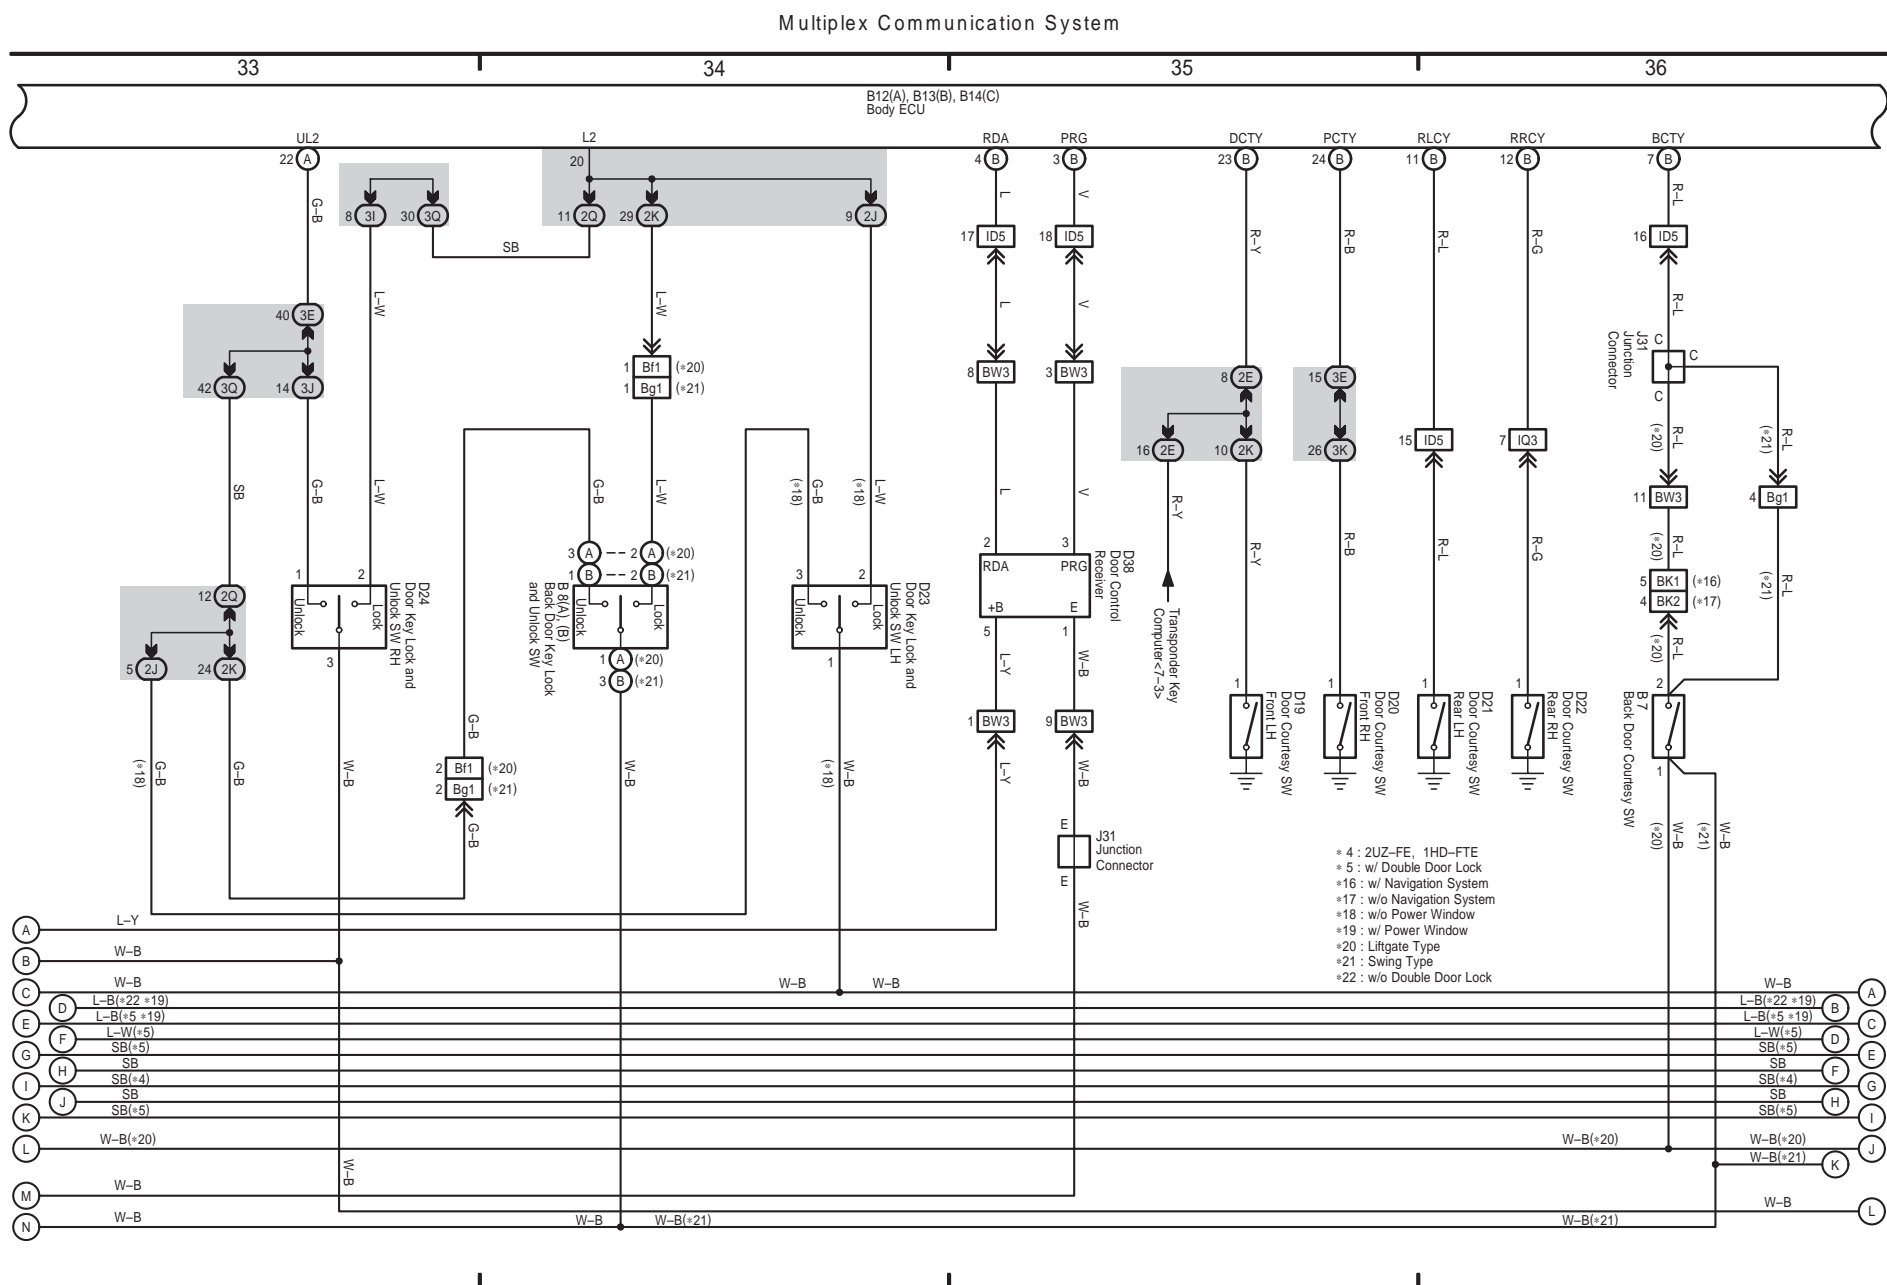


## Multiplex Communication System

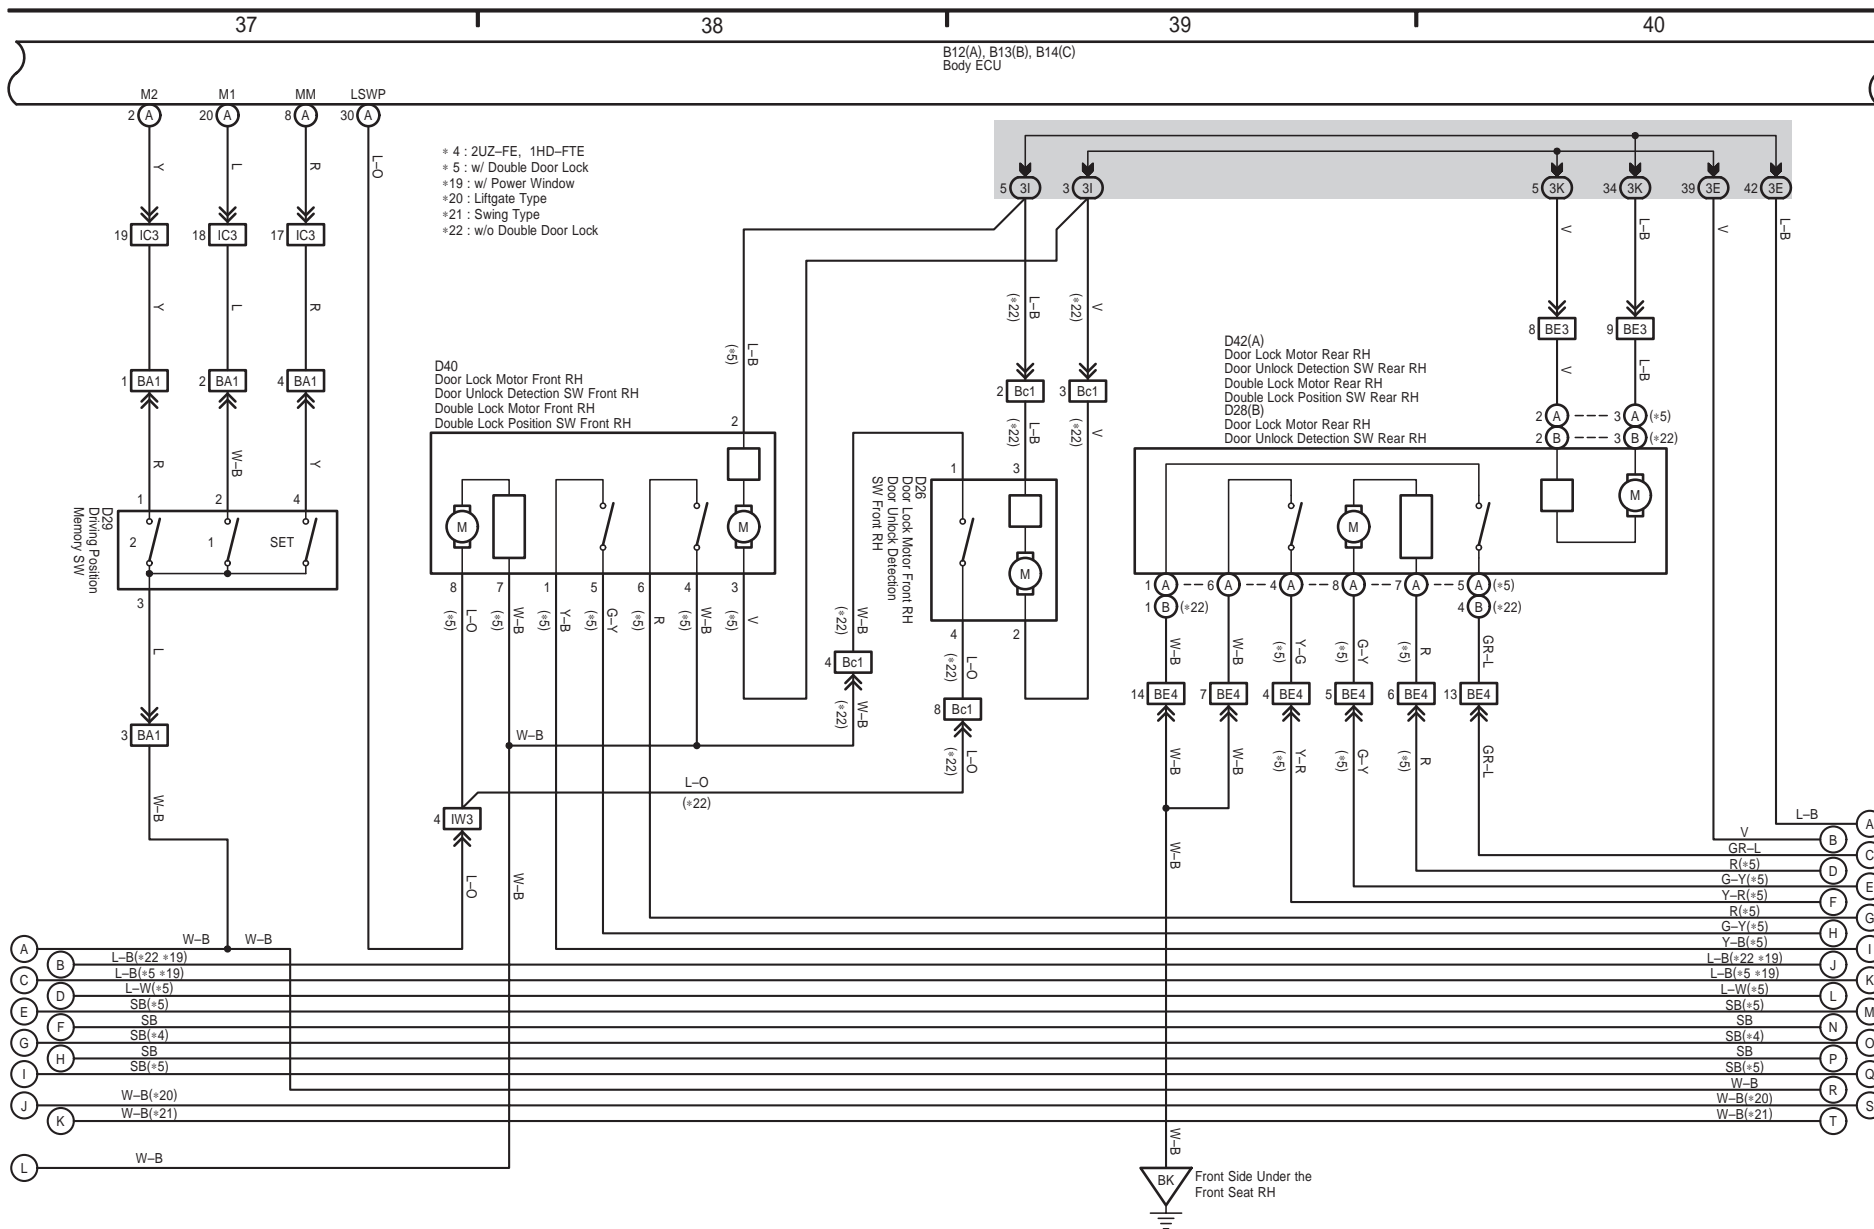

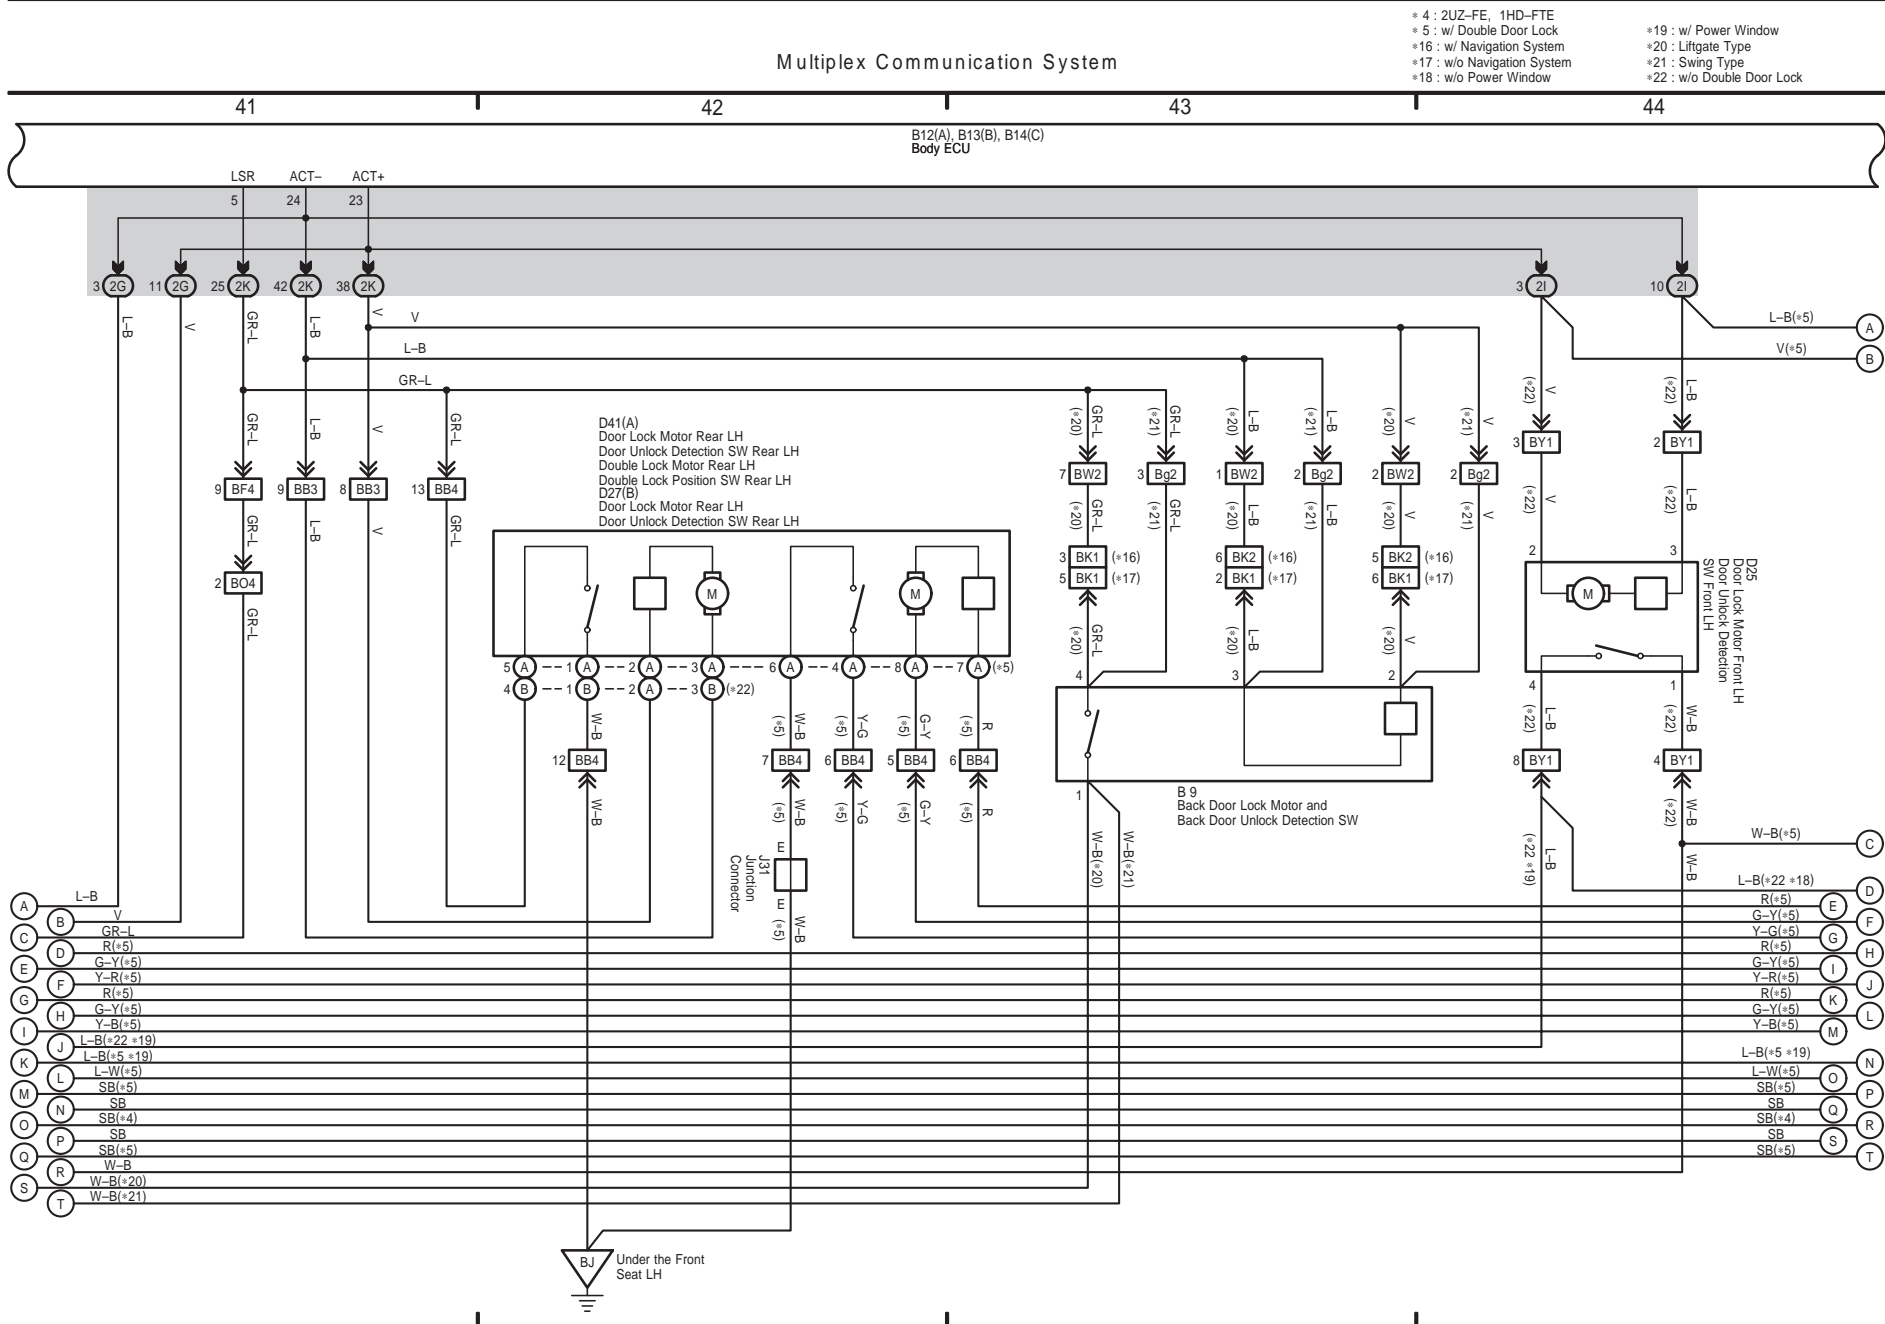

## Multiplex Communication System

\* 4 : 2UZ-FE, 1HD-FTE  
 \* 5 : w/ Double Door Lock  
 \*18 : w/o Power Window  
 \*19 : w/ Power Window  
 \*22 : w/o Double Door Lock

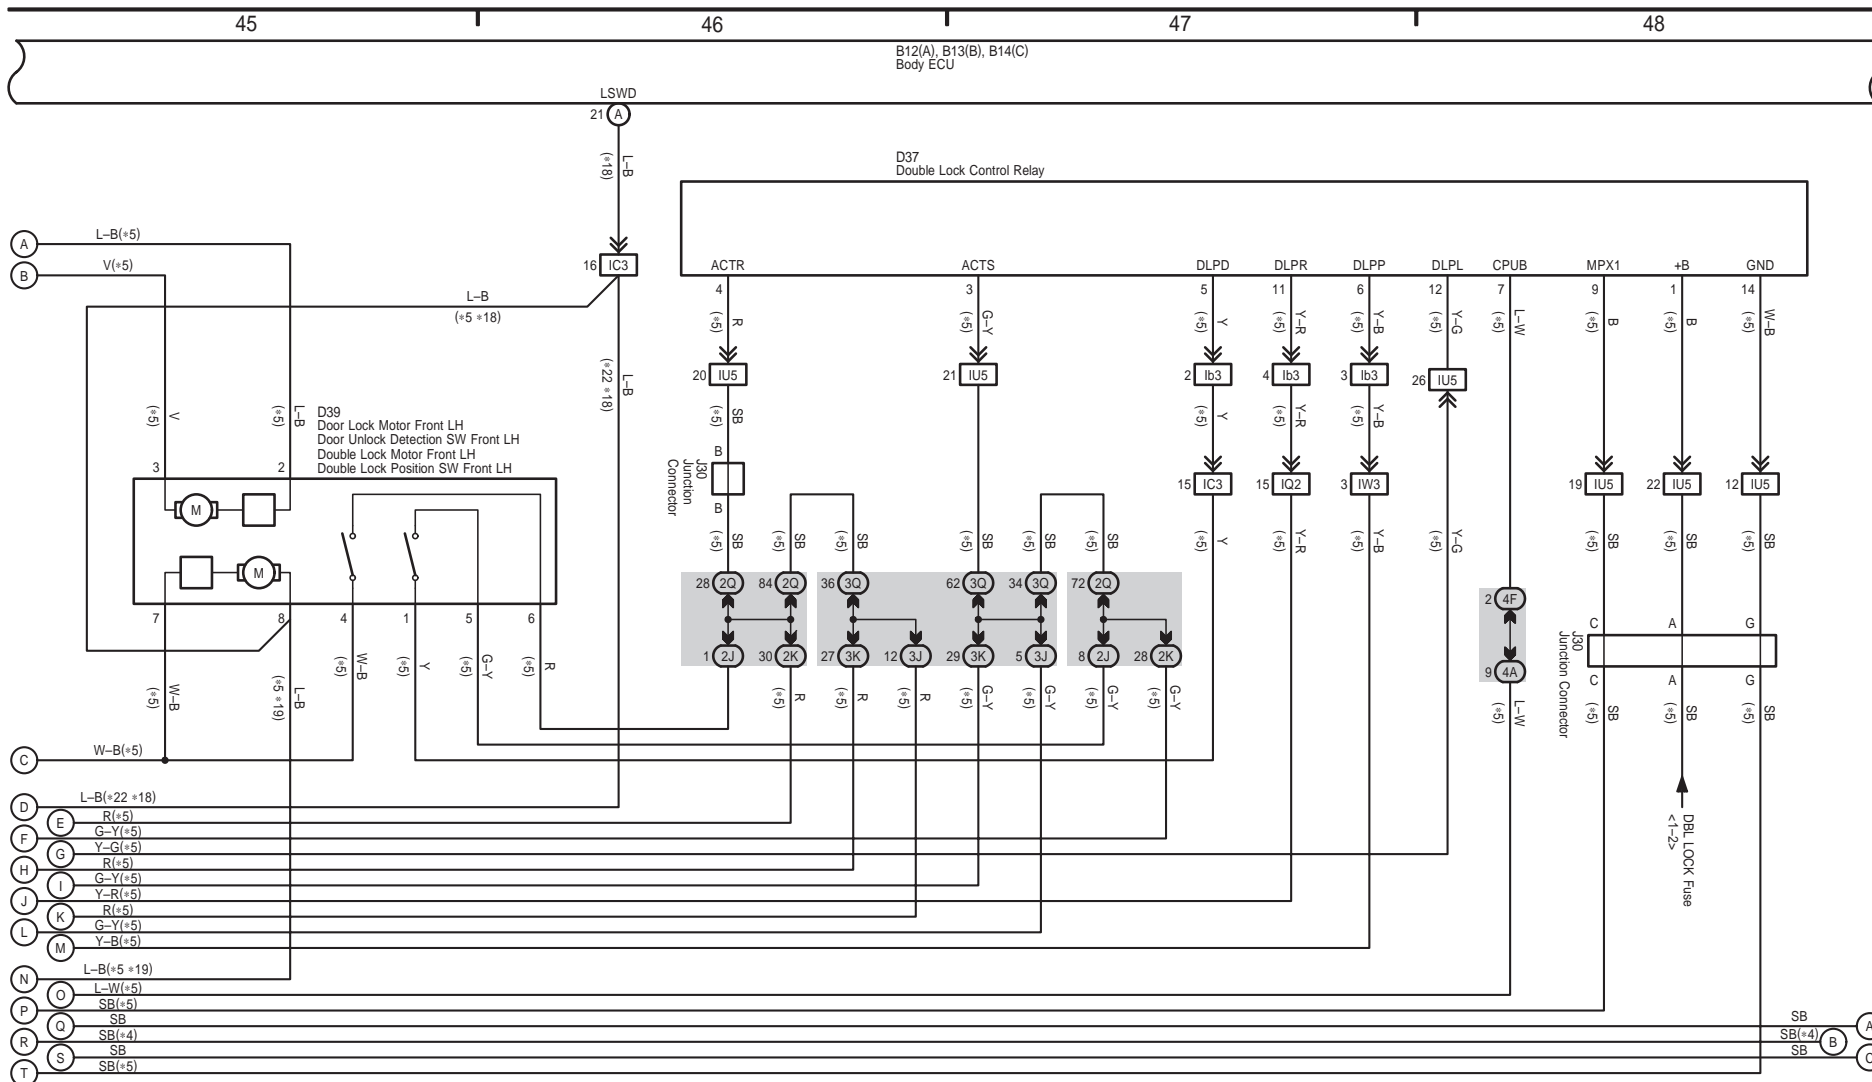

(Cont. next page)

## 1 LAND CRUISER (LHD) (Cont' d)

