

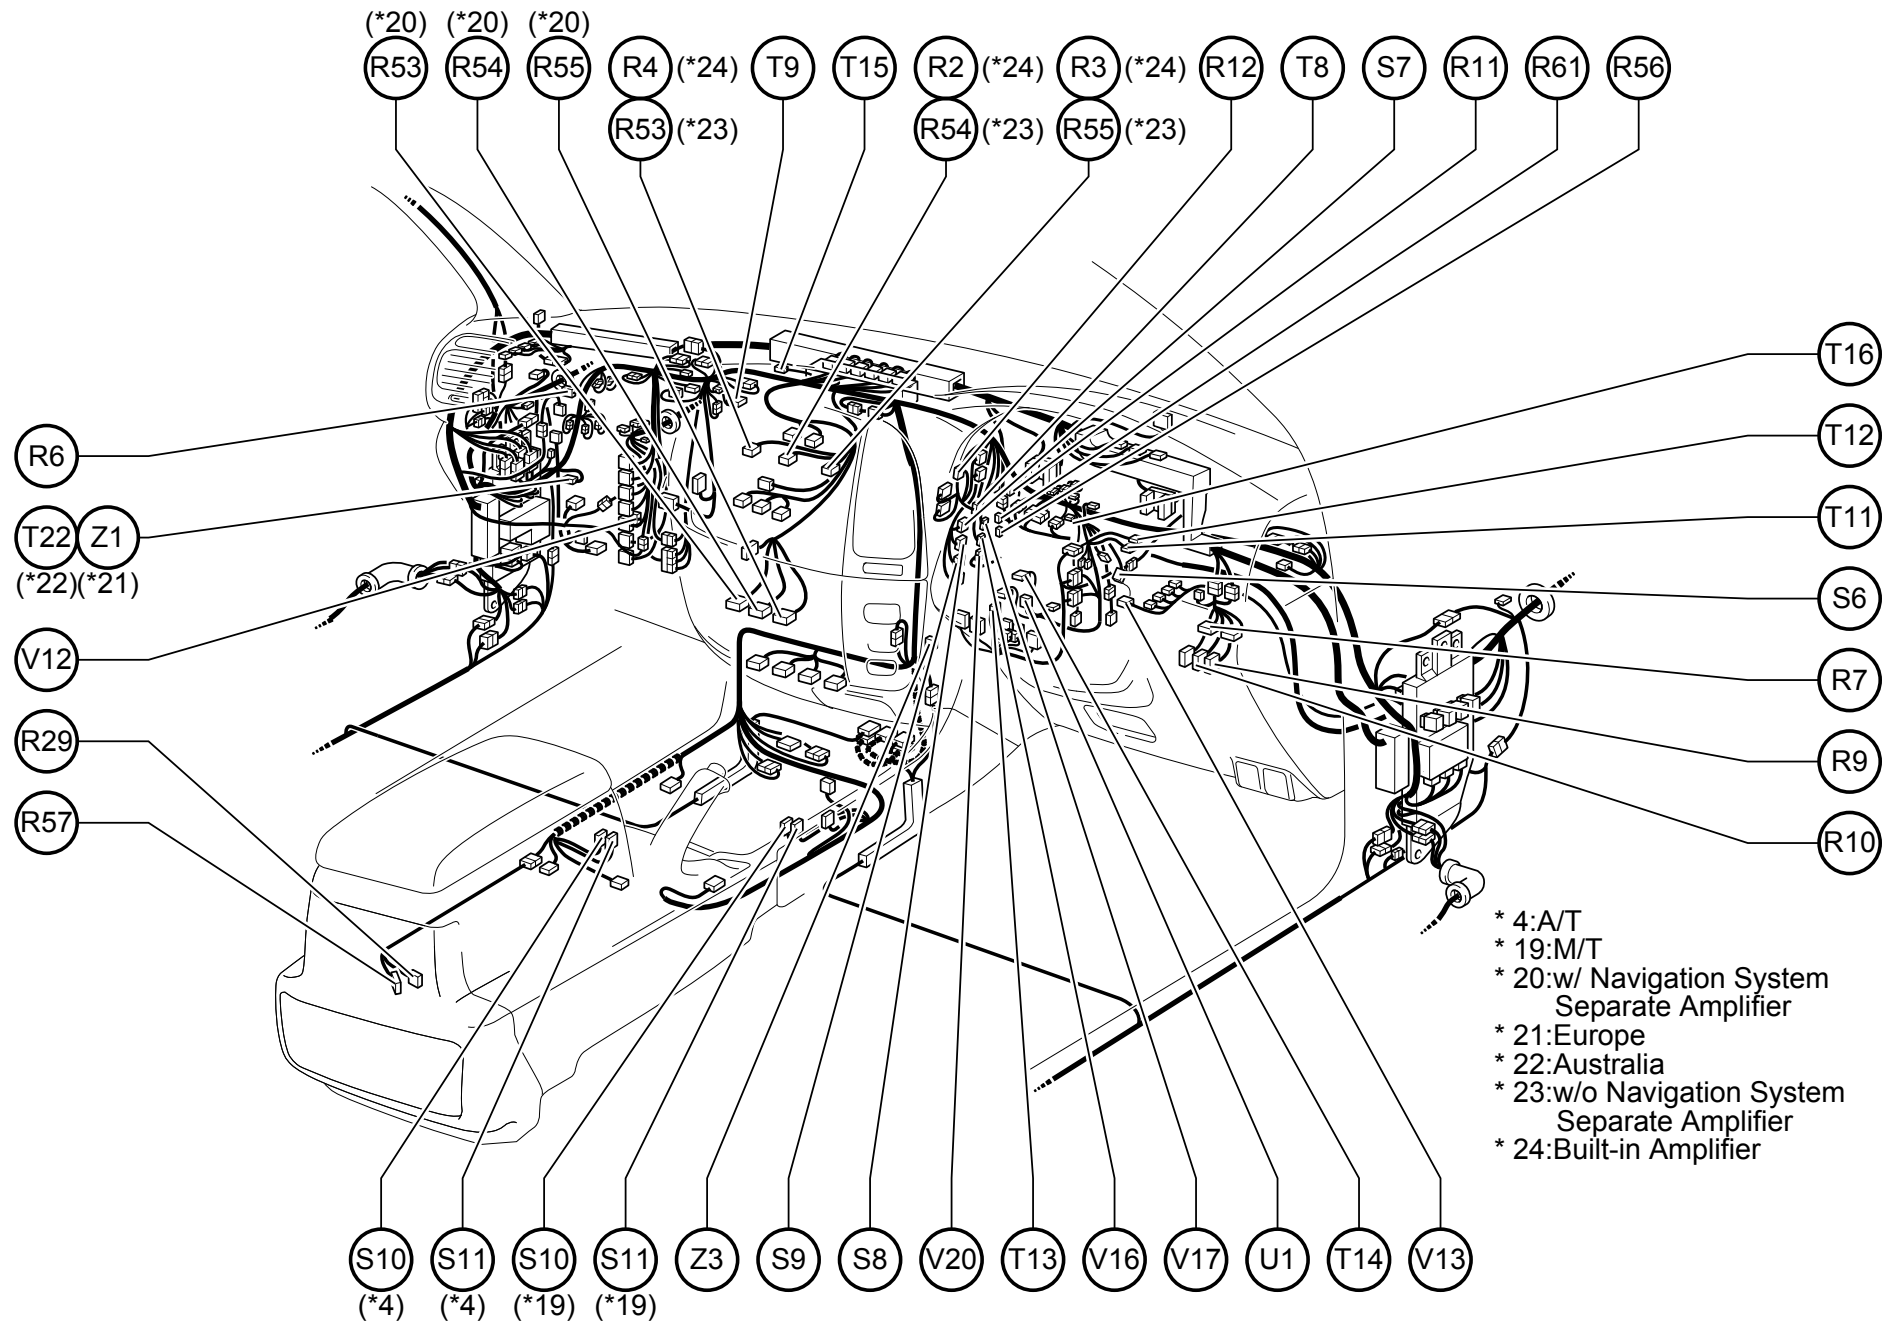
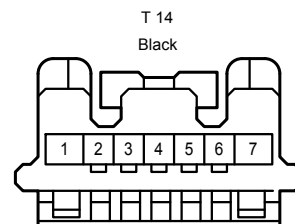
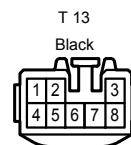
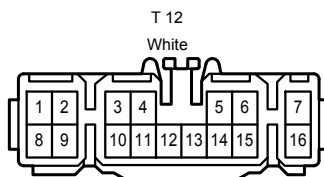
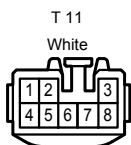
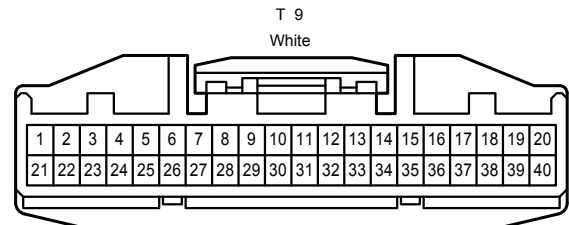
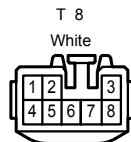
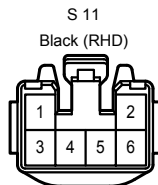
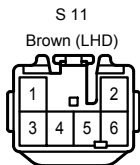
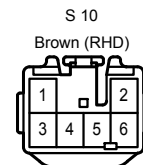
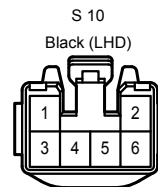
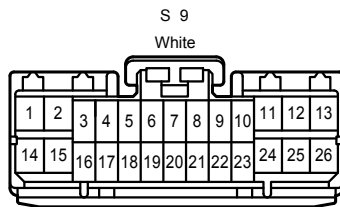
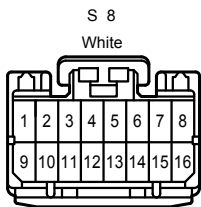
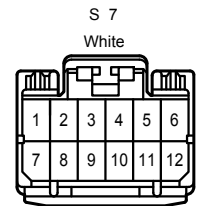
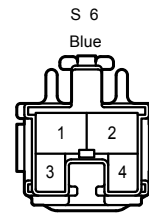
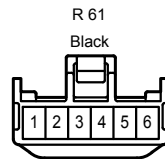
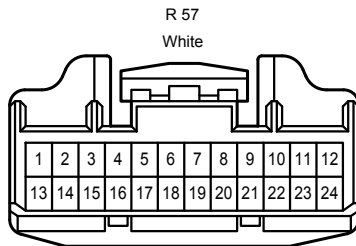

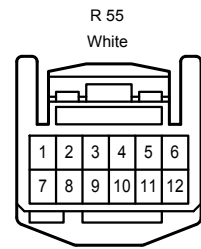
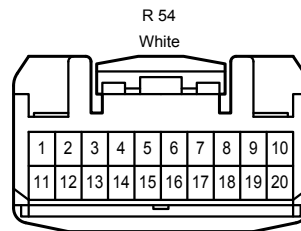
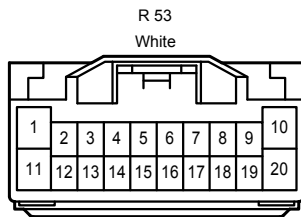
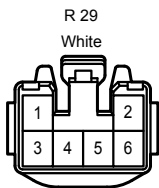

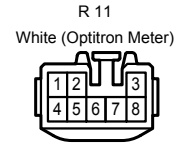
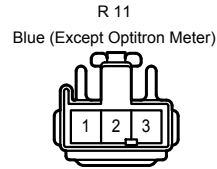
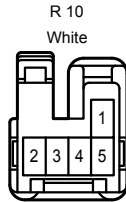
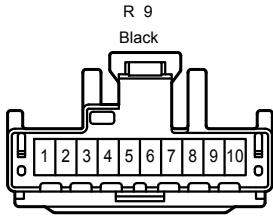
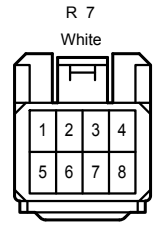
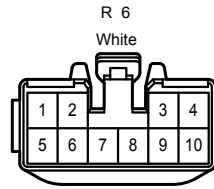
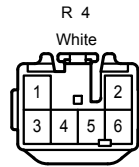


Position of Parts in Instrument Panel <RHD>

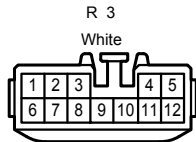

R	2	Radio and Player
R	3	Radio and Player
R	4	Radio and Player
R	6	Rear Diff. Lock Control ECU
R	7	Rear Fog Light SW
R	9	Remote Control Mirror SW
R	10	Remote Control Mirror SW
R	11	Rheostat
R	12	Room Temp. Sensor (Front)
R	29	Rear Heater Control SW
R	53	Radio and Player
R	54	Radio and Player
R	55	Radio and Player
R	56	Rear Diff. Lock Control SW
R	57	Rear Seat Audio Controller
R	61	Roll Sensing of Curtain Shield Airbags Cut Off SW
S	6	Stop Light SW
S	7	Suspension Control ECU
S	8	Suspension Control ECU
S	9	Suspension Control ECU
S	10	Seat Heater SW (Driver's Seat)
S	11	Seat Heater SW (Front Passenger's Seat)
T	8	Telescopic Motor
T	9	Theft Deterrent ECU
T	11	Tilt and Telescopic ECU
T	12	Tilt and Telescopic ECU
T	13	Tilt Motor
T	14	Ignition Key Cylinder Light , Transponder Key Amplifier
T	15	Transponder Key Computer
T	16	Turn Signal Flasher
T	22	TVSS ECU
U	1	Unlock Warning SW
V	12	Viscous Heater Amplifier
V	13	VSC Warning Buzzer
V	16	VGRS ECU
V	17	VGRS ECU
V	20	VGRS Actuator , VGRS ECU
Z	1	Option Connector (Glass Breakage Sensor)
Z	3	Option Connector (Radar Sensor)

Position of Parts in Instrument Panel <RHD>

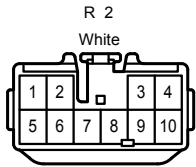

Position of Parts in Instrument Panel <RHD>

