

REMOVAL


1. DRAIN SUSPENSION FLUID AHC

- Connect the hose to the bleeder plug for height control accumulator and loosen the bleeder plug.
- After the fluid pressure has dropped and oil has drained out, tighten the bleeder plug and remove the hose.

Torque: 6.9 N·m (70 kgf·cm, 61 in·lbf)

2. REMOVE FRONT LH DAMPING FORCE CONTROL ACTUATOR (See page SA-340)

3. DISCONNECT CONNECTOR

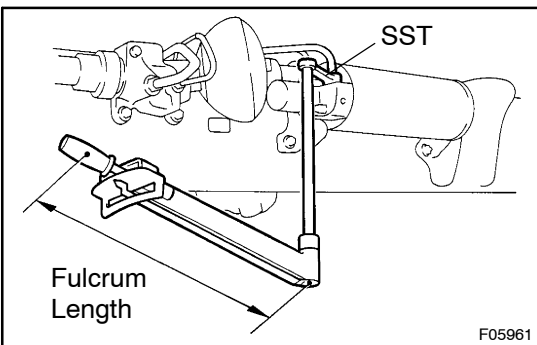

4. REMOVE HEIGHT CONTROL ACCUMULATOR

- Using SST, disconnect the inlet fluid line from the height control accumulator.


SST 09631-22020

Torque: 24 N·m (245 kgf·cm, 18 ft·lbf)

HINT:

At the time of installation, please refer to the following items.

- Use a torque wrench with a fulcrum length of 300 mm (11.81 in.).
- This torque value is effective in case that SST is parallel to a torque wrench.

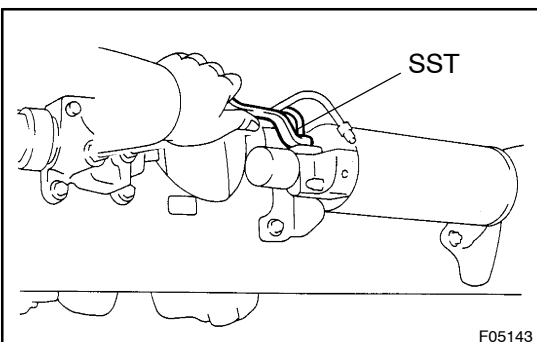

- Using SST, disconnect the outlet fluid line from the height control accumulator.

SST 09751-36011

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

- Remove the nut, 3 bolts and height control accumulator.

Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)