


## Position of Parts in Engine Compartment

[LHD : 2UZ-FE]

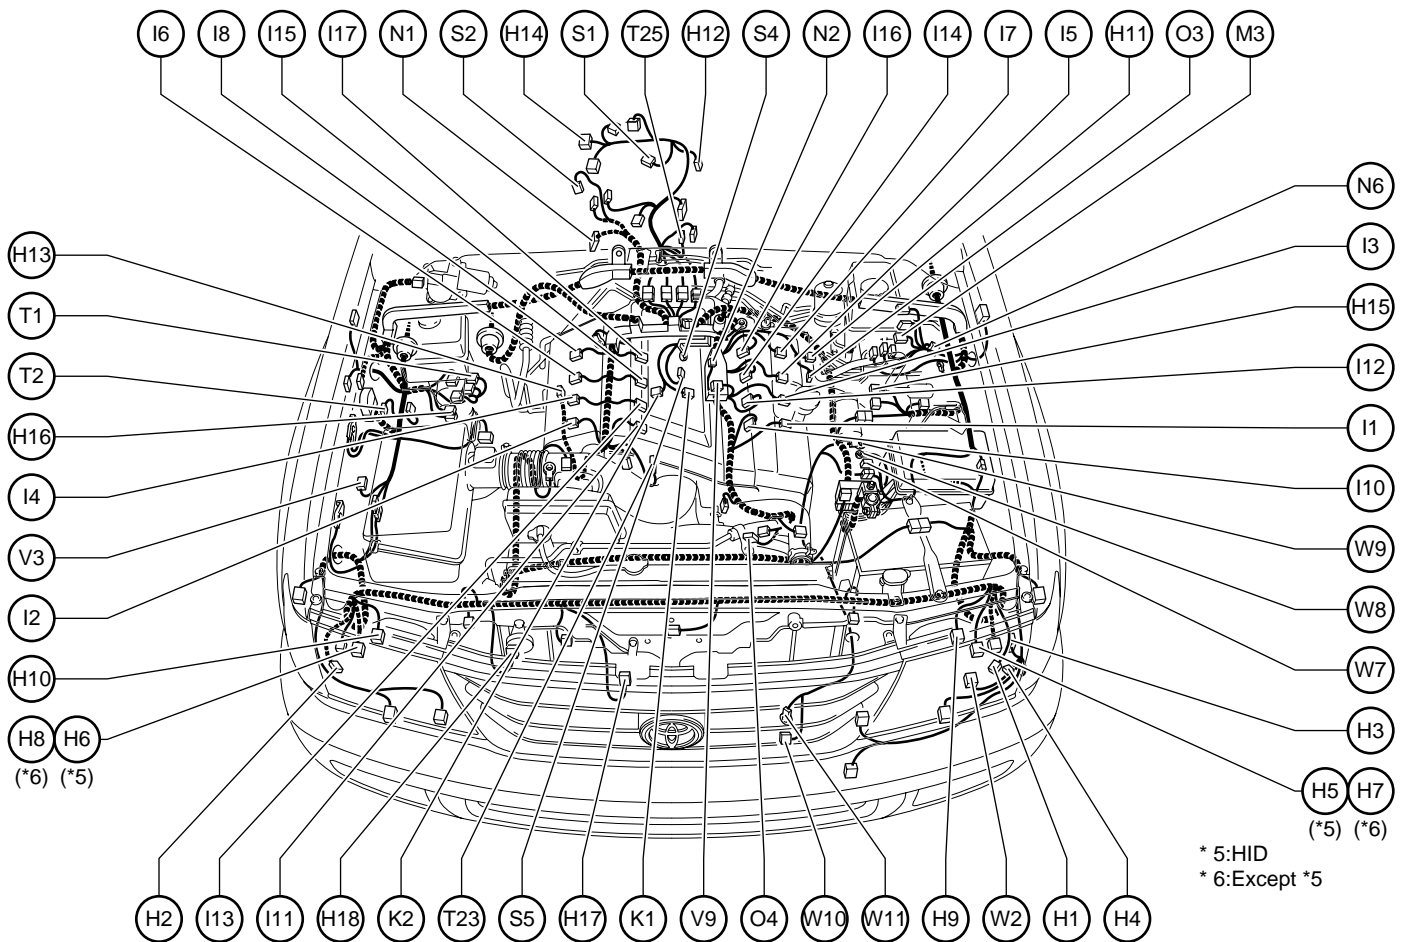

H 1 Headlight Beam Level Control Actuator LH  
 H 2 Headlight Beam Level Control Actuator RH  
 H 3 Headlight Cleaner Control Relay  
 H 4 Headlight Cleaner Motor  
 H 5 Headlight Control ECU LH  
 H 6 Headlight Control ECU RH  
 H 7 Headlight LH (High)  
 H 8 Headlight RH (High)  
 H 9 Headlight LH (Low)  
 H 10 Headlight RH (Low)  
 H 11 Heated Oxygen Sensor (Bank 1 Sensor 1)  
 H 12 Heated Oxygen Sensor (Bank 1 Sensor 2)  
 H 13 Heated Oxygen Sensor (Bank 2 Sensor 1)  
 H 14 Heated Oxygen Sensor (Bank 2 Sensor 2)  
 H 15 Height Control Sensor Front LH  
 H 16 Height Control Sensor Front RH  
 H 17 Horn LH  
 H 18 Horn RH

I 1 Ignition Coil and Igniter No.1  
 I 2 Ignition Coil and Igniter No.2  
 I 3 Ignition Coil and Igniter No.3  
 I 4 Ignition Coil and Igniter No.4  
 I 5 Ignition Coil and Igniter No.5  
 I 6 Ignition Coil and Igniter No.6  
 I 7 Ignition Coil and Igniter No.7  
 I 8 Ignition Coil and Igniter No.8  
 I 10 Injector No.1  
 I 11 Injector No.2  
 I 12 Injector No.3  
 I 13 Injector No.4  
 I 14 Injector No.5  
 I 15 Injector No.6  
 I 16 Injector No.7  
 I 17 Injector No.8

K 1 Knock Sensor 1  
 K 2 Knock Sensor 2  
 M 3 Master Cylinder Pressure Sensor  
 N 1 A/T Indicator Light SW  
     Neutral Start SW  
 N 2 Noise Filter (Ignition)  
 N 6 Noise Filter (ABS)  
 O 3 Oil Level Sensor  
 O 4 Oil Pressure Sender  
 S 1 Speed Sensor (Combination Meter)  
 S 2 Speed Sensor (ECT)  
 S 4 Starter  
 S 5 Starter  
 T 1 Temp. Sensor (AHC)  
 T 2 Theft Deterrent Horn  
 T 23 Throttle Control Motor and Sensor  
 T 25 Turbine Speed Sensor  
 V 3 Variable Resistor  
 V 9 VSV (EVAP)  
 W 2 Washer Motor  
 W 7 Winch Main Relay  
 W 8 Winch Main Relay  
 W 9 Winch Main Relay  
 W 10 Winch Motor and Magnetic SW  
 W 11 Winch Motor and Magnetic SW

\* 5:HID  
 \* 6:Except \*5