


## REMOVAL

### 1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all coolant.

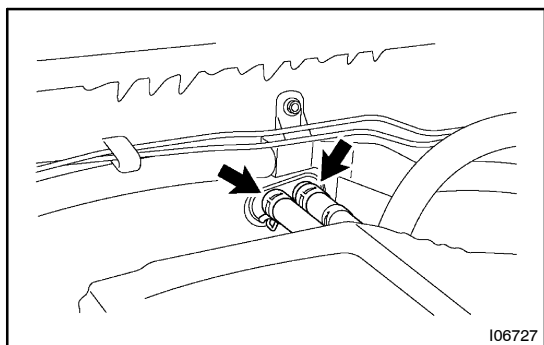

### 2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- Using pliers, grip the claws of the hose clip and slide the clip along the hose.
- Disconnect the water hoses from heater radiator pipes.

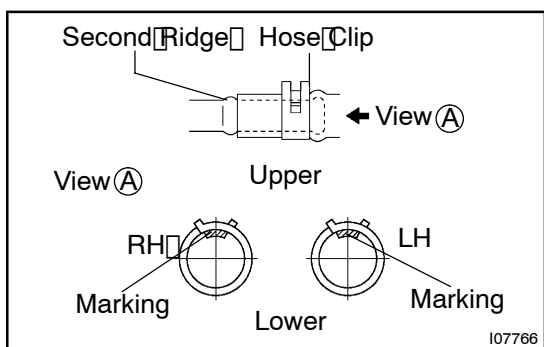

HINT:

At the time of installation, please refer to the following items.


- Push the water hose onto the heater radiator pipe as far as second ridge on the pipe.
- Install a hose clip in the position as shown in the illustration.

### 3. REMOVE INSTRUMENT PANEL AND REINFORCEMENT

(See page [BO-127](#))


### 4. REMOVE FRONT COOLING UNIT

(See page [AC-38](#))

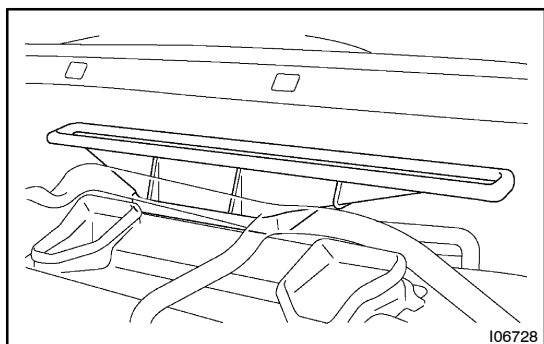

### 5. REMOVE HEATER UNIT

- Remove the lower defroster nozzle.

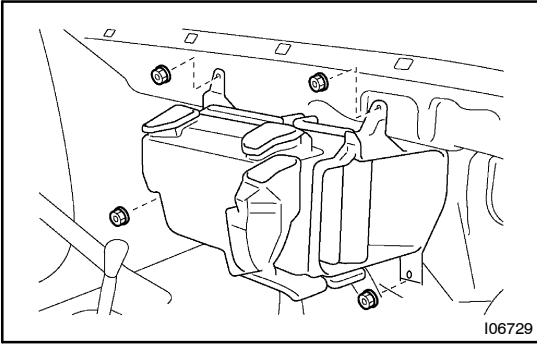

- (b) Disconnect the connector.
- (c) Remove the 4 nuts and heater unit.