


(C)

20A
MAIN

The diagram shows a 20A MAIN switch connected to a battery and a load. The battery is represented by a series of cells. The load is represented by a rectangle with a dashed line inside. The switch is a simple switch symbol.

Engine Control and Fuel Tank Changeover (2UZ-FE)

- * 1 : w/ Sub Tank
- * 2 : w/o Sub Tank
- * 3 : Europe, Saudi Arabia, Peru
- * 4 : Middle East Except Saudi Arabia, Peru

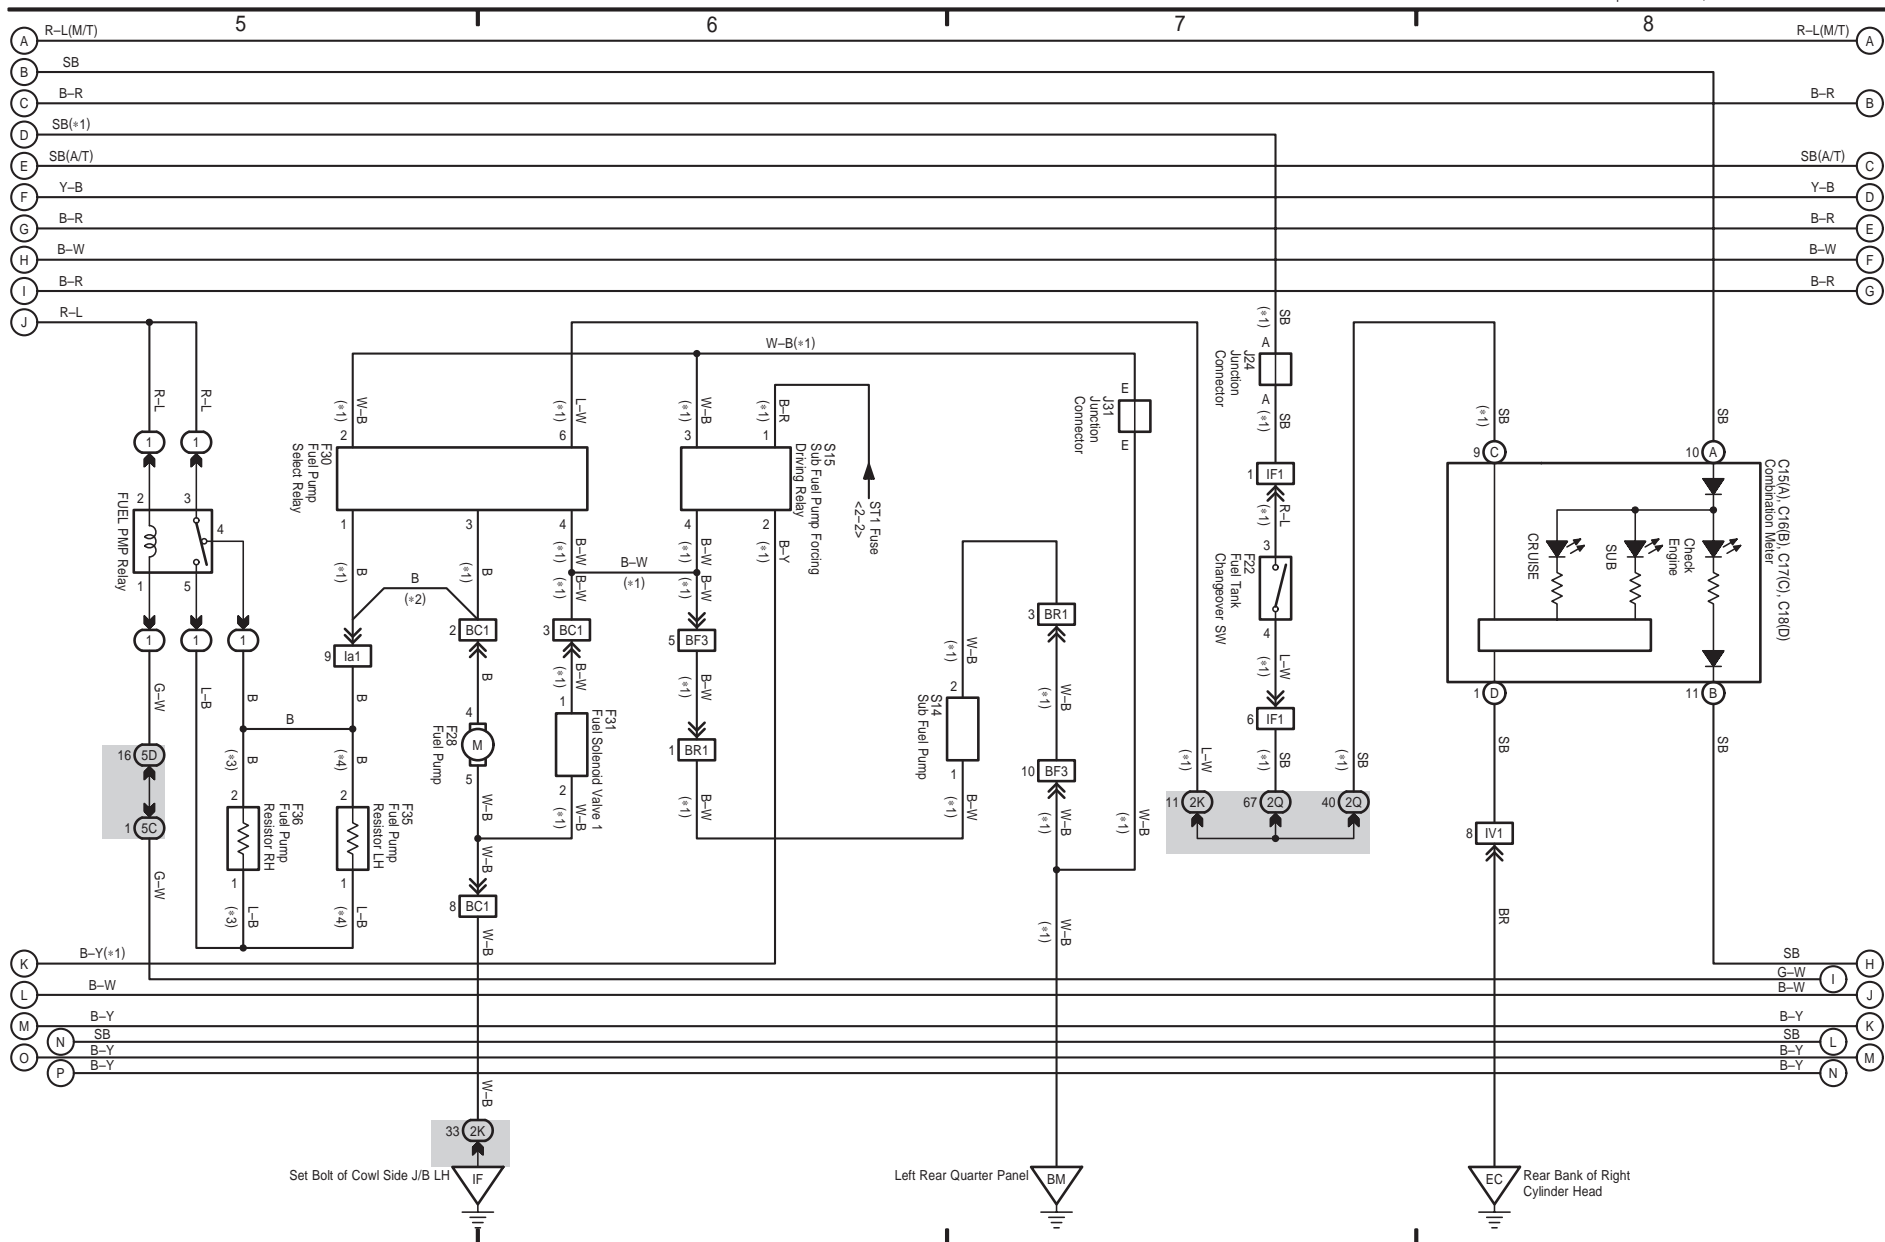


(Cont. next page)


8 LAND CRUISER (LHD) (Cont' d)

Engine Control and Fuel Tank Changeover (2UZ-FE)

* 3 : Europe, Saudi Arabia, Peru
* 5 : Except *3

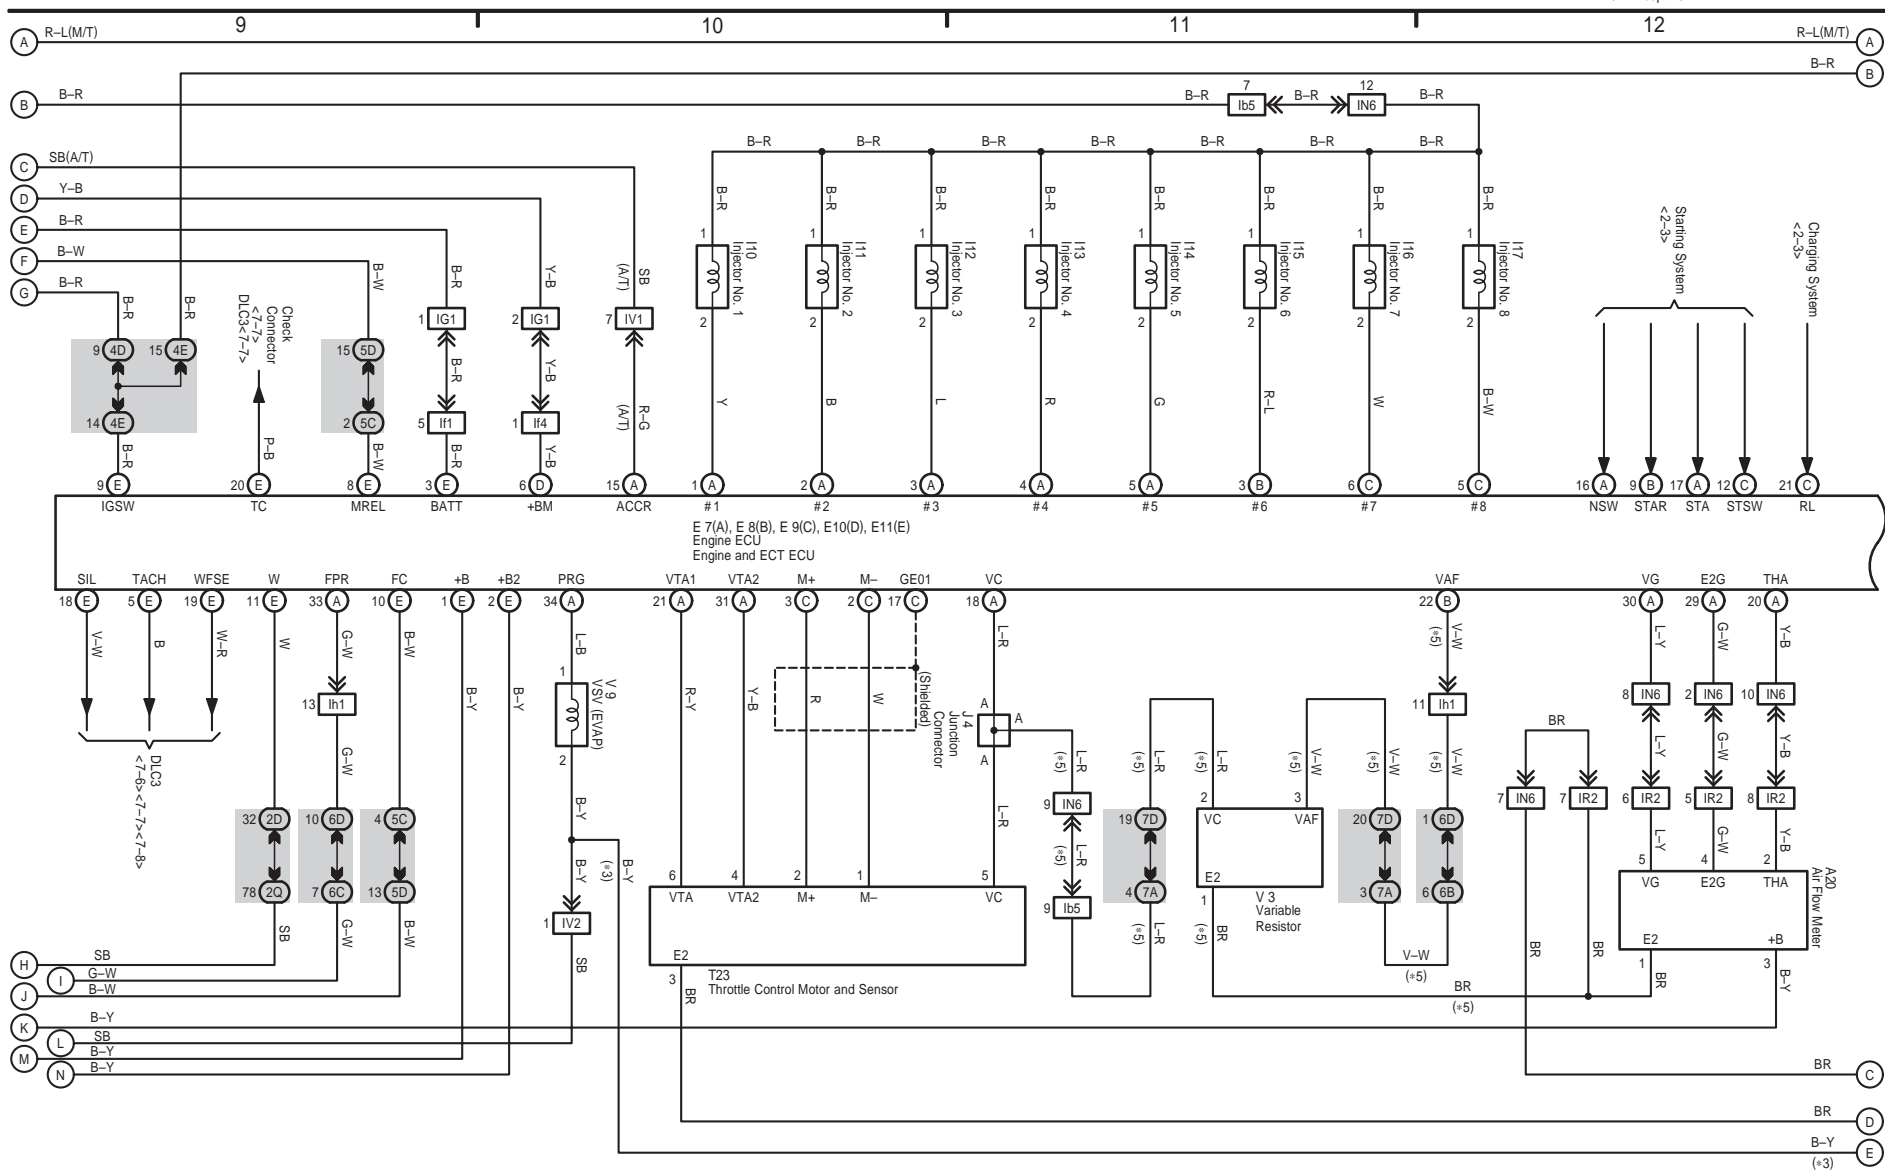

* 3 : Europe, Saudi Arabia, Peru

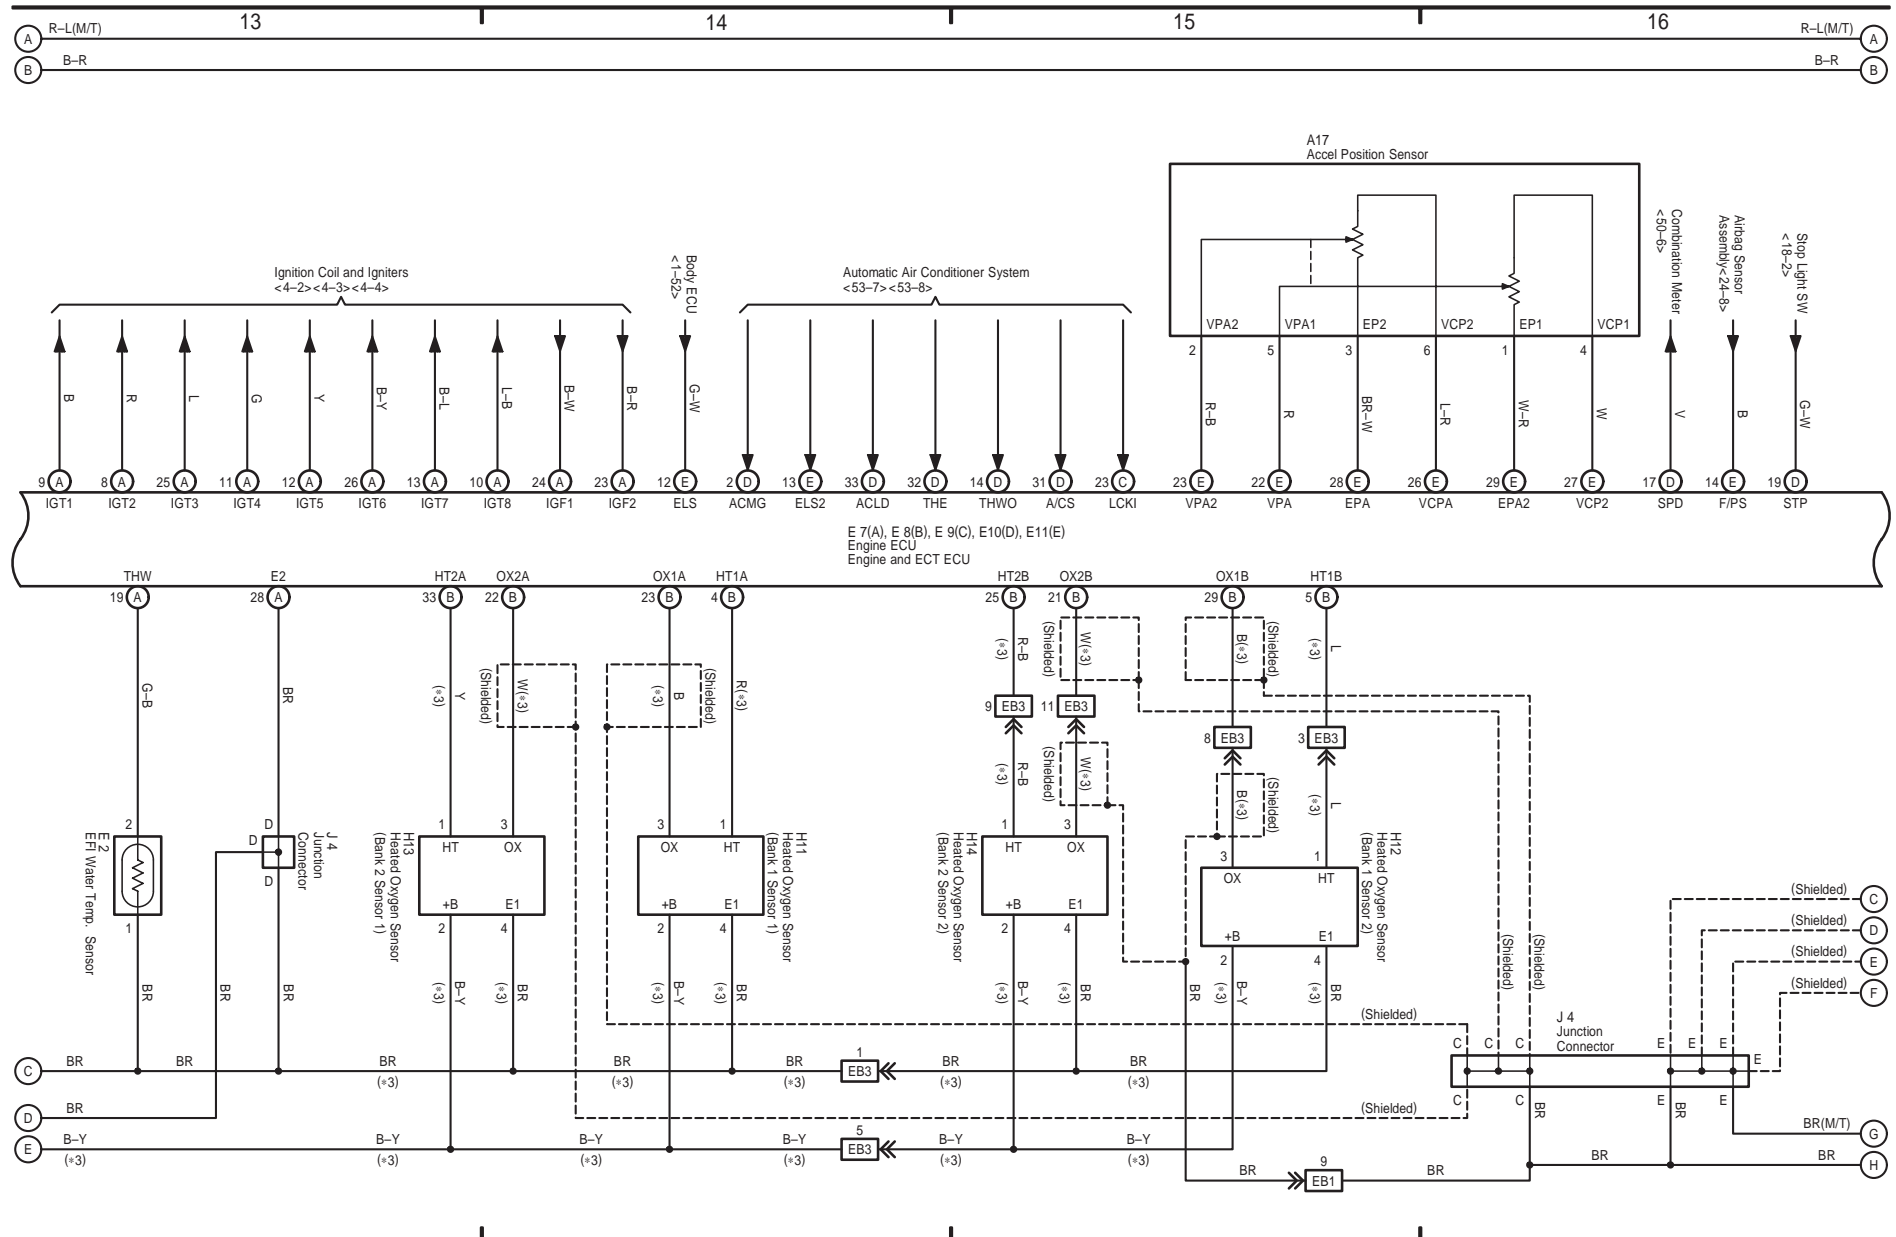

8 LAND CRUISER (LHD) (Cont' d)

