


Connector Joining Wire Harness and Wire Harness

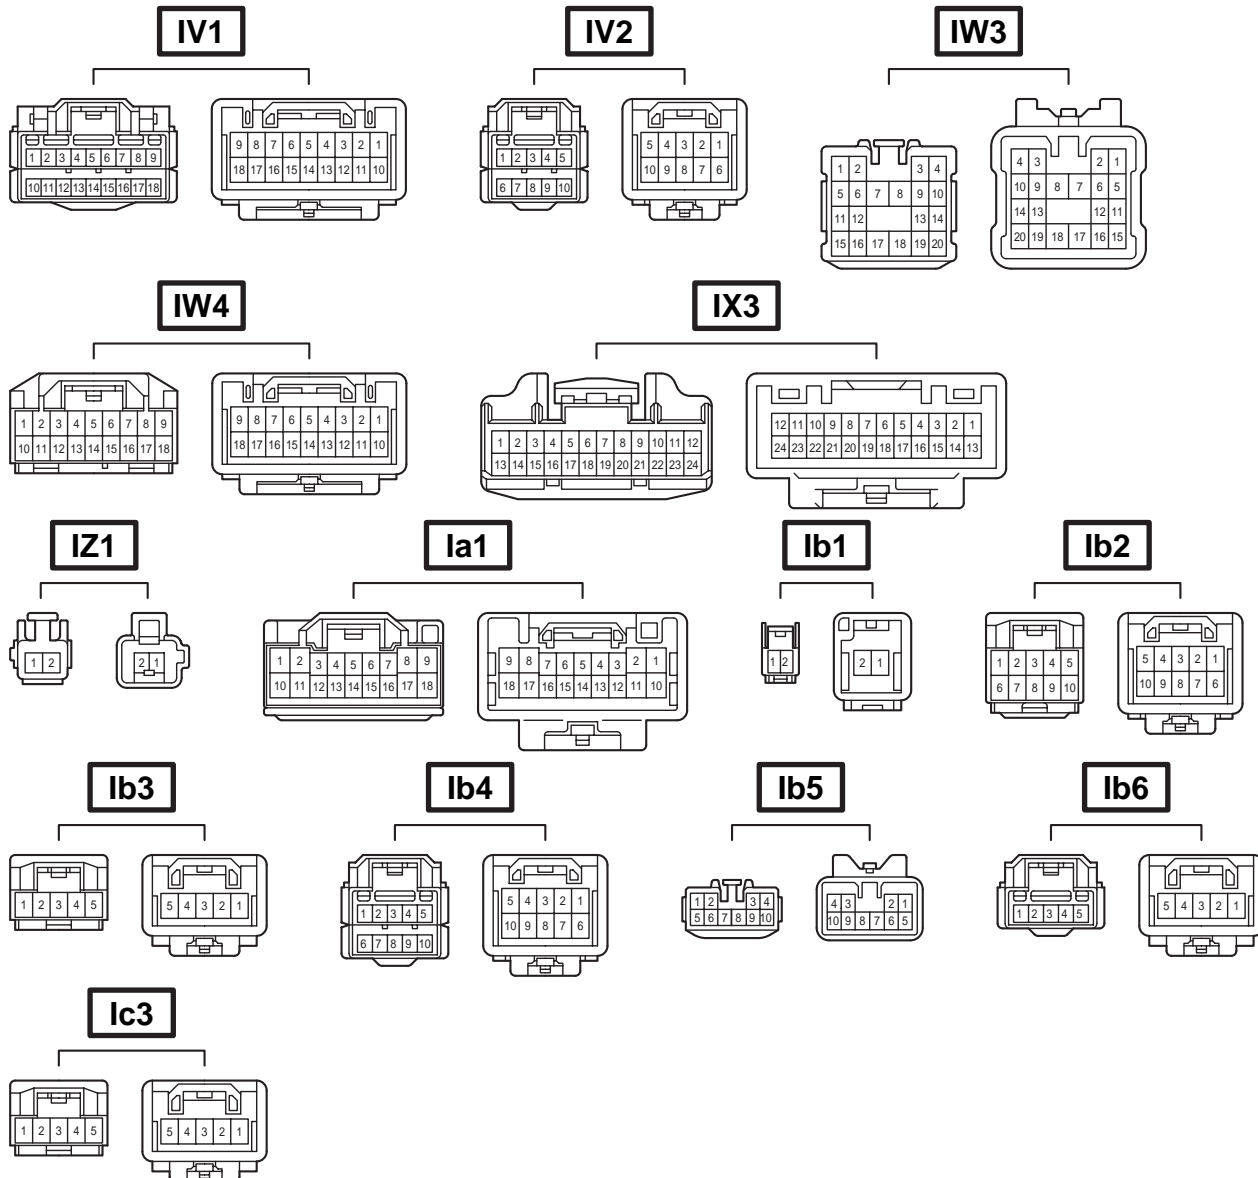

Code	Joining Wire Harness and Wire Harness (Connector Location)
IV1	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IV2	
IW3	Front Door RH Wire and Dash Wire (Right Kick Panel)
IW4	
IX3	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IZ1	Dash Wire and Sensor Wire (Behind the Combination Meter)
Ia1	Engine Room No.2 Wire and Floor No.1 Wire (Left Kick Panel)
Ib1	Dash Wire and Dash Wire (Behind the Combination Meter)
Ib2	
Ib3	
Ib4	
Ib5	
Ib6	
Ic3	Dash Wire and Dash Wire (Behind the Center Panel)