



# STARTER COMPONENTS

ST0EG-01

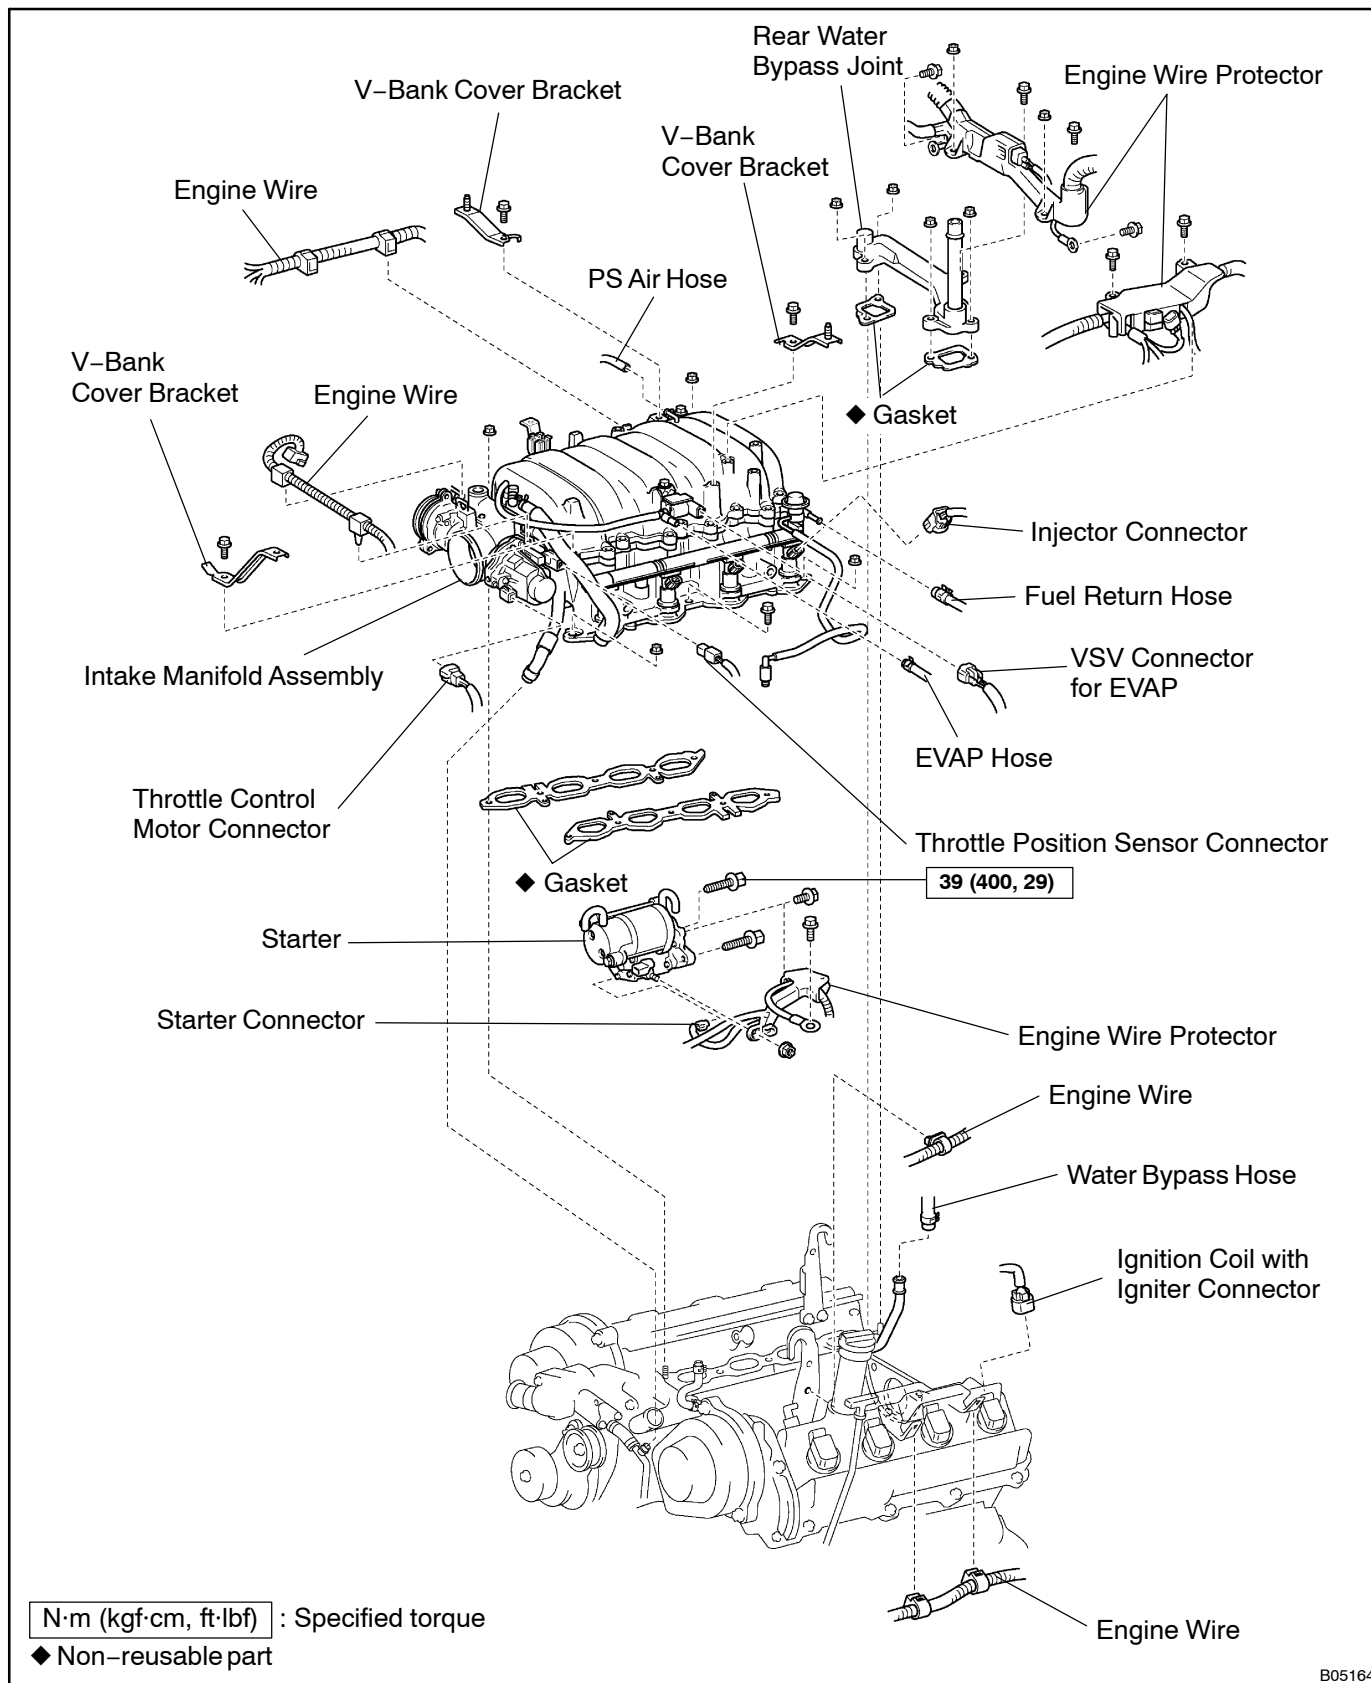


B05164

1.4 kW

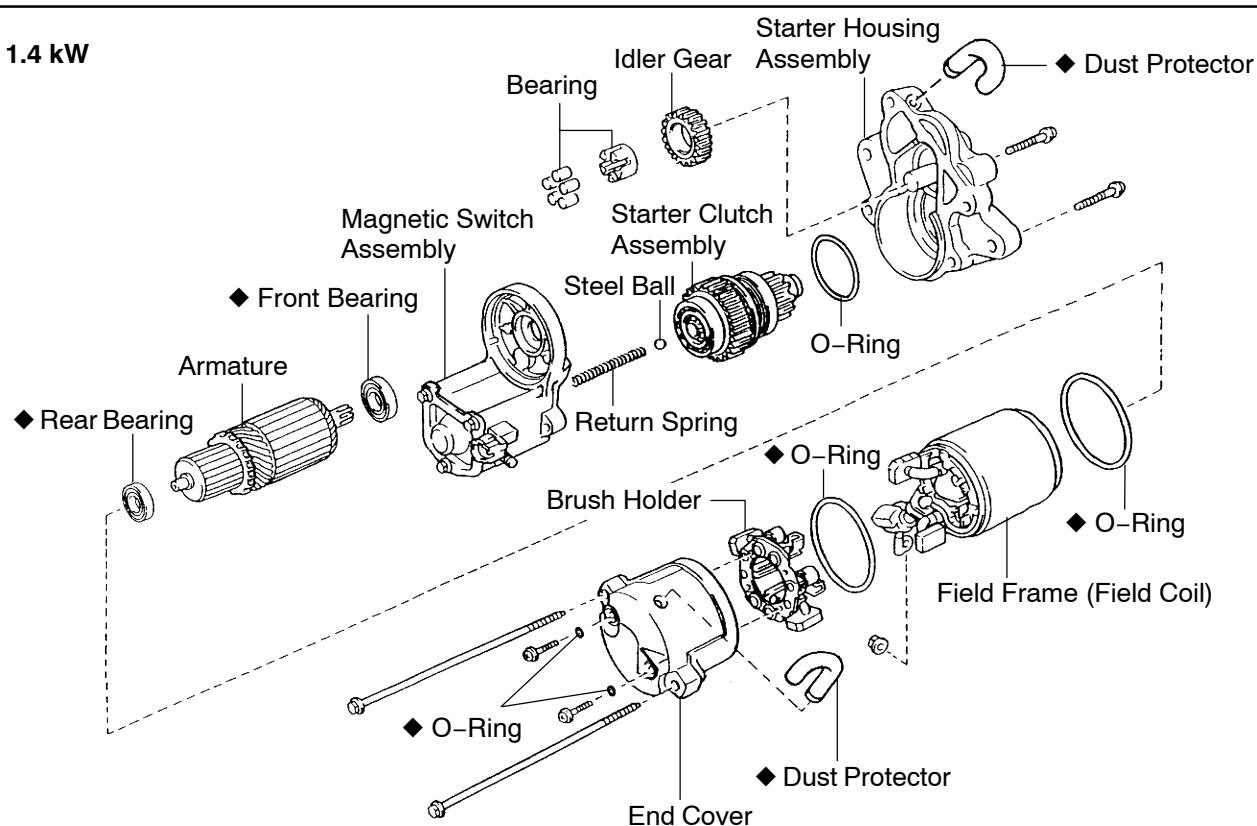


### Magnetic Switch Assembly

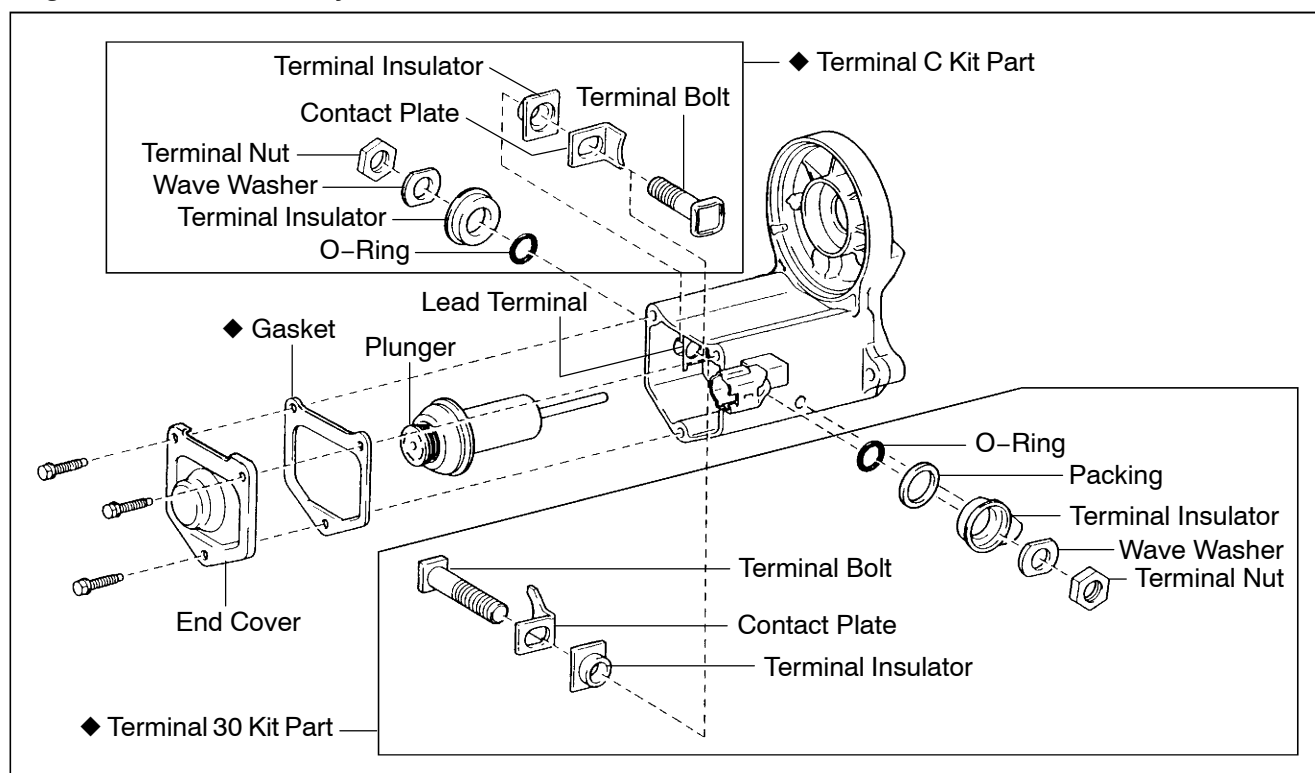


◆ Non-reusable part

B04888

2.0 kW

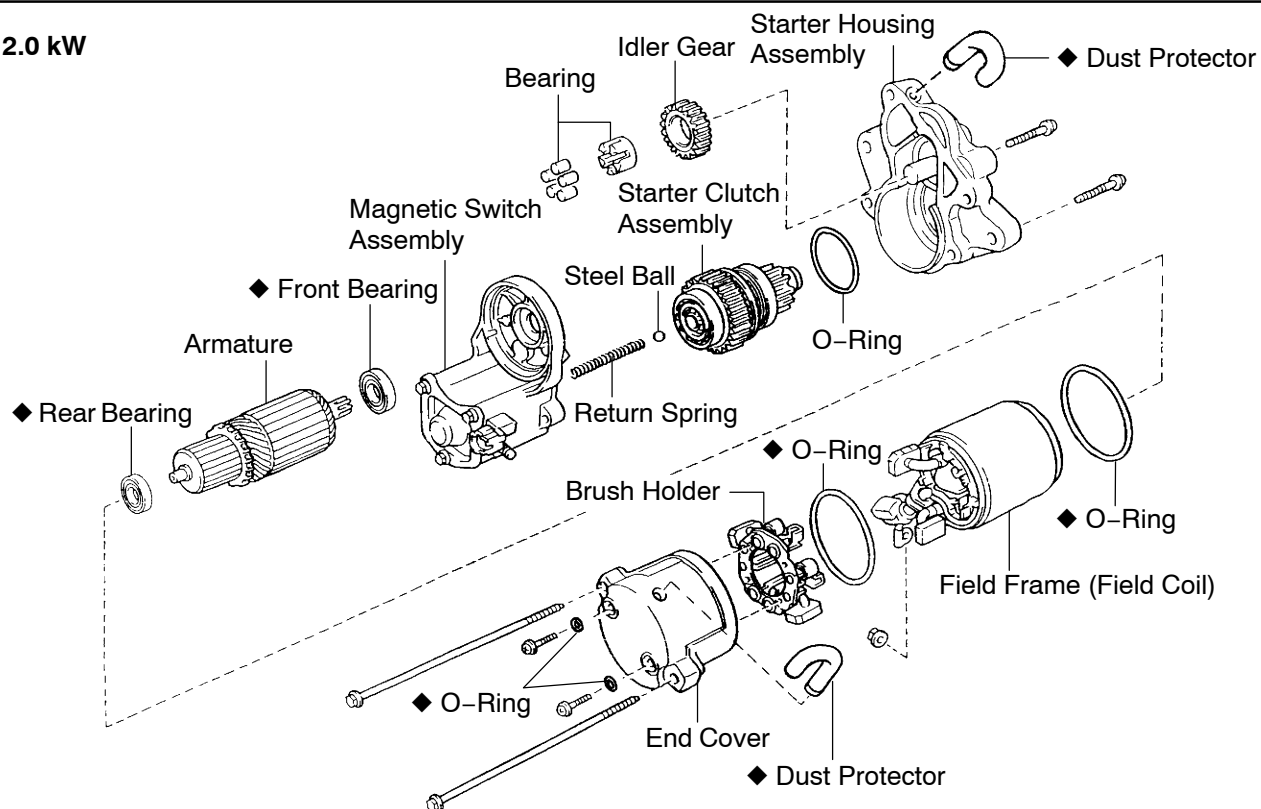

### Magnetic Switch Assembly

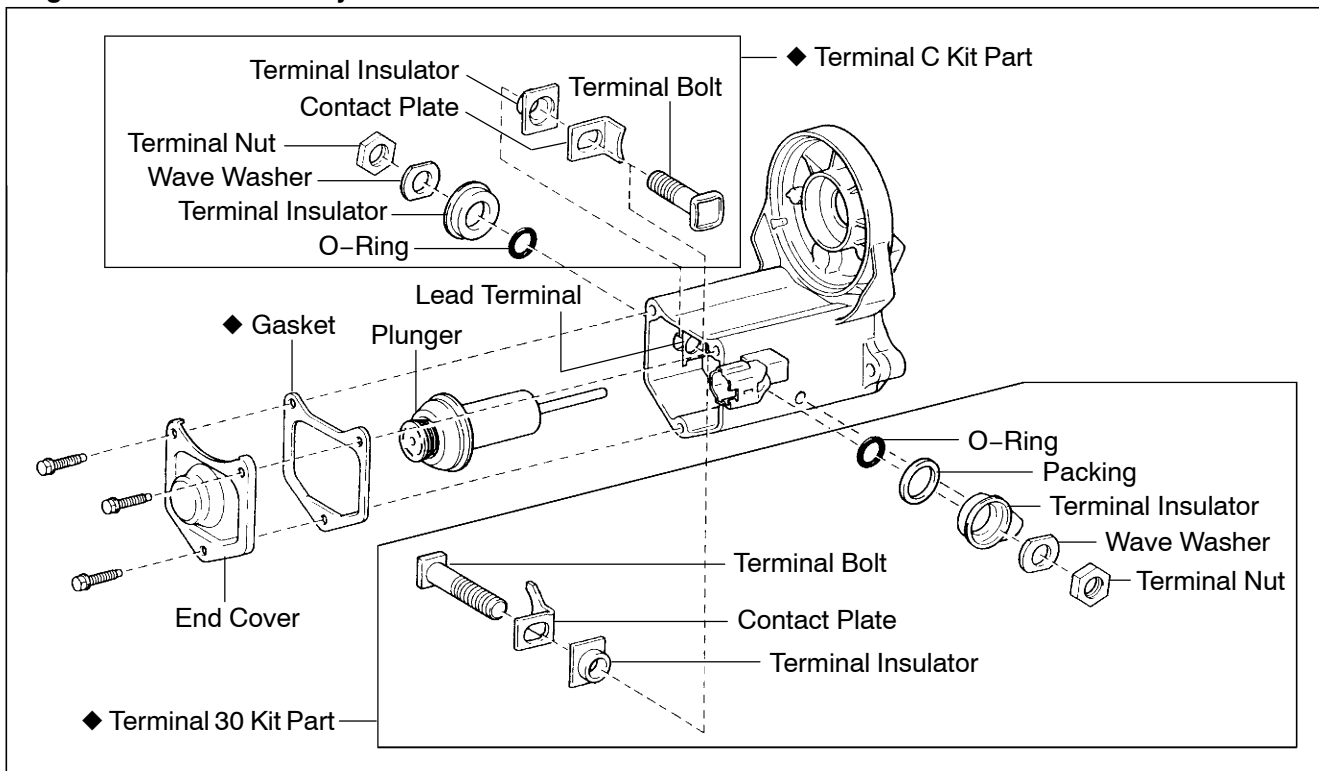

◆ Non-reusable part

B04547