


## Connector Joining Wire Harness and Wire Harness

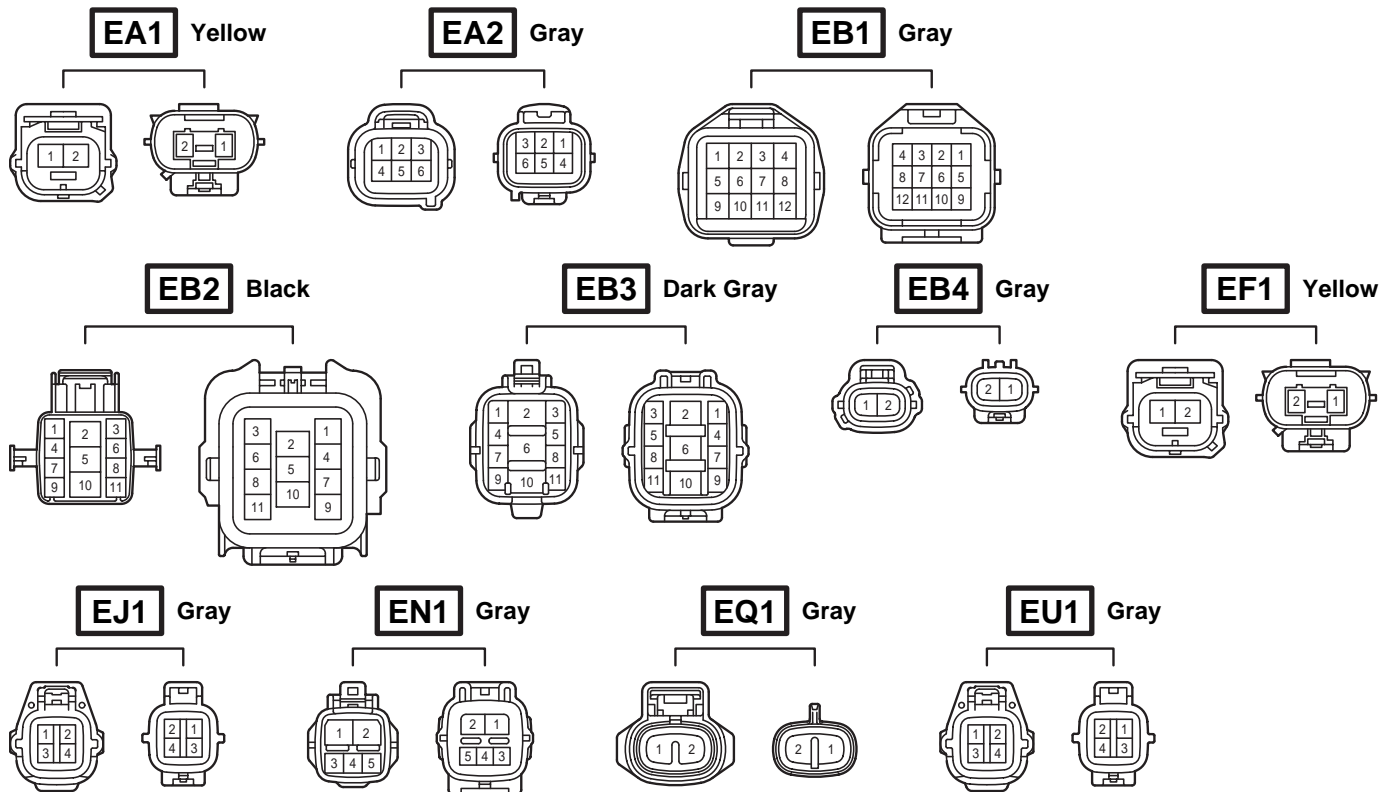

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
EA2	
EB1	
EB2	
EB3	Engine Wire and Transmission Wire (On the Transmission)
EB4	
EF1	
EJ1	Engine Room Main Wire and Alternator Wire (Near the Battery)
EN1	Engine Room No.2 Wire and Engine No.2 Wire (Near the Engine Room J/B)
EQ1	Engine Room No.2 Wire and Magnet SW to Winch Wire (Near the Engine Room J/B)
EU1	Engine No.2 Wire and Engine Wire (On the Transmission)