




8 LAND CRUISER (LHD)




* 1 : w/o Sub Tank
 * 2 : w/o Sub Tank
 * 4 : Europe, Saudi Arabia, Peru
 * 5 : Saudi Arabia, Peru
 * 6 : Middle-East Except *5

Engine Control and Fuel Tank Changeover (2UZ-FE)

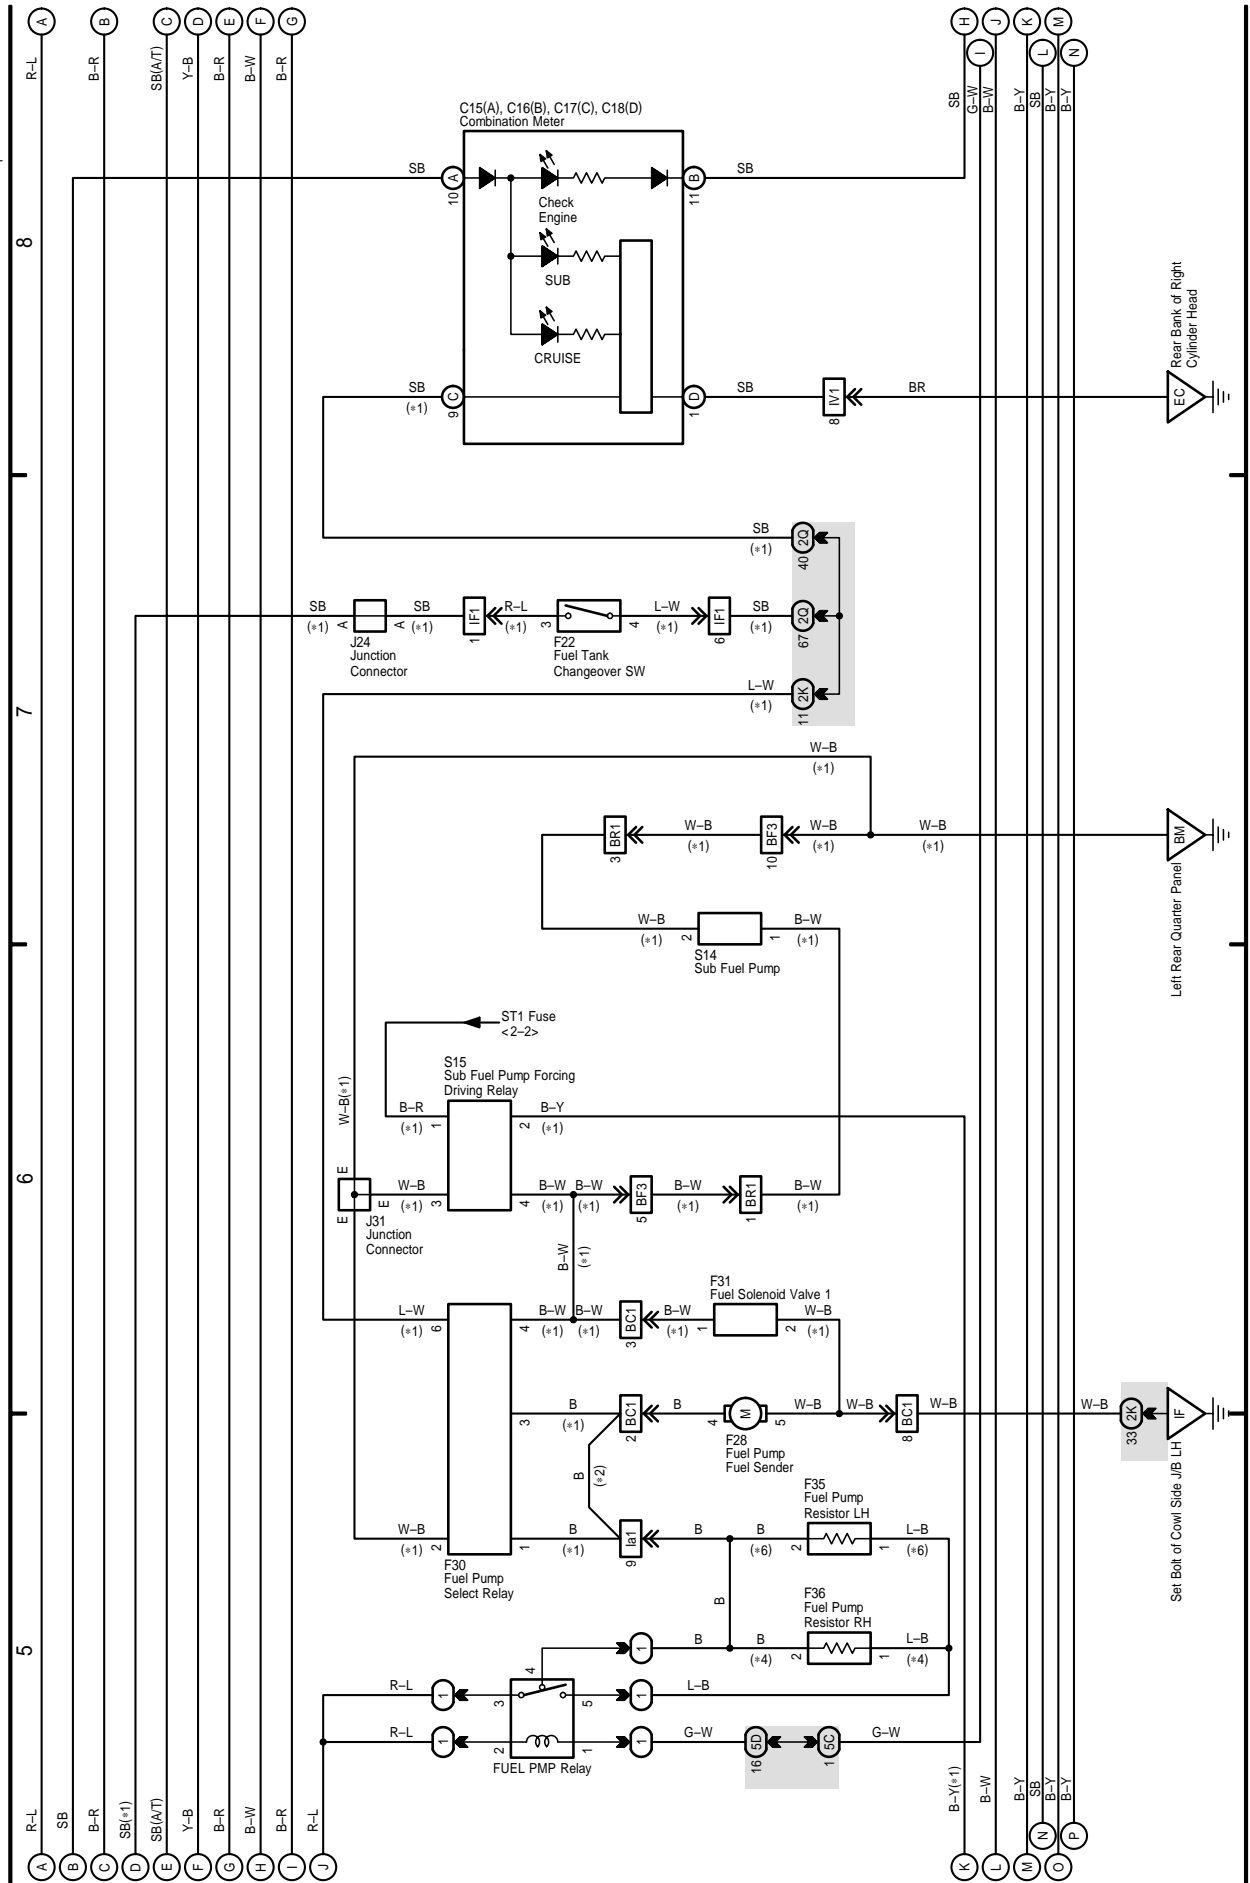



* 4 : Europe, Saudi Arabia, Peru

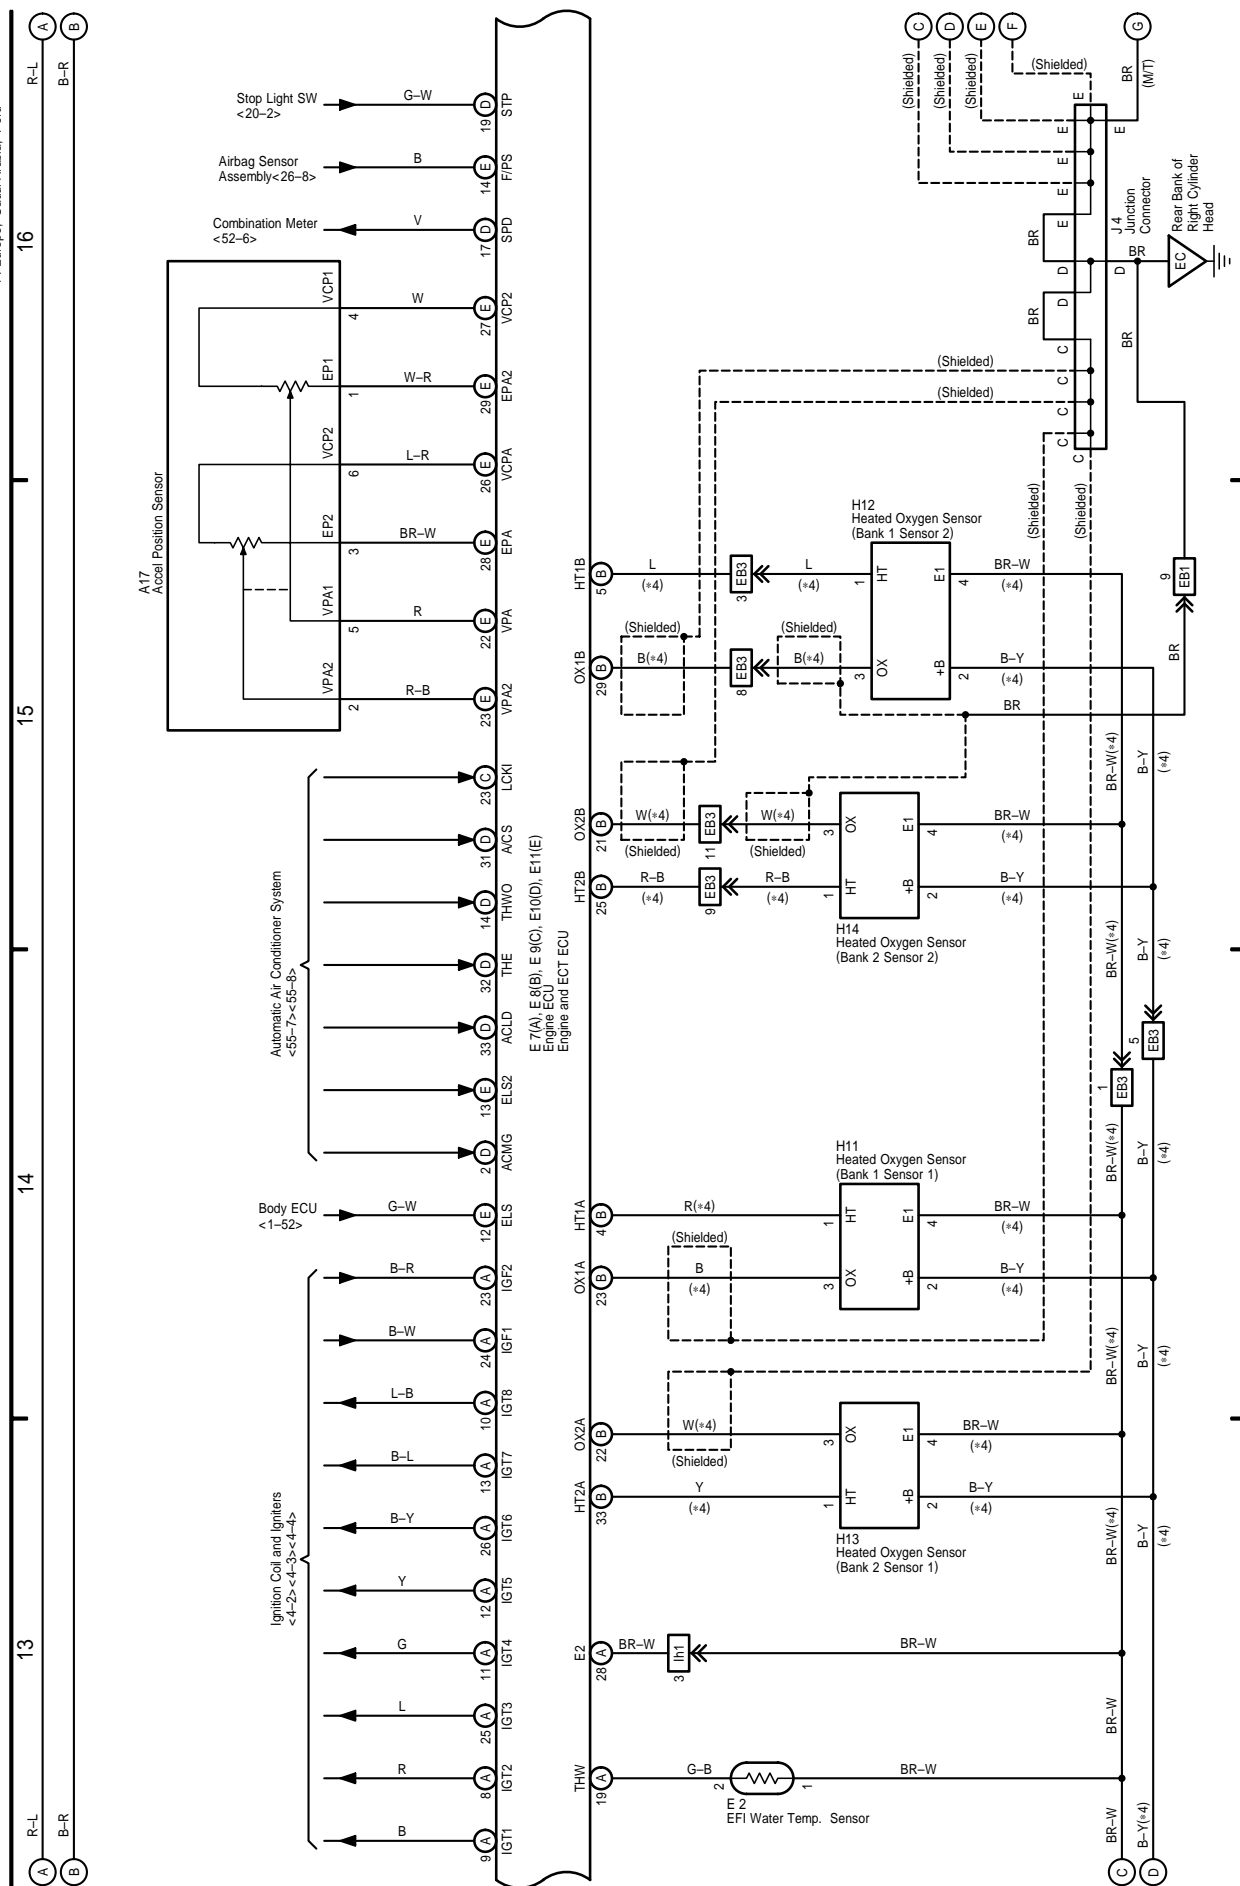

H OVERALL ELECTRICAL WIRING DIAGRAM

8 LAND CRUISER (LHD) (Cont' d)

Engine Control and Fuel Tank Changeover (2UZ-FE)

Cruise Control (2UZ-FE)

