


## Connector Joining Wire Harness and Wire Harness

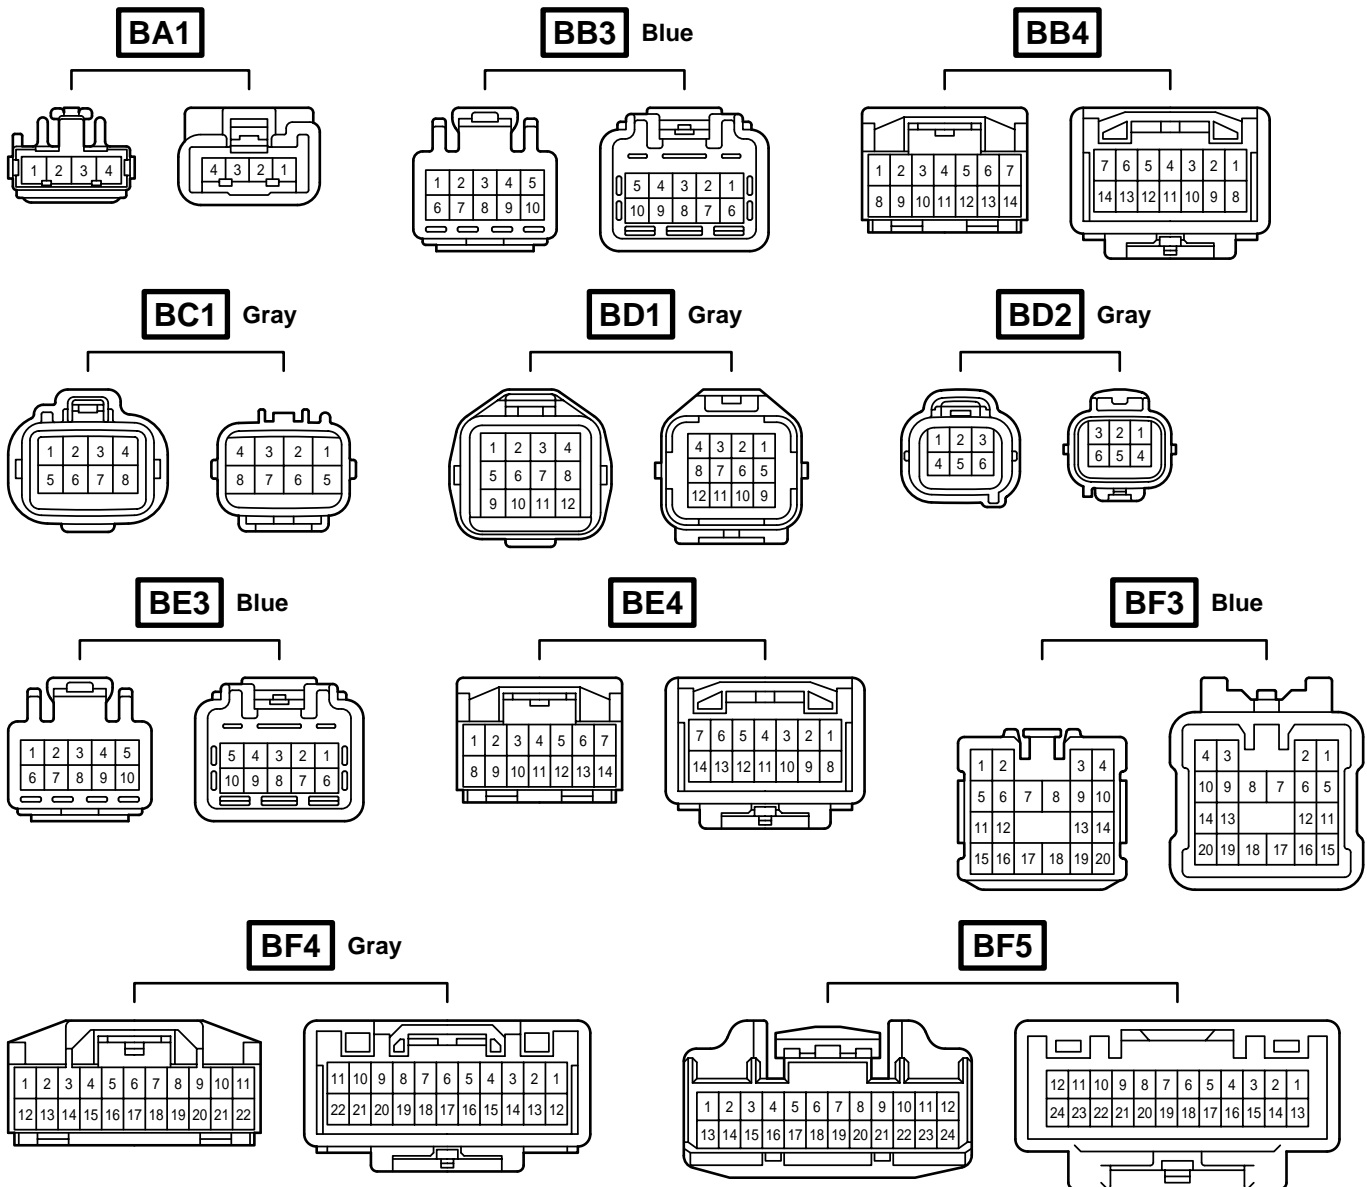

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Front Door LH Wire and Front Door LH No.2 Sub Wire (Front Door LH)
BB3	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BB4	
BC1	Floor No.1 Wire and Fuel Tank Wire (Near the Fuel Tank)
BD1	Frame No.2 Wire and Frame Wire (Near the Left Rear Suspension Support)
BD2	
BE3	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BE4	
BF3	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BF4	
BF5	