

## REASSEMBLY

### 1. w/ Dual Stage Airbag Type (Driver's Side): INSTALL SEAT POSITION SENSOR

Install the seat position sensor with a new bolt, then connect the connector.

**Part No.:**


**Bolt: 90119-06871**

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**

### 2. INSTALL SEAT POSITION CONTROL RELAY


Install the seat position control relay with the 2 bolts, then connect the connectors.

**Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)**

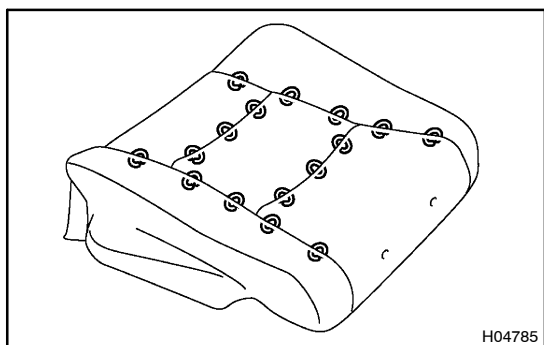


### 3. INSTALL SEATBACK COVER

Install the seatback cover to the seatback pad with new hog rings.

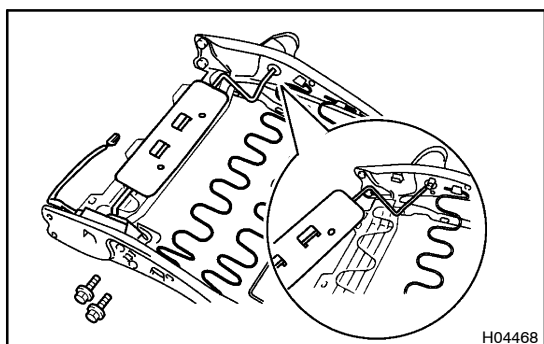


### 4. INSTALL LUMBER SUPPORT

Install the lumbar support and the spacer with the 2 bolts.

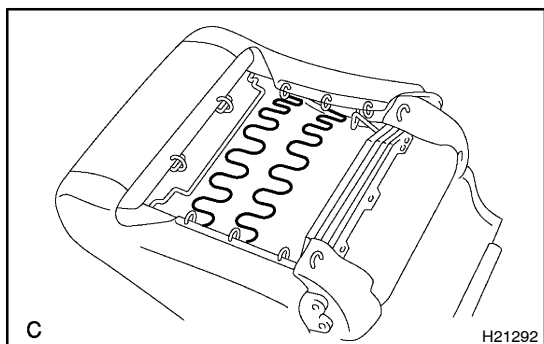

### 5. w/o Side Airbag: INSTALL SEATBACK FRAME

- Install the seatback cover to the seatback frame.
- Install new hog rings.
- Install the 2 headrest supports.

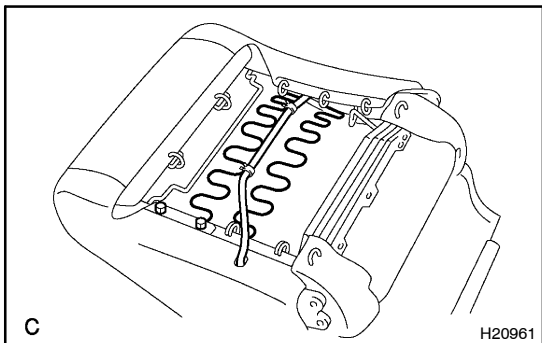

## 6. w/ Side Airbag: INSTALL SEATBACK FRAME


- (a) Install the seatback cover to the seatback frame.
- (b) Install new hog rings, the clamps and the 2 bolts.

**Torque: 4.7 N·m (48 kgf·cm, 42 in·lbf)**

- (c) Install the 2 headrest supports.

## 7. INSTALL SEATBACK ASSEMBLY

- (a) w/o Side Airbag:  
Install the RH reclining adjuster inside shield with a screw.

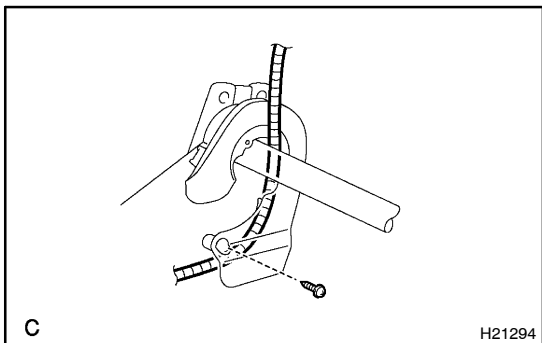


- (b) w/ Side Airbag:  
Place the airbag connector along the inner seat adjuster, and then install the RH reclining adjuster inside shield with a screw so that the connector is placed in between.

### NOTICE:

**When handling the airbag connector, take care not to damage the airbag wire harness.**


- (c) Install the LH reclining adjuster inside shield with a screw.

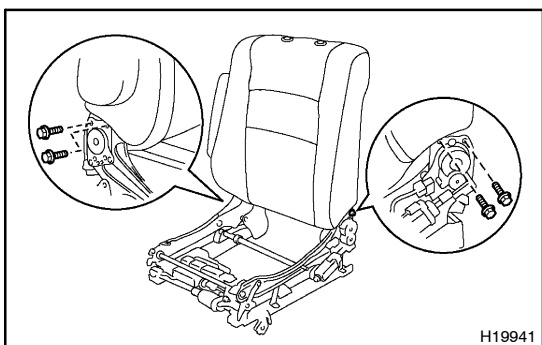

- (d) Install the seatback assembly with the 4 bolts.

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

- (e) Install new hog rings.

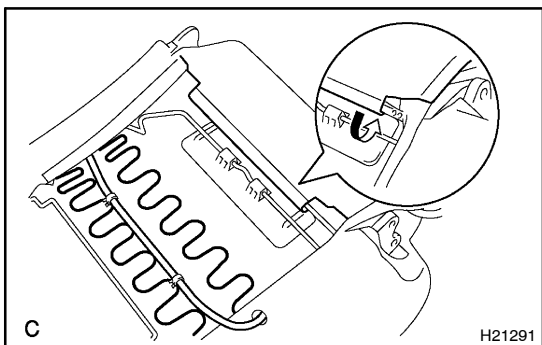


- (f) Hang the hook.
- (g) Connect the connectors.

## 8. INSTALL HEADREST

## 9. INSTALL SEAT CUSHION COVER (See page BO-105)

## 10. INSTALL SEAT CUSHION FRAME

- (a) Install the seat cushion frame with new hog rings to the seat cushion cover with pad.
- (b) Hang the hook.

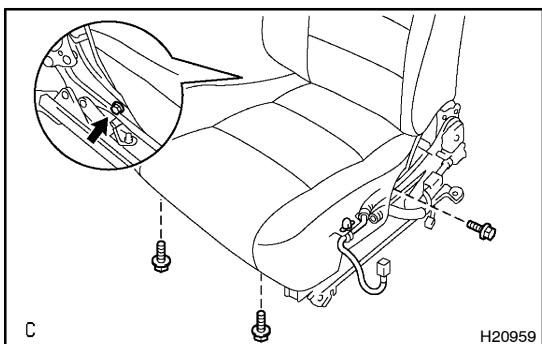


## 11. INSTALL SEAT CUSHION ASSEMBLY


- (a) Install the seat cushion assembly with the 4 bolts to the seat adjuster.

**Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)**


- (b) Engage the wire harness clamp.

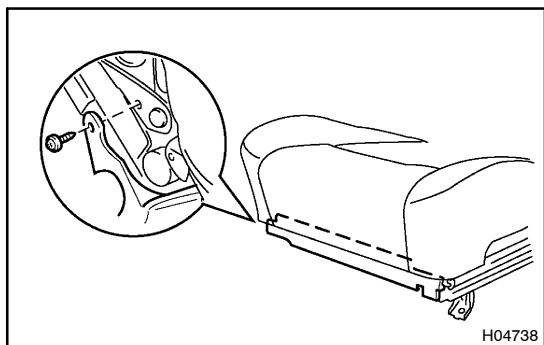**12. INSTALL FRONT SEAT CUSHION SHIELD**


Install the seat cushion shield with the screw.

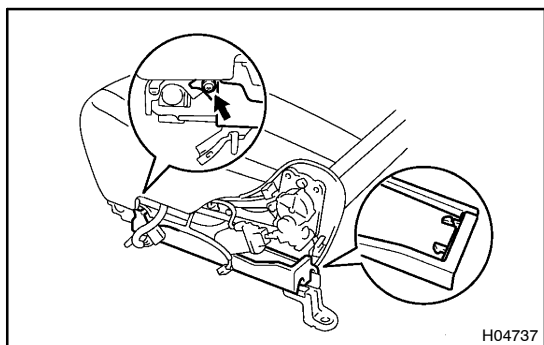**13. INSTALL LOWER SEAT CUSHION SHIELD**

Install the seat cushion shield with the screw.

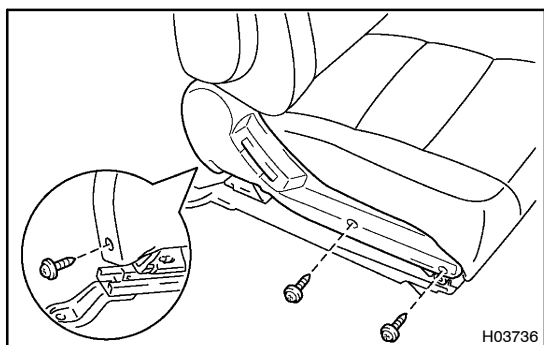**14. INSTALL SEAT CUSHION INNER SHIELD**

Install the seat cushion inner shield with the 3 screws.

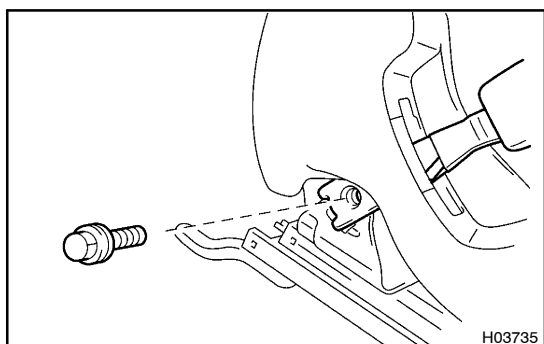
**15. INSTALL FRONT SEAT INNER BELT**

- (a) Engage the clamp, then connect the connector.
- (b) Install the inner belt with the bolt.

**Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)**

**16. INSTALL SEAT CUSHION OUTER SHIELD**

- (a) Install the power seat switch with the 3 screws.
- (b) Install the lumbar support switch with the 2 screws.
- (c) Connect the connectors.

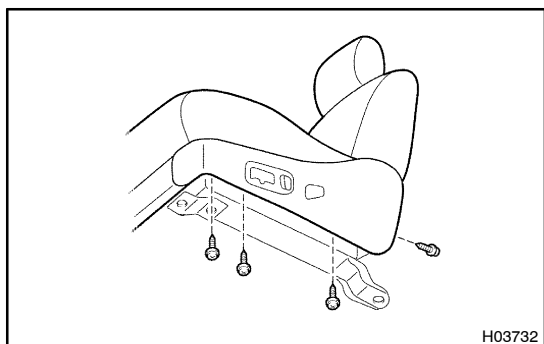

- (d) Install the seat cushion outer shield with the 4 screws.
- (e) Install the power seat switch knobs.

**17. INSTALL SEATBACK BOARD**