


## Connector Joining Wire Harness and Wire Harness

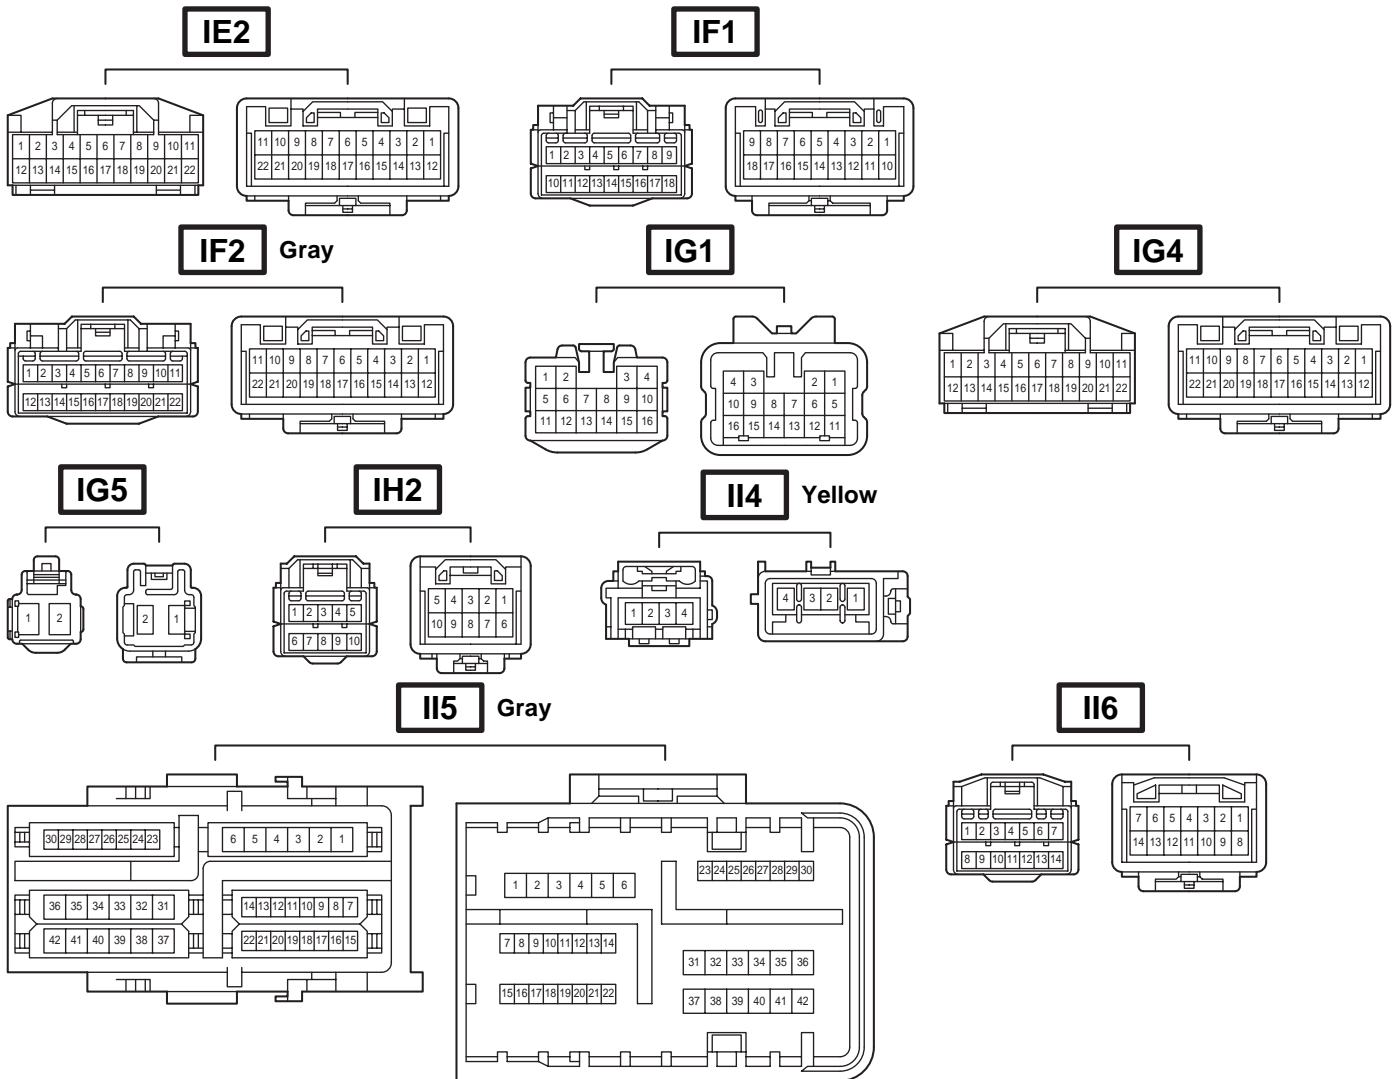

Code	Joining Wire Harness and Wire Harness (Connector Location)
IE2	Dash Wire and Roof No.1 Wire (Left Kick Panel)
IF1	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2	
IG1	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IG4	
IG5	
IH2	Instrument Panel Integration Wire and Column Wire (Near the Steering Column)
II4	Dash Wire and Column Wire (Near the Steering Column)
II5	
II6	