


Light control switch circuit


WIRING DIAGRAM

LHD Models:

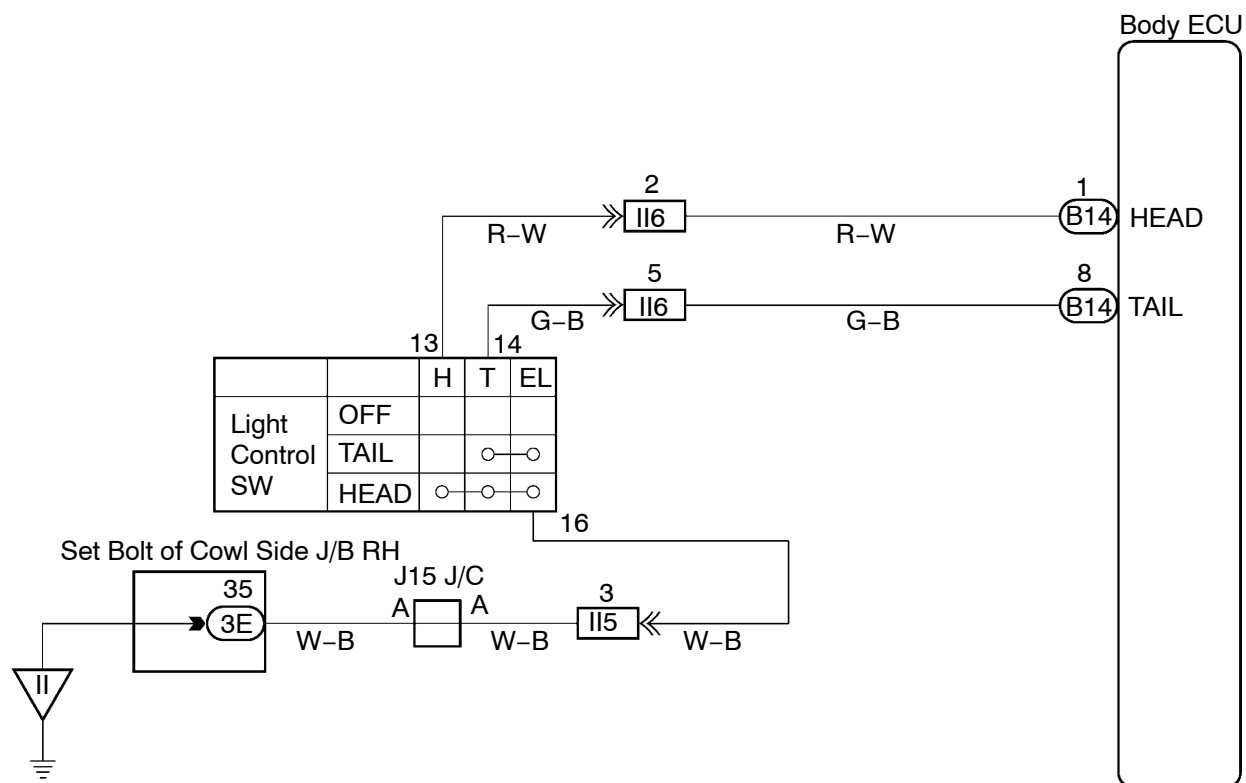

H

I25777

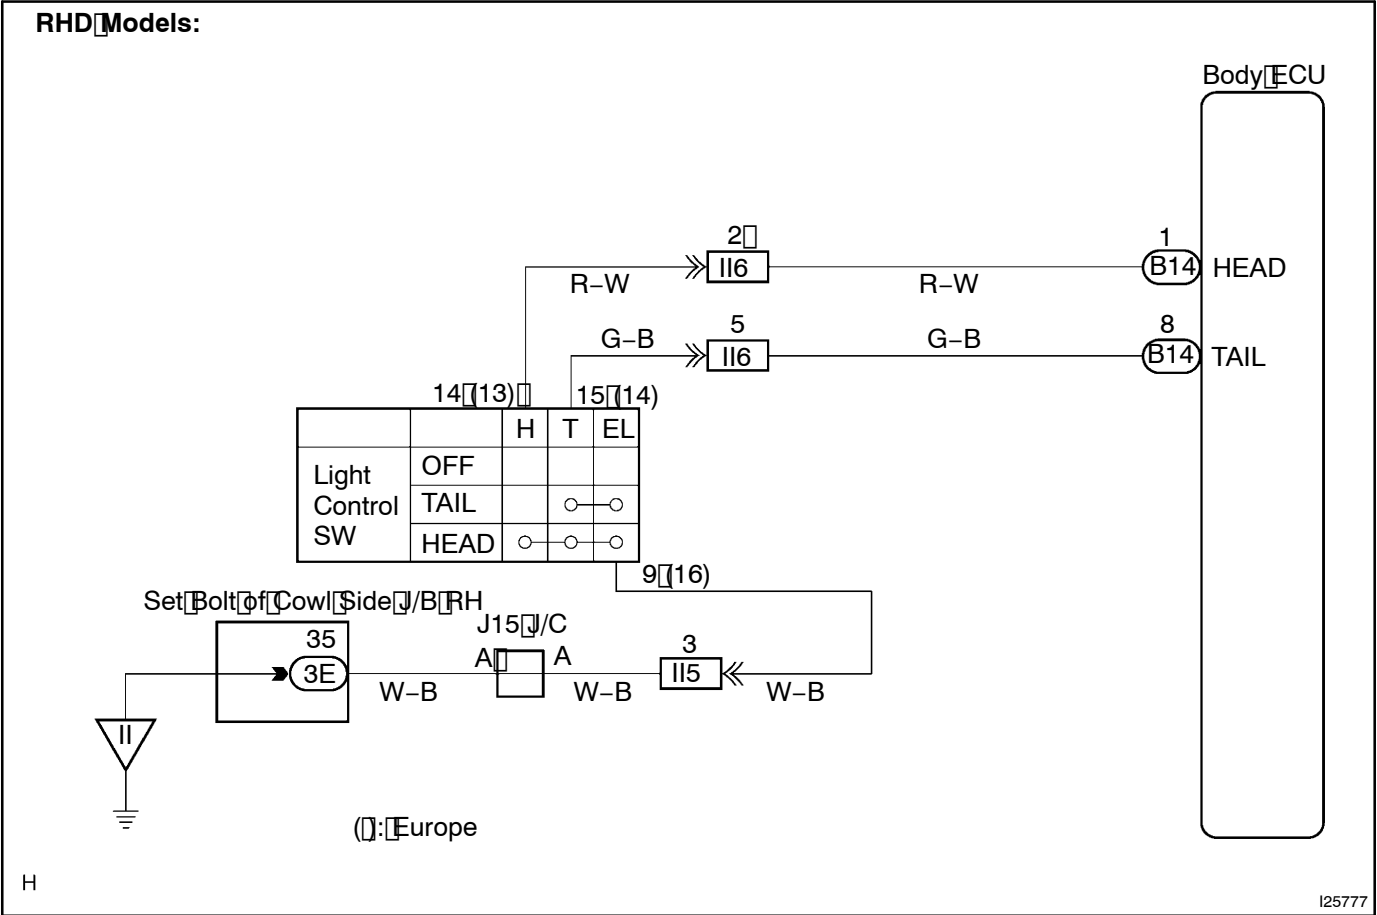

INSPECTION PROCEDURE

HINT:
In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1

Check light control switch using hand-held tester.

PREPARATION:
Connect the hand-held tester to DLC3.

CHECK:
Check that the light control switch operate in ACTIVE LIST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).

NG

2 Check headlight control switch (See page BE-23).

NG

Replace the headlight control switch.

OK

3 Check wire harness and connector between headlight control switch and Body ECU (See page IN-38).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).