


## CRUISE MAIN Indicator Light Circuit

### CIRCUIT DESCRIPTION

When the cruise control main switch is turned ON, CRUISE MAIN indicator light lights up.


### WIRING DIAGRAM

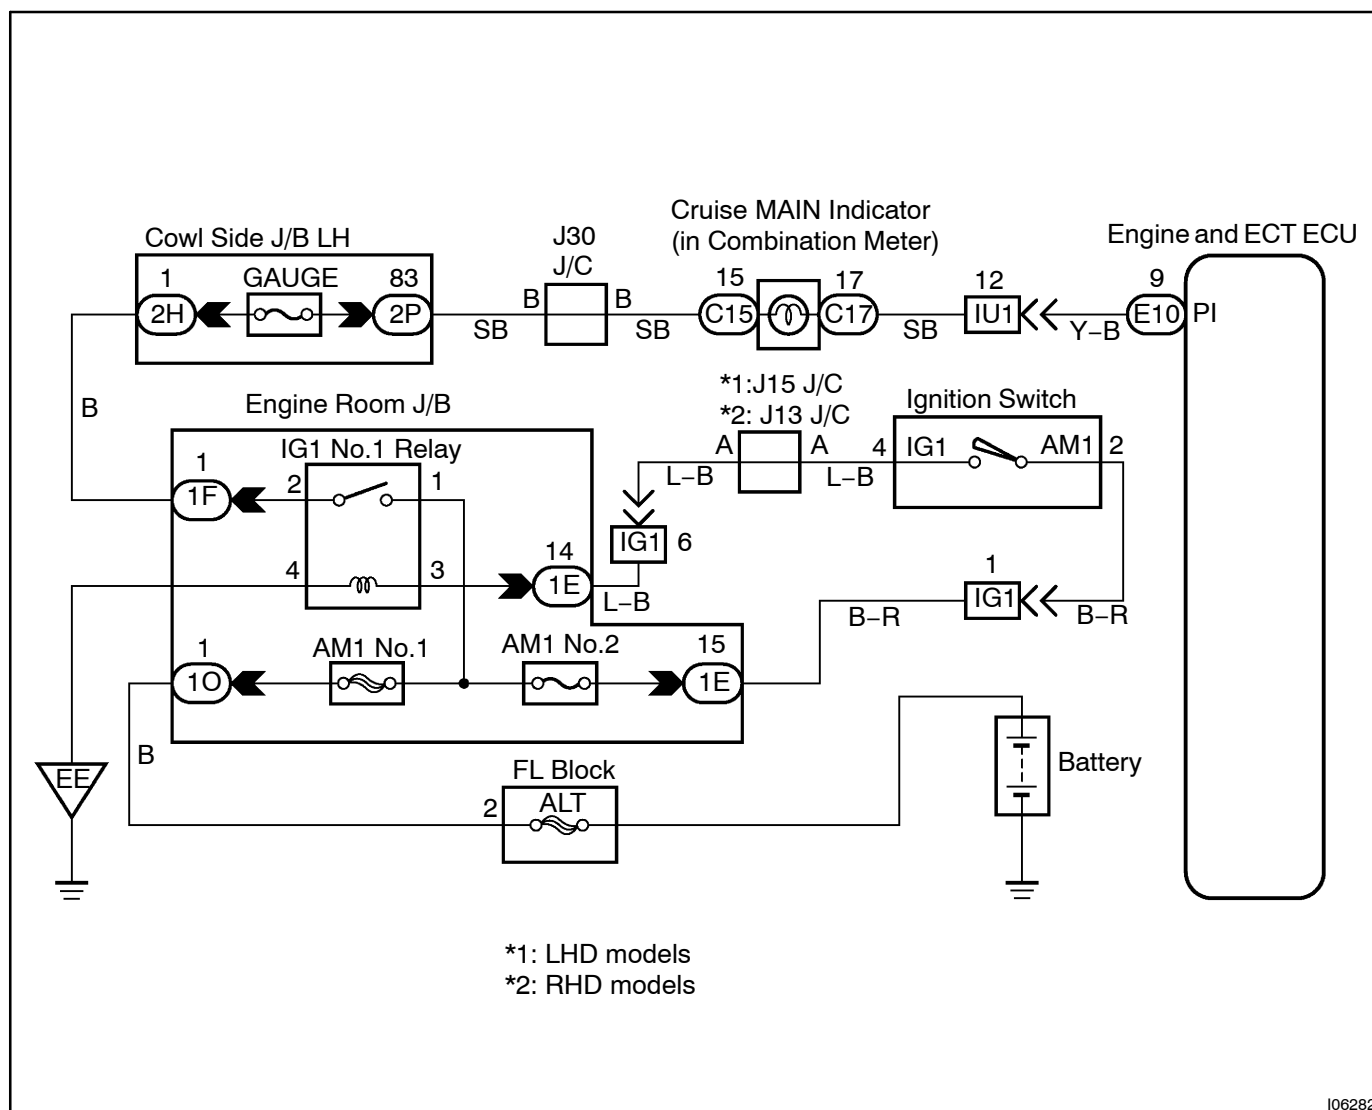

I06282

## INSPECTION PROCEDURE

## 1 Check voltage between terminals PI and GND of Engine and ECT ECU connector.

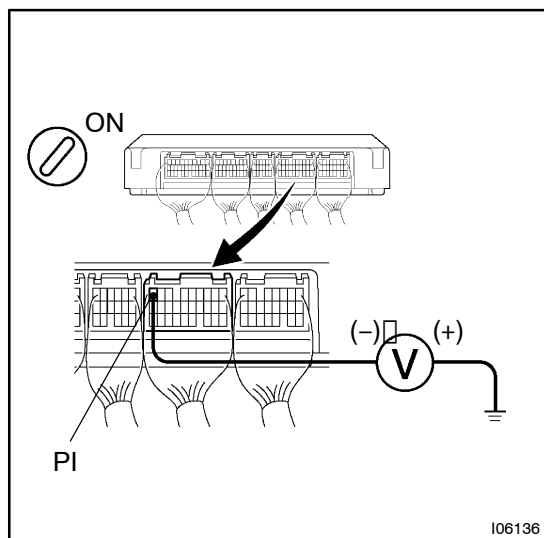**PREPARATION:**

Turn ignition switch ON.

**CHECK:**

Measure voltage between terminals PI and GND of Engine and ECT ECU connector when main switch on and off.

**OK:**

Switch position	Voltage
OFF	10 - 16 V
ON	Below 1.2 V

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-730).

NG

## 2 Check combination meter (See page BE-71).

NG

Replace combination meter.

OK

Check and replace Engine and ECT ECU (See page IN-35).