


DTC	47	Rear Air Mix Damper Control Servomotor Circuit
------------	-----------	---

CIRCUIT DESCRIPTION

The rear air mix damper control servomotor is controlled by the A/C amplifier and moves the air mix damper to the desired position.

DTC No.	Detection Item	Trouble Area
47	Air mix damper position sensor value does not change even if A/C control assembly operates air mix damper control servomotor	<ul style="list-style-type: none"> •Rear air mix damper control servomotor •Harness or connector between rear air mix damper control servomotor and rear A/C amplifier •Rear A/C amplifier

WIRING DIAGRAM

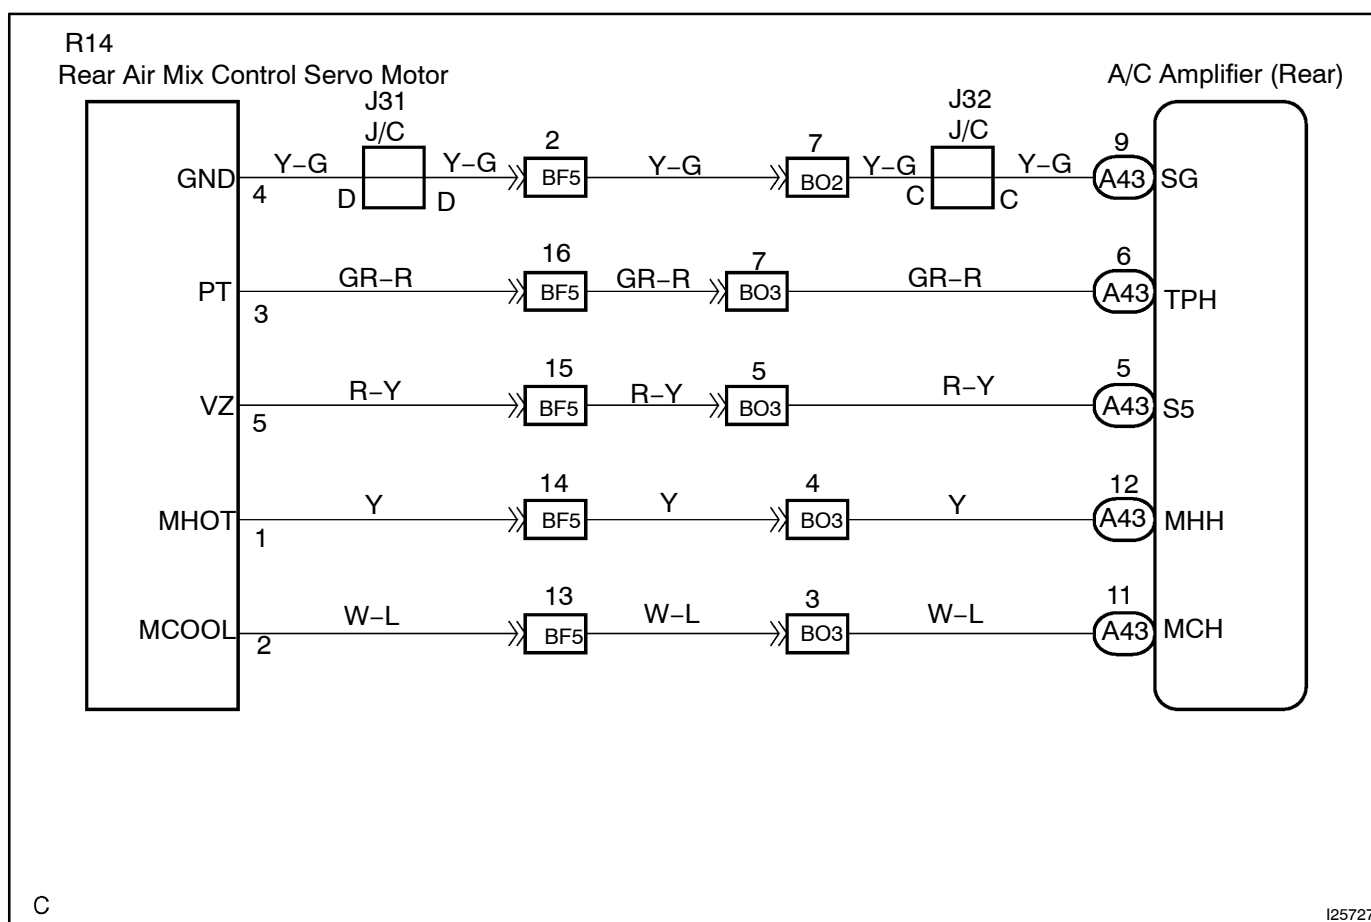

INSPECTION PROCEDURE

1

Actuator check.

PREPARATION:

- (a) Warm up the engine.
- (b) Set to actuator check mode (See page DI-1226).
- (c) Press the DEF switch and change it to step operation.

CHECK:

Press the DEF switch and check the operation of the air mix damper and the condition of the blower.

OK:

Display Code	Air Mix Damper	Condition
0 - 2	0% (Fully closed)	Cool air comes out
3 - 4	50%	
5 - 7	100% (Fully opened)	Warm air comes out


OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1238).

NG

2

Check rear air mix damper control servomotor.

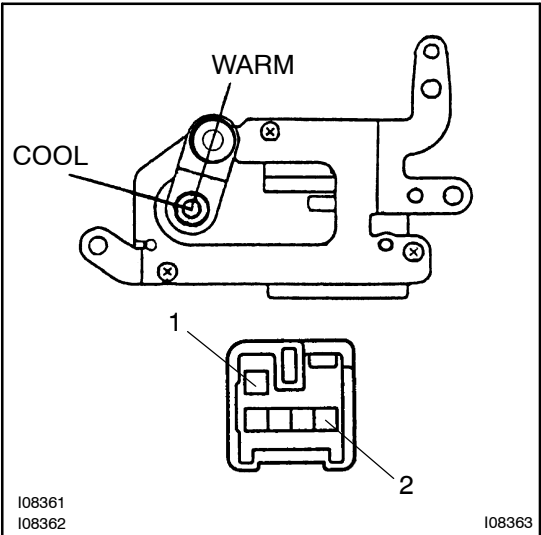

PREPARATION:

Remove the rear air mix servomotor.

CHECK:

Connect positive (+) lead to terminal 1 and negative (-) lead to terminal 2.

OK:

The lever turns smoothly to WARM side.

CHECK:

Connect positive (+) lead to terminal 2 and negative (-) lead to terminal 1.

OK:

The lever turns smoothly to COOL side.

NG

Replace rear air mix servomotor.

OK

- | | |
|---|---|
| 3 | Check harness and connector between rear air mix damper control servomotor and rear A/C amplifier (See page IN-38). |
|---|---|

NG

Repair or replace harness or connector.

OK

Check and replace rear A/C amplifier.