


REAR HEATER HI RELAY (Manual A/C)


INSPECTION

AC1U0-01

1. REMOVE THESE PARTS:
 - (a) Front seats
 - (b) Rear heater control assembly
(See page AC-198)
 - (c) Rear console box
 - (d) Front console box cover
 - (e) Lower center cluster finish panel
 - (f) Front door scuff plate
 - (g) Cowl side trims
 - (h) Rear door scuff plates
 - (i) Center pillar garnishes
2. SLIDE FLOOR CARPET BACKWARD

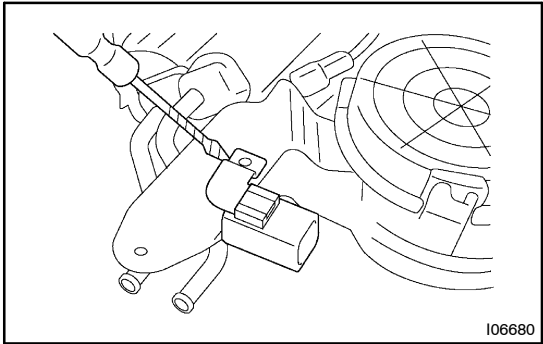

3. REMOVE REAR HEATER RELAY
 - (a) Disconnect the connector.
 - (b) Using a screwdriver, release the claw and remove the relay.

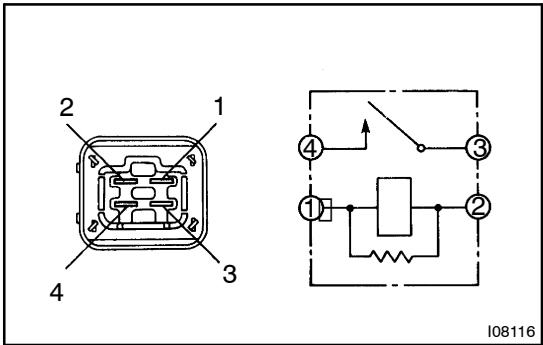

4. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 3	Continuity
Apply B+ between terminals 1 and 3.	2 - 4	Continuity

If continuity is not as specified, replace the relay.

5. INSTALL RELAY