


## Headlight relay circuit

### CIRCUIT DESCRIPTION

The headlight dimmer switch sends a signal to the Body ECU.


### WIRING DIAGRAM

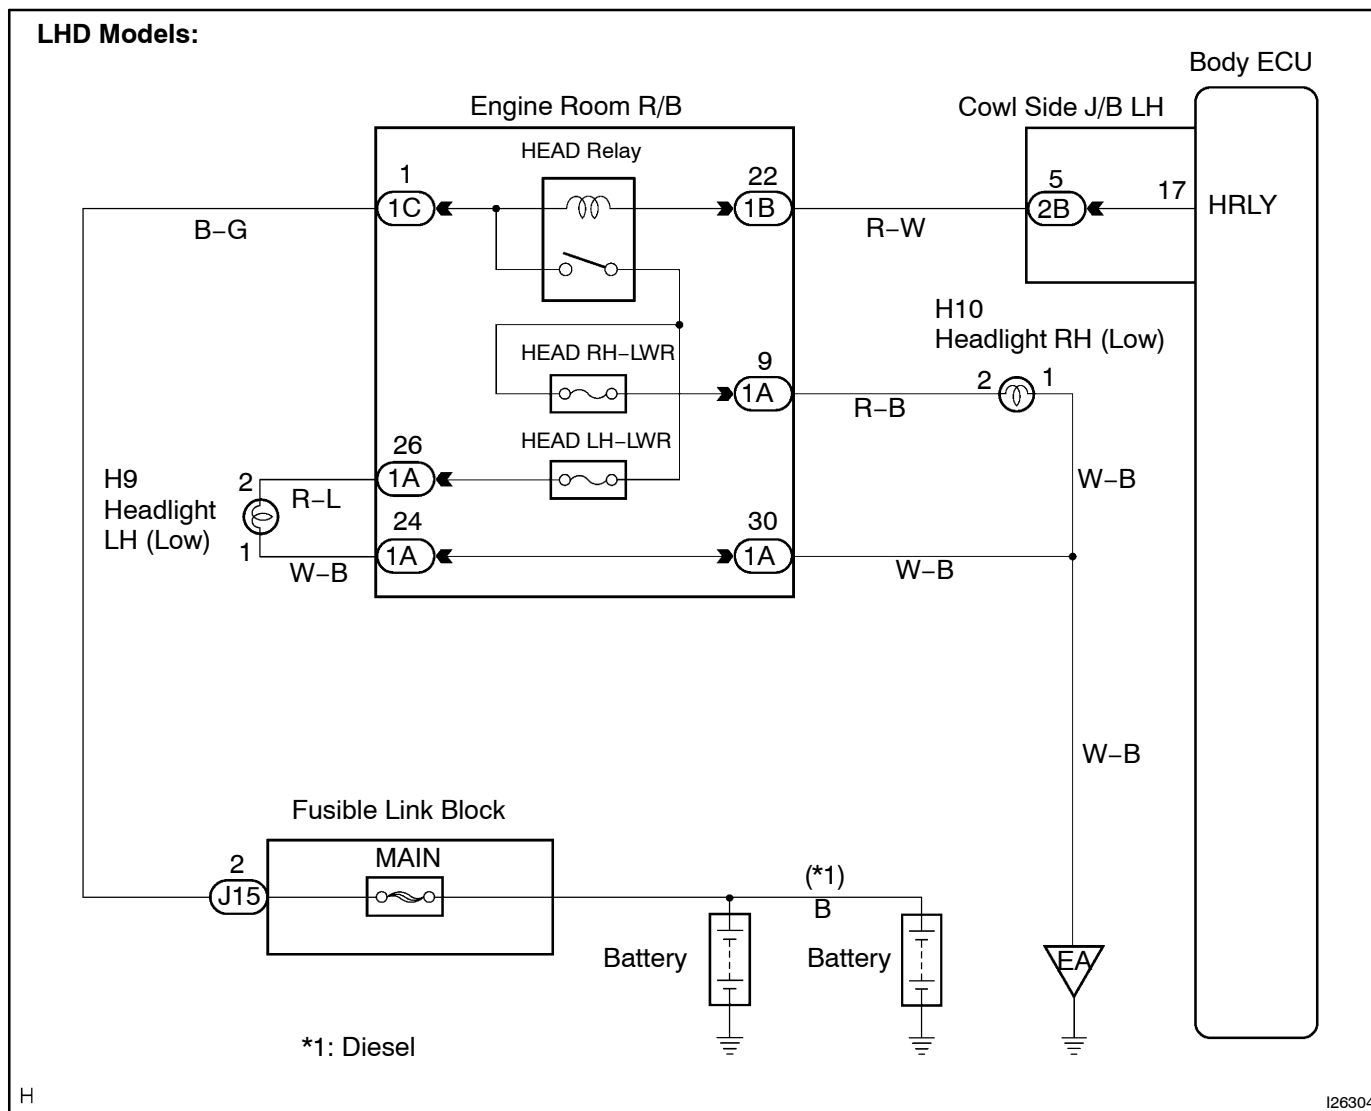

H

I26304

### RHD Models:

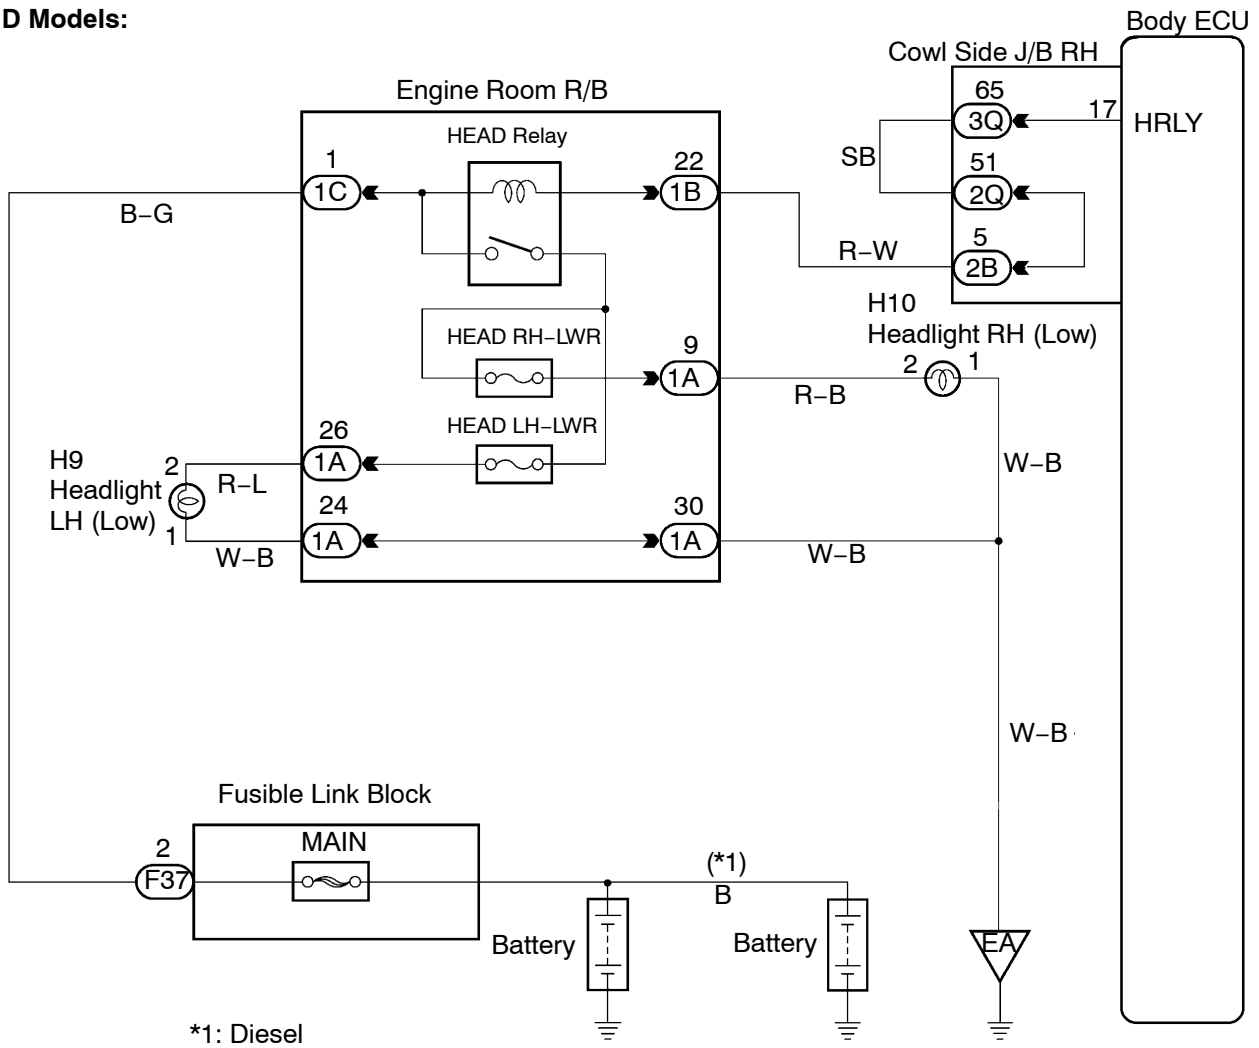

\*1: Diesel

H

126305

## INSPECTION PROCEDURE

### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

**1** Check headlight relay using hand-held tester.

### PREPARATION:

Connect the hand-held tester to DLC3.

### CHECK:

Check that the headlight relay operates in ACTIVE TEST (See page DI-981).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).

NG

**2** Check headlight relay circuit (See page BE-23).

NG

Replace engine room J/B assy with wire harness.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).