


H OVERALL ELECTRICAL WIRING DIAGRAM


(Cont. next page)

8 LAND CRUISER (LHD)

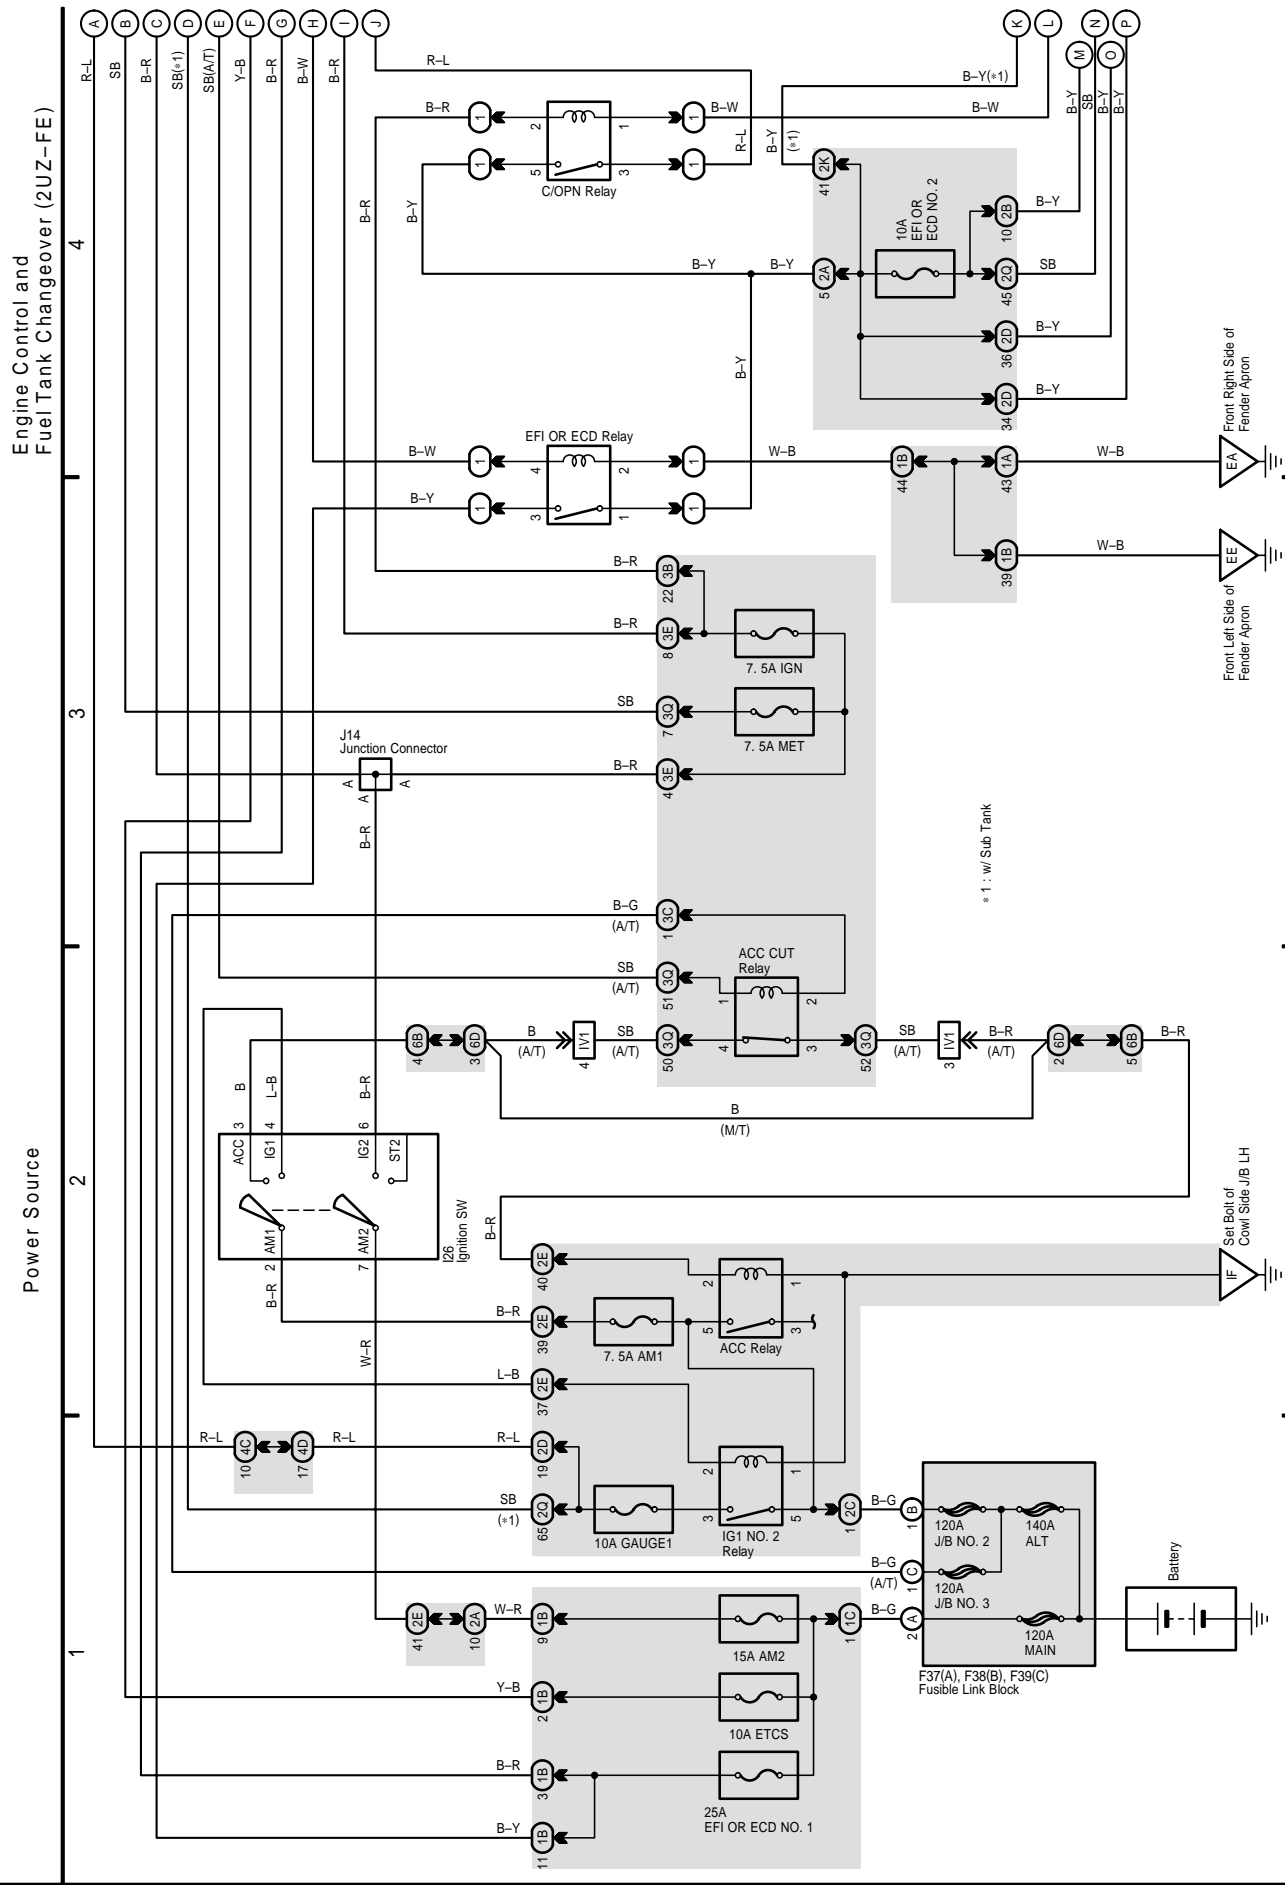

- * 1 : w/ Sub Tank
- * 2 : w/o Sub Tank
- * 3 : Europe, Saudi Arabia, Peru
- * 4 : Middle East Except Saudi Arabia, Peru

Engine Control and Fuel Tank Changeover (2UZ-FE)

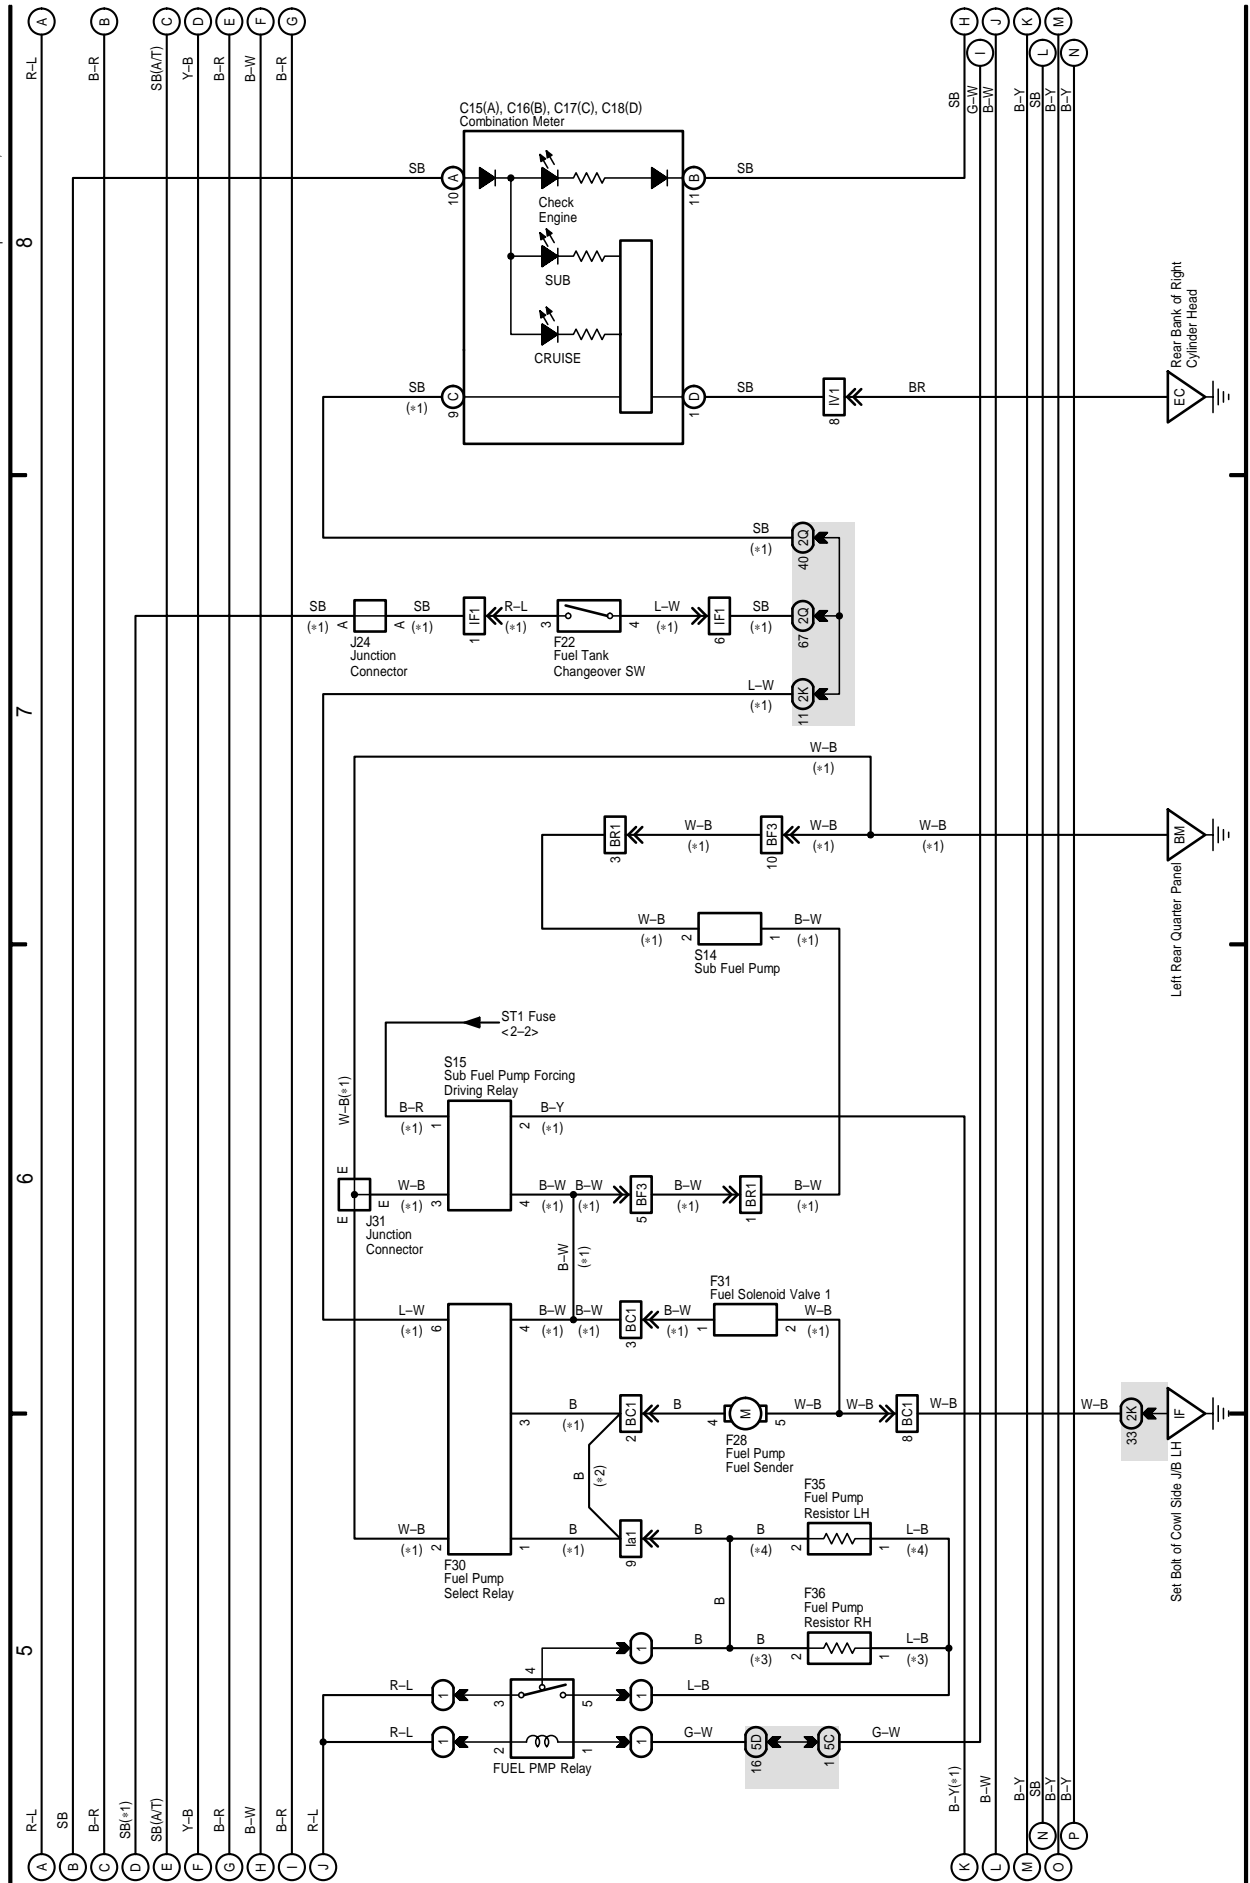


H OVERALL ELECTRICAL WIRING DIAGRAM

(Cont. next page)


8 LAND CRUISER (LHD) (Cont' d)

Engine Control and Fuel Tank Changeover (2UZ-FE)

* 3 : Europe, Saudi Arabia, Peru
* 5 : Except *3

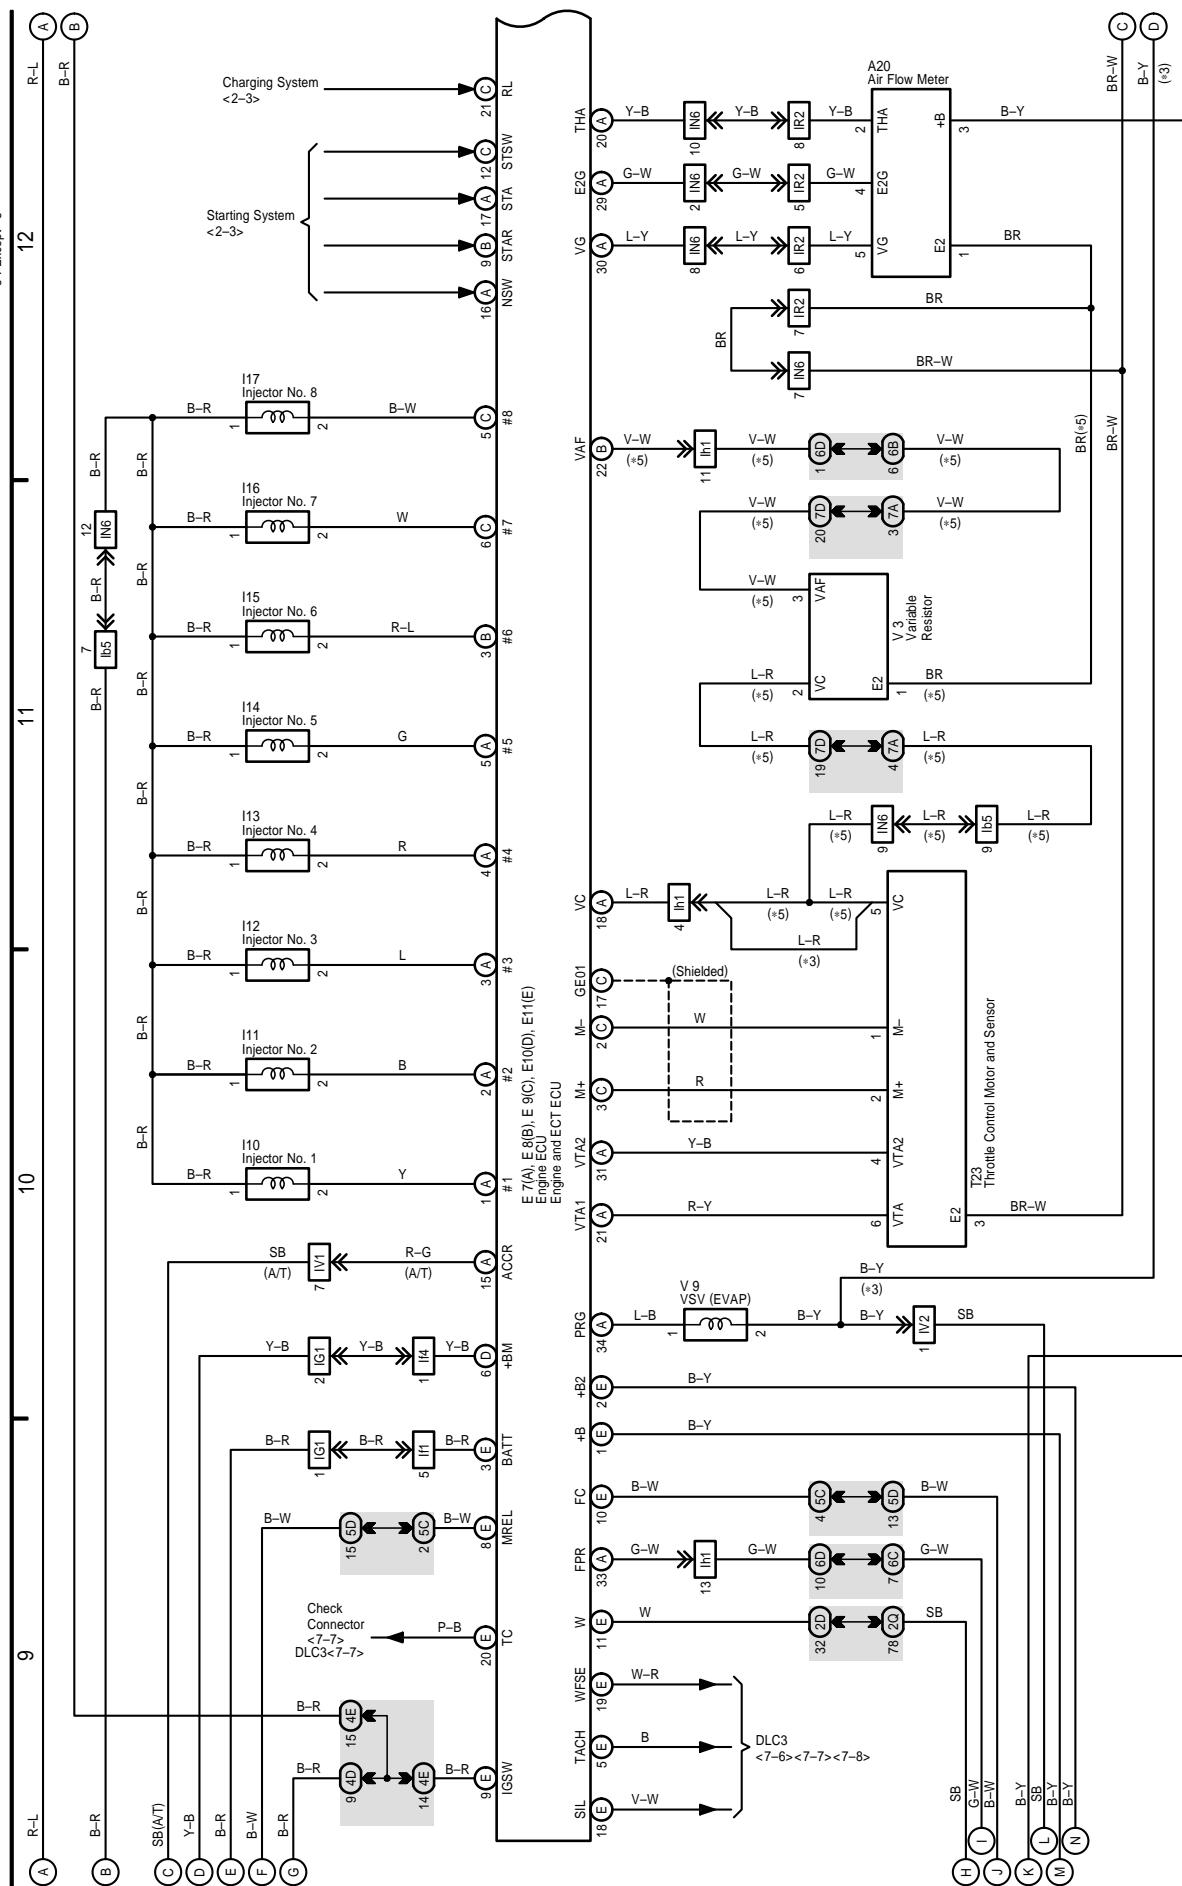

* 3 : Europe, Saudi Arabia, Peru

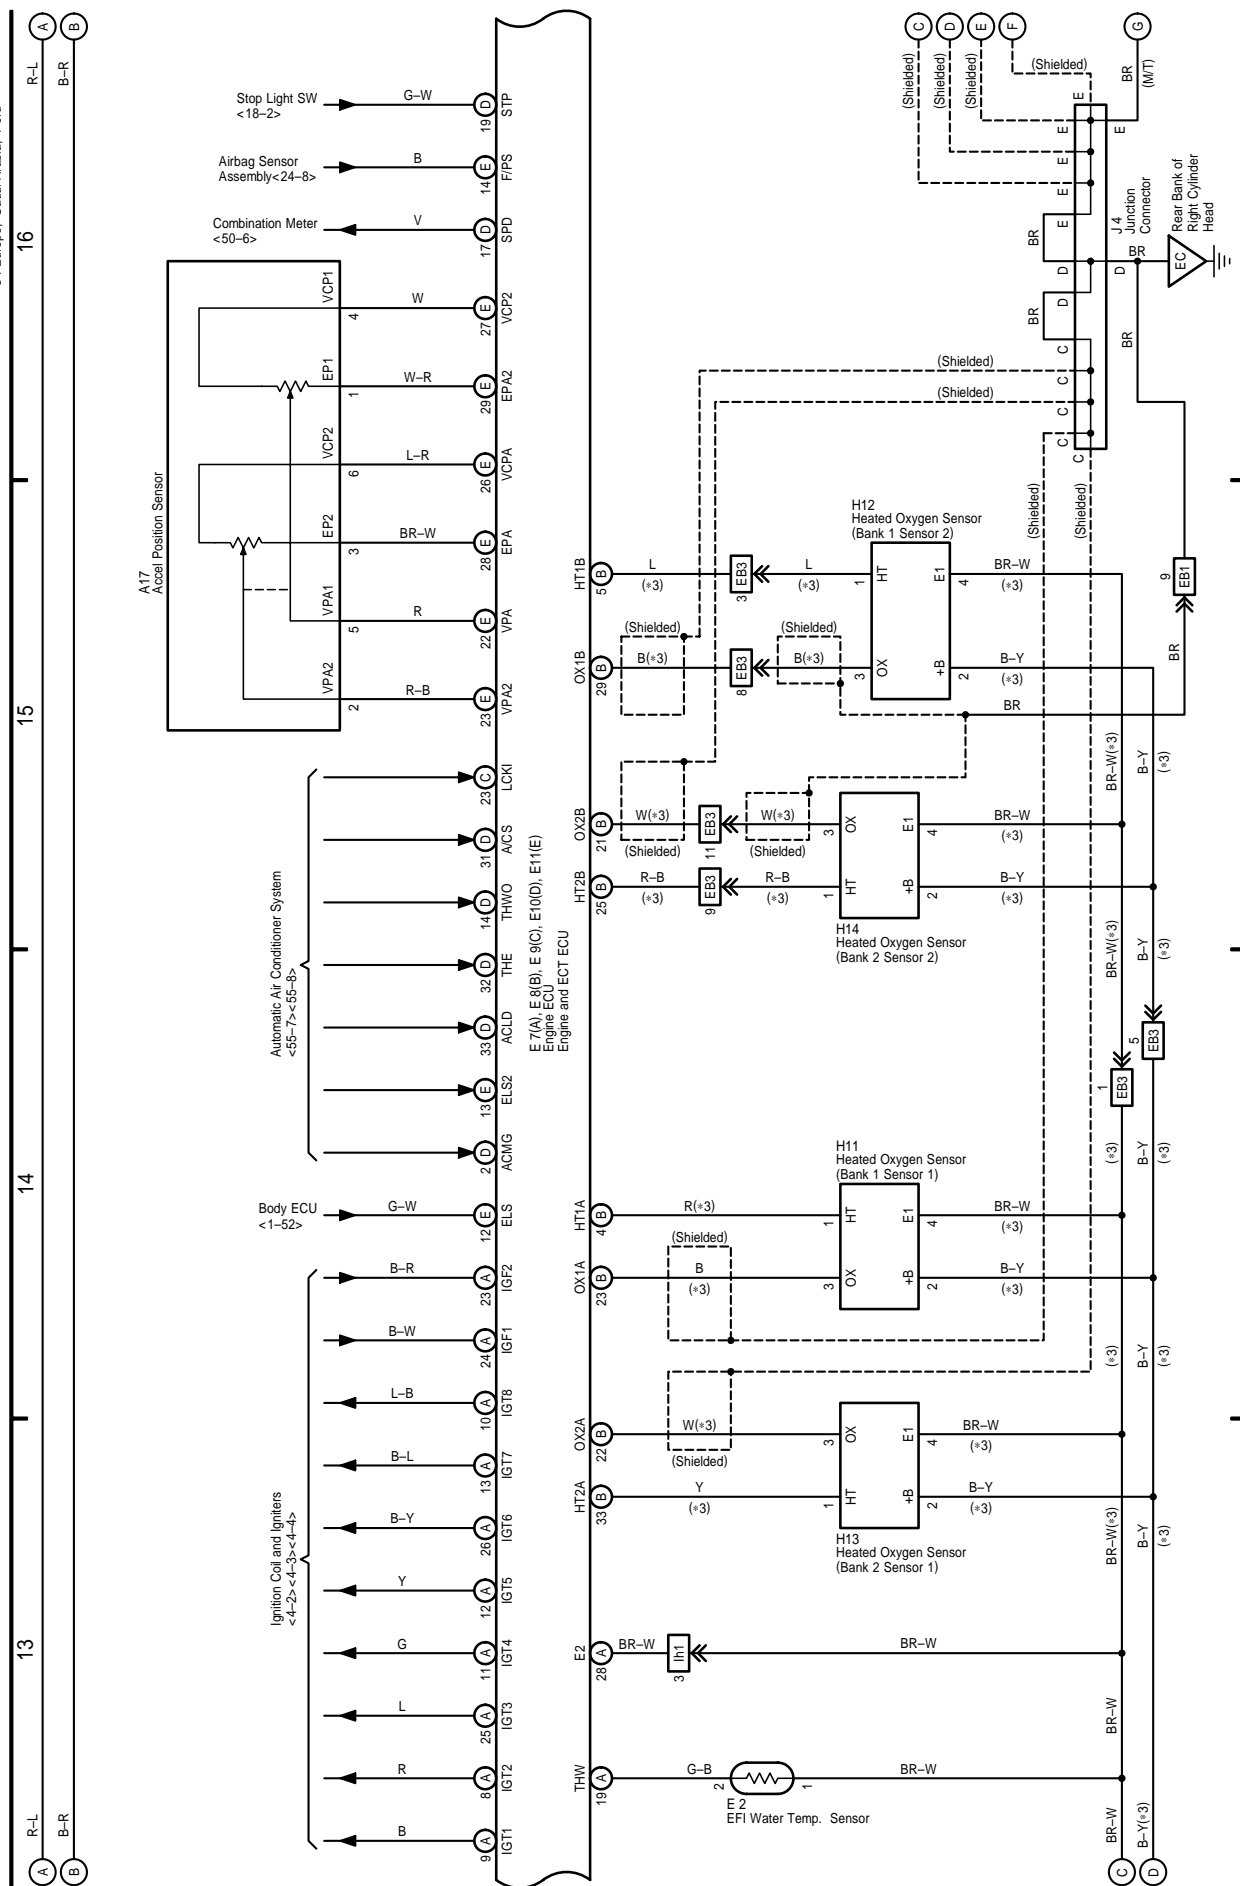

H OVERALL ELECTRICAL WIRING DIAGRAM

8 LAND CRUISER (LHD) (Cont' d)

Engine Control and Fuel Tank Changeover (2UZ-FE)

Cruise Control (2UZ-FE)

