



## Using SAM-BA tool to reprogram TMC262 evaluation board firmware

First: Power the board and Plug & Unplug erase jumper. The CPU alive LED stops blinking.

Power board off & on again and start Atmel SAM-BA (SAM-Boot Assistant)

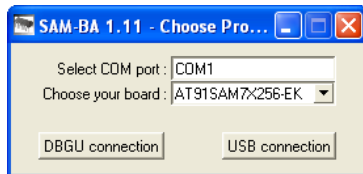

Select the right COM-Port and Choose DBGU for RS232 (for V1.0 Board, connect to serial Debug port)

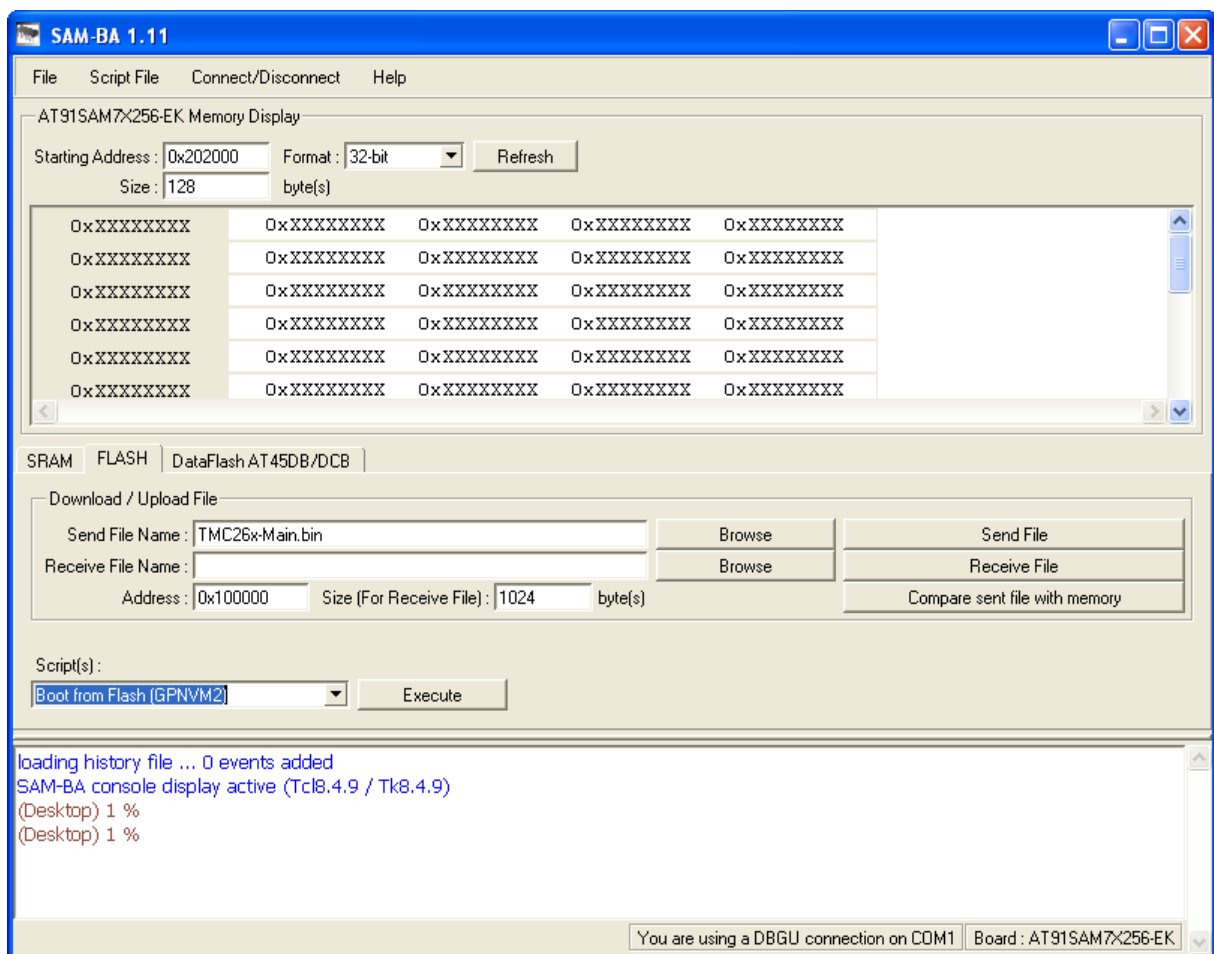

Select Browse and select .bin file.

Send file (confirm popup window with "No")

Choose Boot from Flash and Execute

Power off and on again. Now the LED starts blinking again.