


## TT180704 - FUP - Install and Setup

1. Install FUP and use the default settings. Please do not plug in the dongle until the installation is finished
2. Plug in the dongle. Start FUP. Type in “notepad” in Text editor and click OK

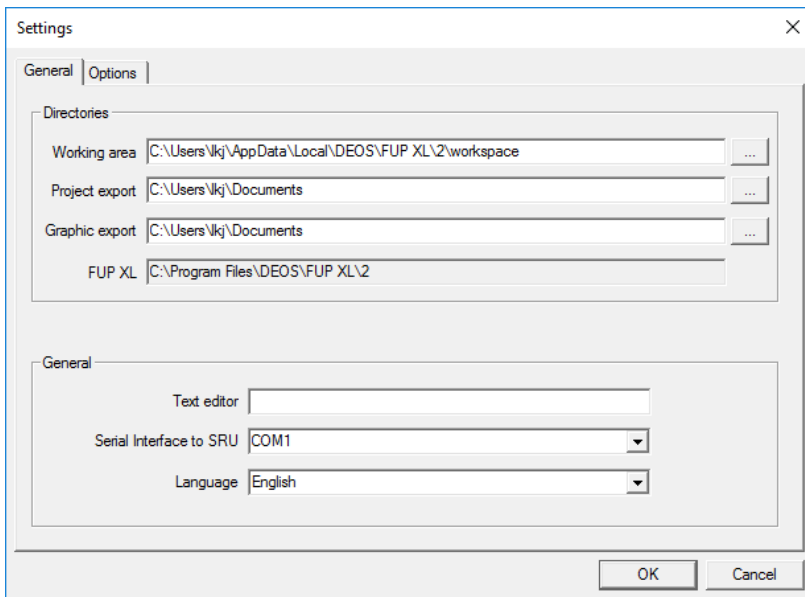

3. You can get the Macro Library from the training or from our DEOS Portal Download Center website <https://portal.deos-ag.com>



[DASHBOARD](#) [DOWNLOAD CENTER](#) [NEWS](#) [SUPPORT](#) [ADMINISTRATION](#)

[CURRENT DOCUMENTS](#) [DOCUMENT ARCHIVE](#) [SUBSCRIBED DOCUMENTS](#) [BOOKMARK LISTS](#)

### Current documents

[Reset](#) [Document type Library](#) [Document language english](#) [Product family Programming solutions](#)

Document type: Library

Document language: english

Text search:


Product family: Programming solutions

Product group: [No selection]

Product type: [No selection]

	Document type	Title	Document languages	Document date	Version	Product family / P	
		Library	Macro library NTC	english	08/11/2018	V0004A	Programming sol.
		Library	Macro library V0004	english	25/06/2018	V0004P	Programming sol.

4. Install the Macro Library. Click “Project”, “Import”, “Import”. Select the file “!MACLIB.WIN.fx12” on your hard disk and click “Open”

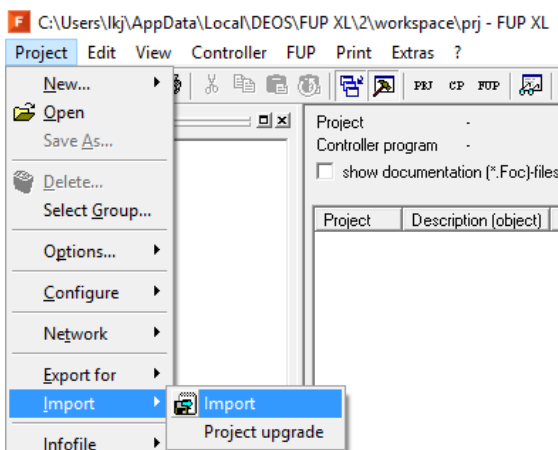

5. You may need to install “.NET Framework”, click “Download and install this feature”

An app on your PC needs the following Windows feature:

.NET Framework 3.5 (includes .NET 2.0 and 3.0)



Download and install this feature

Windows will get the files that it needs from Windows Update and complete the installation.

6. Download the “MS Access Database Engine 2010 x64” from Microsoft Website <https://www.microsoft.com/en-us/download/details.aspx?id=13255> or from the training
7. Install it
8. You can also get the 2D & 3D Graphics from the training
9. Done!

