



TT230303 – OFXL - Controller Properties


1. In OPEN FXL 4, there are some changes in the menu. In this document, we will show you the changes in controller properties. To access it, right click on the controller, click on “Properties”.

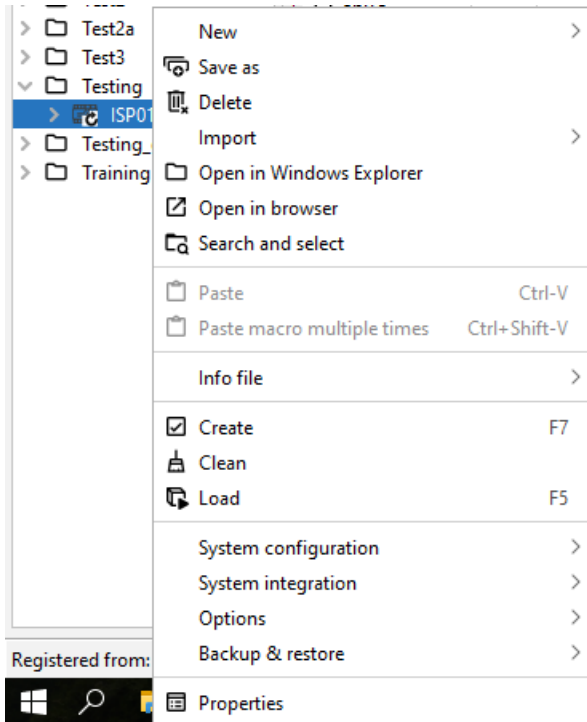


2. First, you should see the “General” tab, where you can find the basic information about the controller.

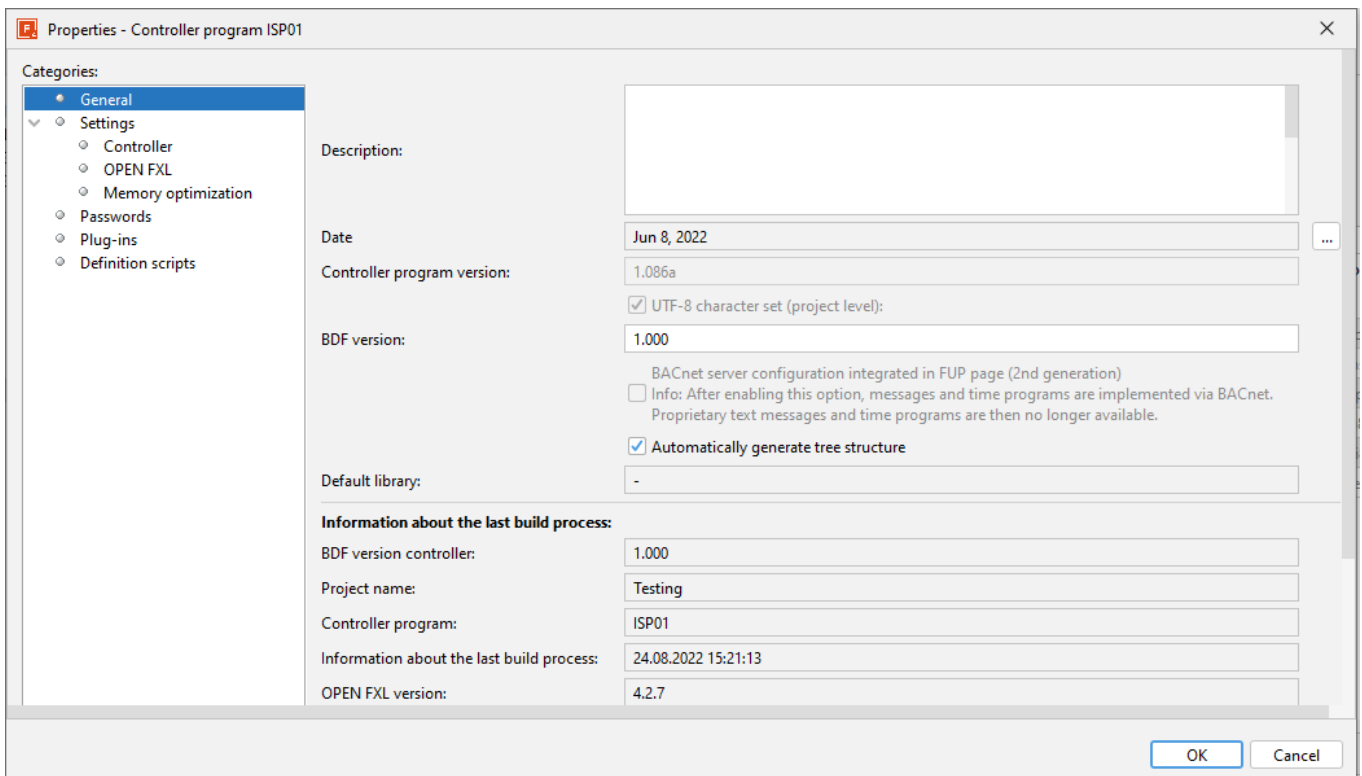


3. Here we can find the setting for "Automatically generate tree structure". You can find more information regarding the function in TT200701 (FUP-Manual Tree Configuration).




- Now go to the “Controller” tab under “Settings”. Here you can find setting for “Permit controller-overarching dialog calls”. Please see TT200402 (FUP - Cross Controllers Graphic) for details.

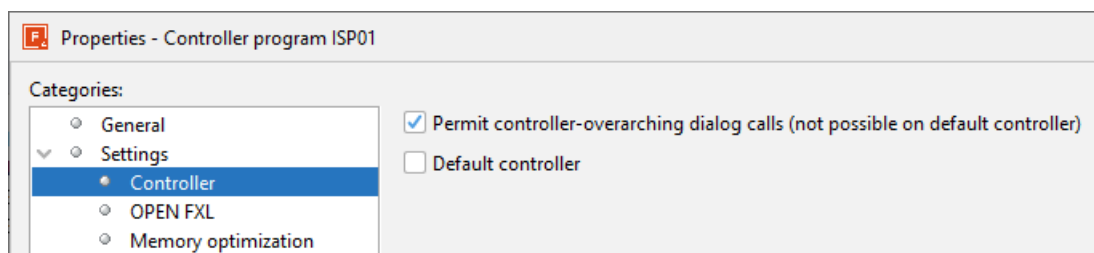

- You can also find the setting for “Default controller”. See TT221002 (OPEN-Change IP address) for details.
- In the OPEN FXL tab, you can set the default graphic page size for the controller.

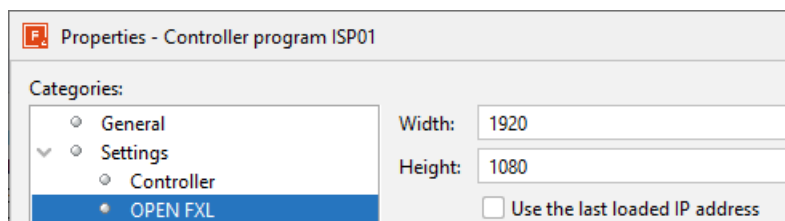

- In the password tab, you can set the password for each password level. Please refer to TT190405 (FUP-Controller Password Change) for details.

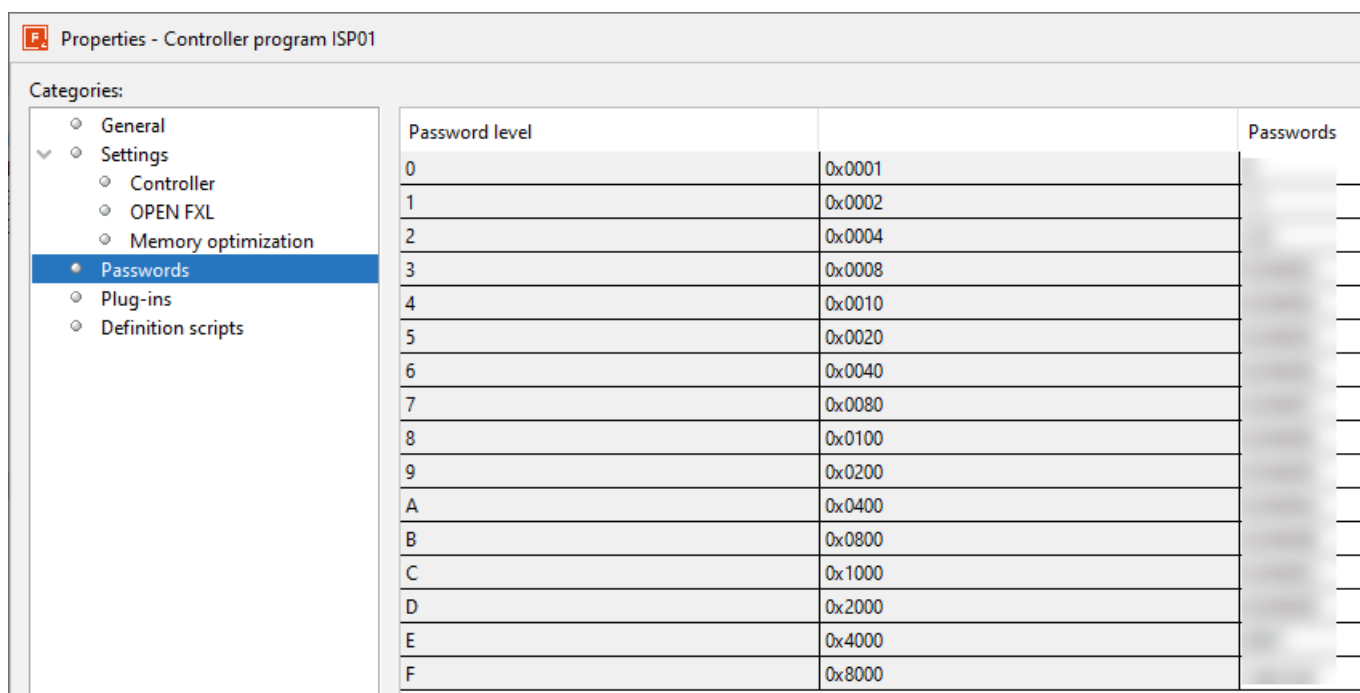

- Also, the “Trend configuration” and “Tree structure” are now under “System configuration”.



- Lastly, all integrations are now under “System integration”.

