



## TT201203 – OPENview - Text Mode Operation


1. By default, when you use a browser (e.g. Chrome) and type the IP address of the controller, it will go directly to the graphic mode for easy operation

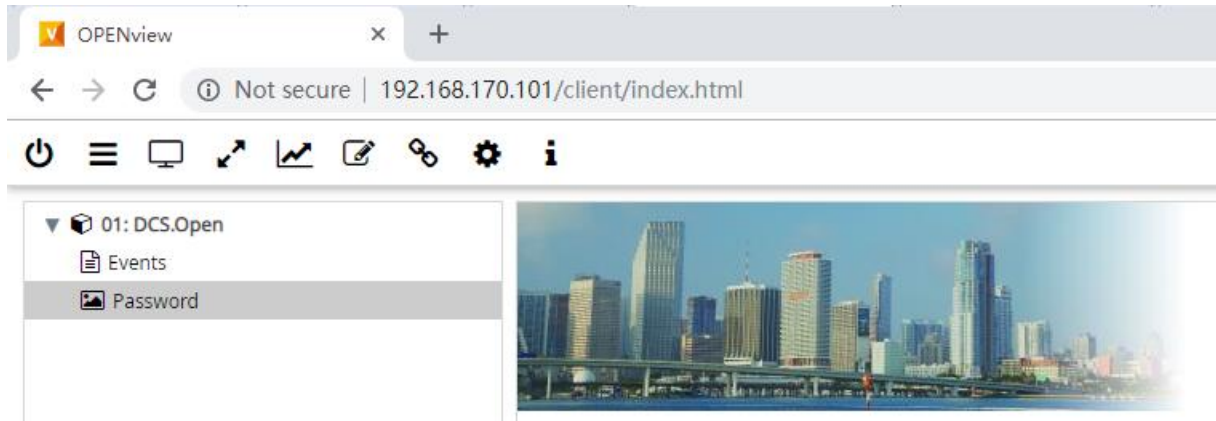


2. Sometimes, you may want to access the OPENview text mode directly. To do it, you can type "http://192.168.170.101/cgi-bin/cosmobdf.cgi?function=0" in your browser. Remember to change the IP address to your controller IP address

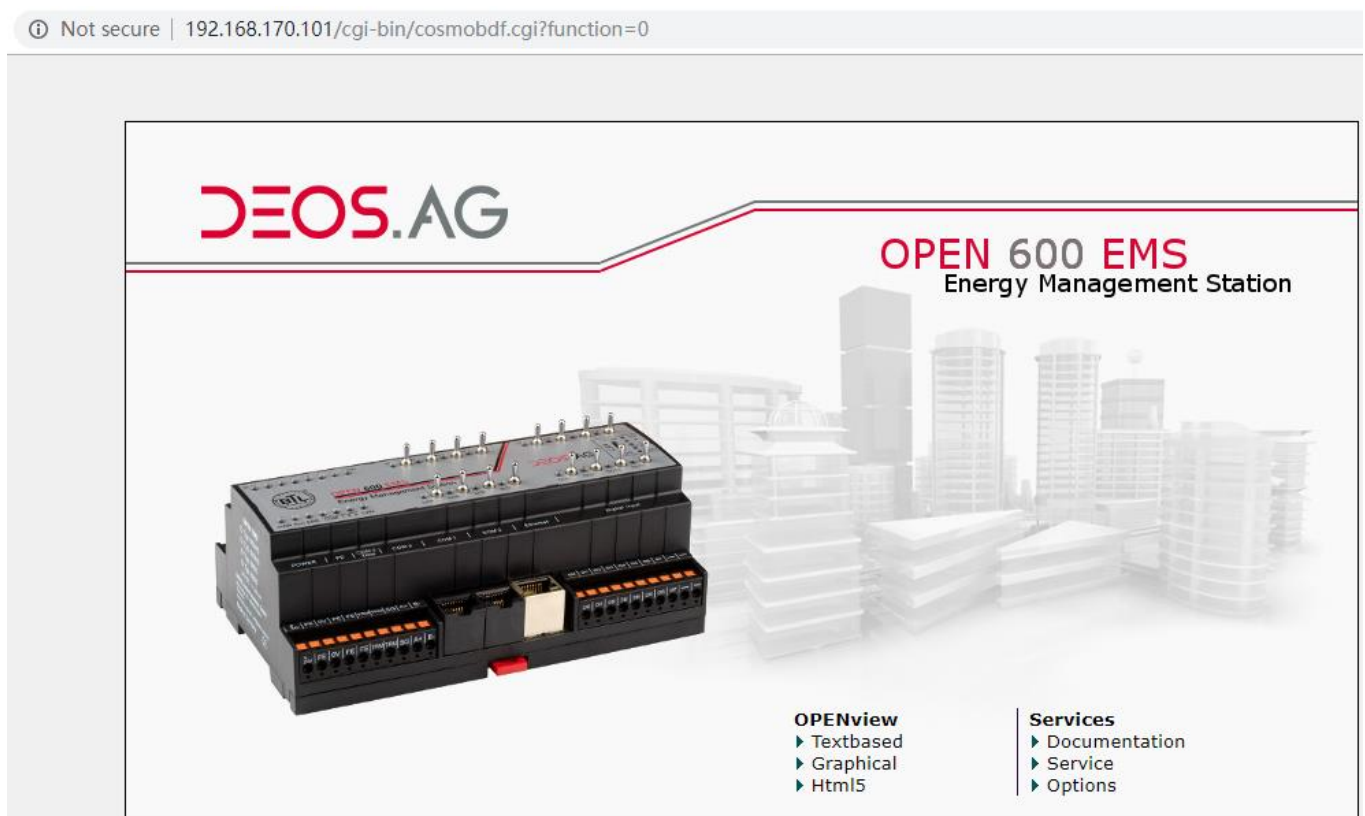


3. Click the "Textbased" button

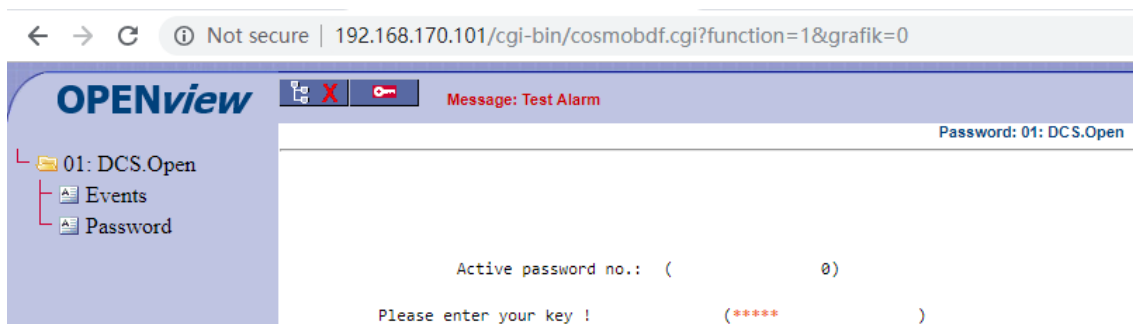

4. Enter the password and you can start the operation in text mode

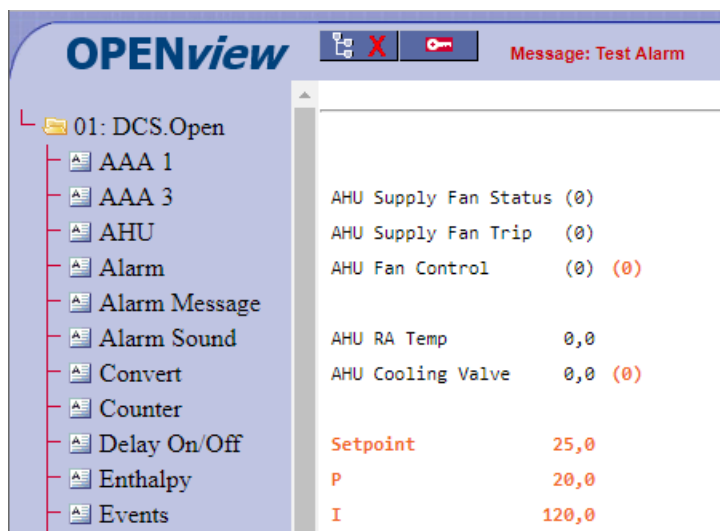

5. Another way to access text mode is to click the “Services” button and then click “Options”

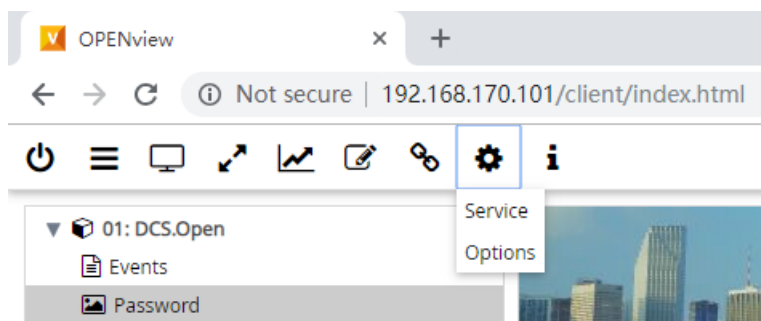

6. Then click the “Back” button, and you will be redirected to the main page (same in 2)

Change Controller Options	
Serial Number:	OPEAA04955
Device Code:	01-03-3018CF00135B-1E6C5-96F50-DDA0Z
Last Confirmation:	
Enter new Code:	<input type="text"/>
<a href="#">Submit</a>	<a href="#">Back</a>