
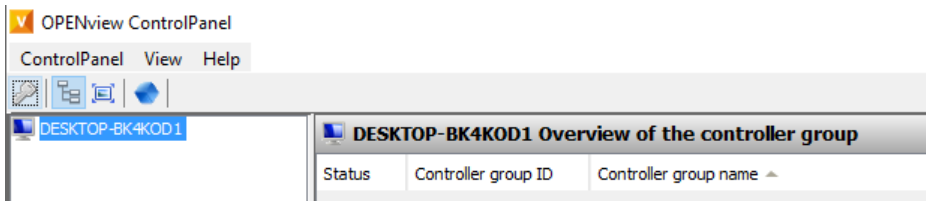

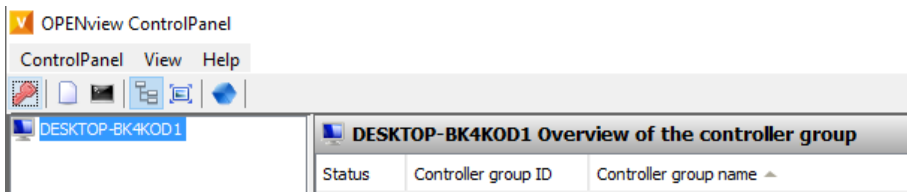


TT180805 - OPENview - Install and Setup


1. Install OPENview Control Panel and use the default settings.
2. Start OPENview Control Panel. To add a new controller, click  to login first




3. Type the ID and password, and click OK to login. The login icon will change to red color. Click  to add a new controller




4. Type the Name of the controller (prefer to use the same controller name in FUP), click “Next”

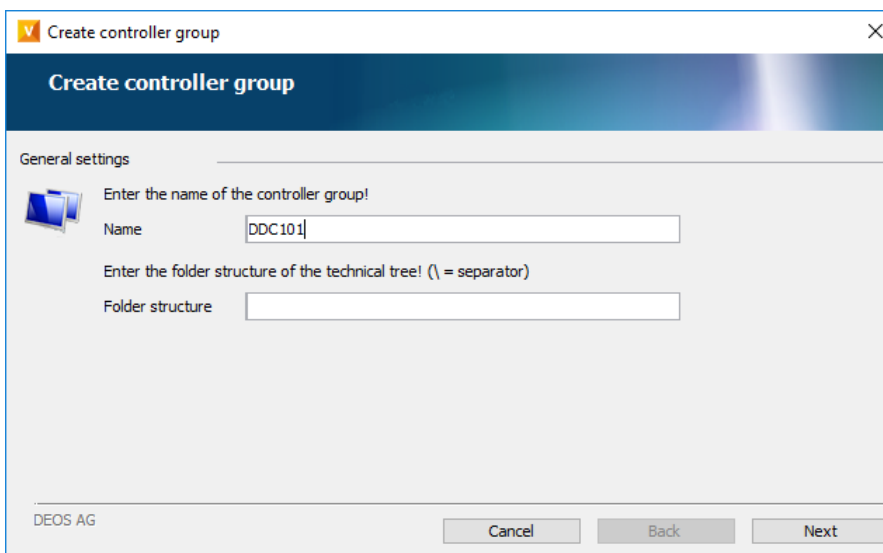


5. Type the IP address of the controller in “Host”, Click “Next”

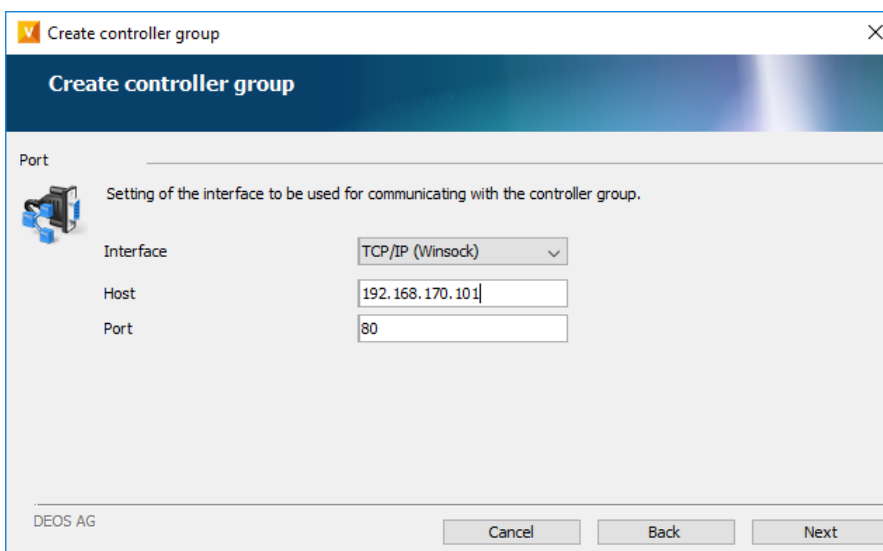


6. Click “Next” again and you will see window below. For a new controller, it is blank. Type in the controller name and click OK. If it is not blank, then leave it unchanged and click OK (unless you use it for a new project)

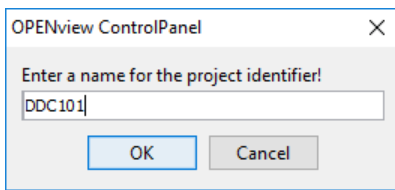


7. Tick the checkbox and click OK to save it

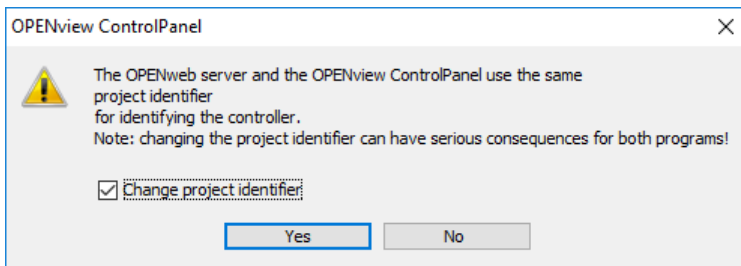


8. It will start update the controller data and graphics, wait until the icon change from  to 

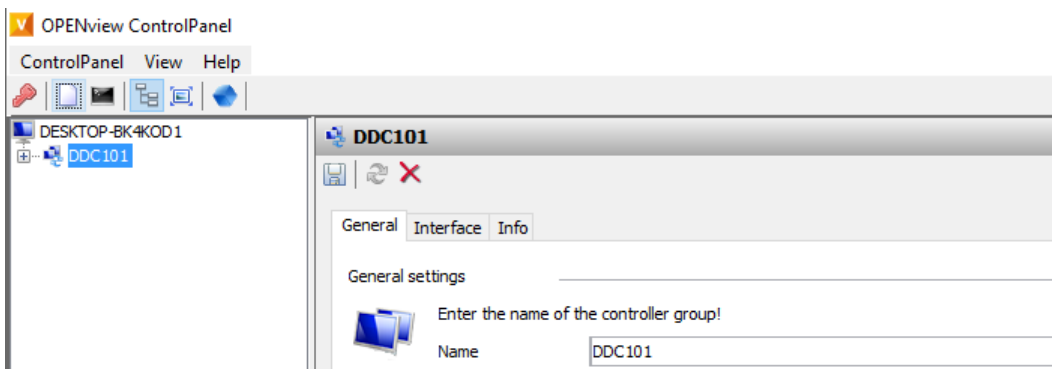

9. Now you can login the controller for monitoring and control

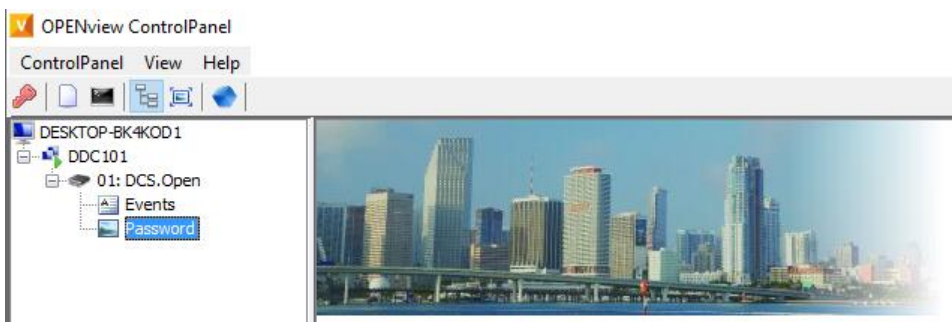

10. The icon will change to  after you upload a new program, click  to update it

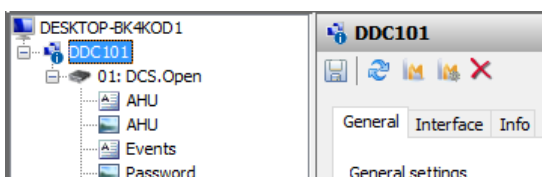

11. You can add multiple controllers to OPENview Control Panel

12. To view and configure trend, click these 2 buttons  

