



TT190405 – FUP - Controller Password Change


1. To change the controller default password in FUP, first start FUP, select the controller, right click, and select “Configuration”, “HTML”

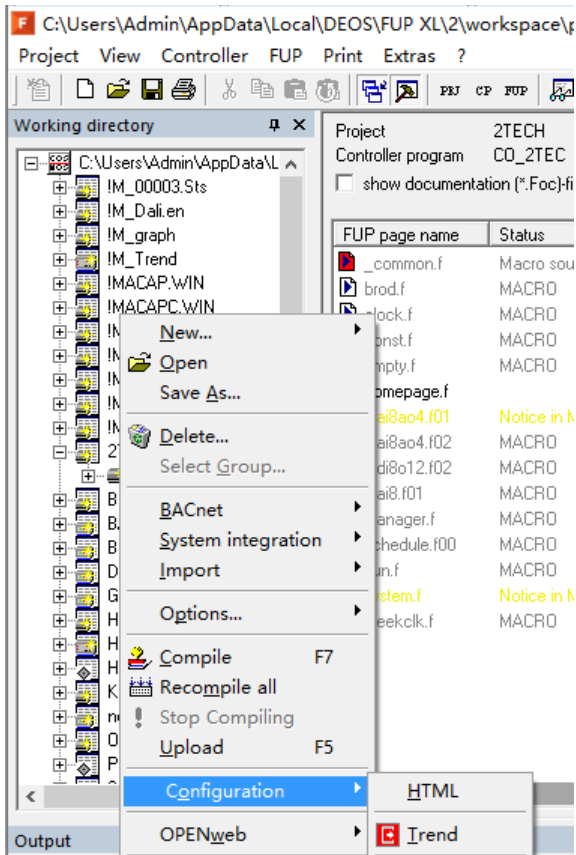


2. Double click on the controller, click “Passwords”. There are 16 password levels, from 0 to F. Normally we use level 0, 1, 2 and E. Level 0 means logout, level 1 and 2 has limited functions, and level E is full functions. We normally don't use the other password level

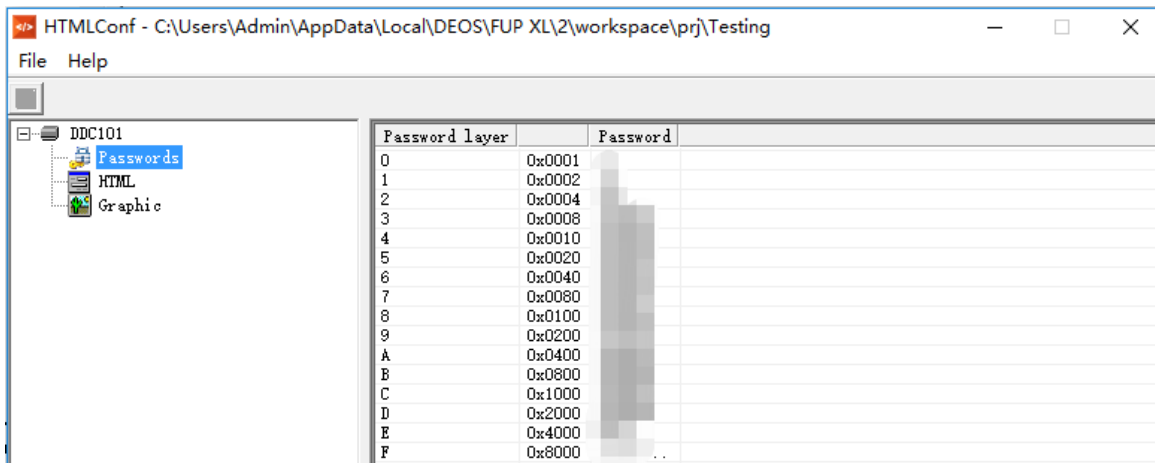


3. To change the password, double click on a level, change the password and click “OK”. Close the “HTMLConf” window and save the change

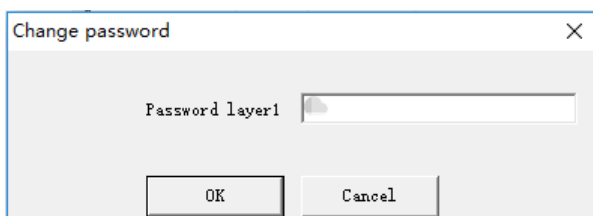

4. Compile and upload to the controller. To apply the default password in FUP to the controller, you need to do a “Preset” under “System” menu using browser access to the controller

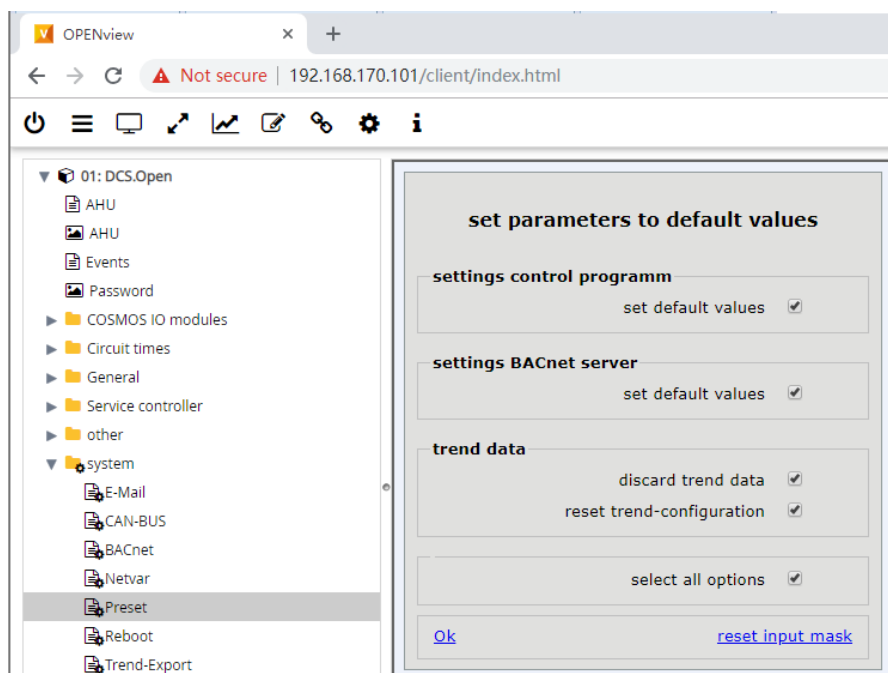

5. If you don't want to do a preset of the controller, you can also change the password directly using browser access. First login the controller as level “E”. Then click “Password” again and enter “password” and click “Login”

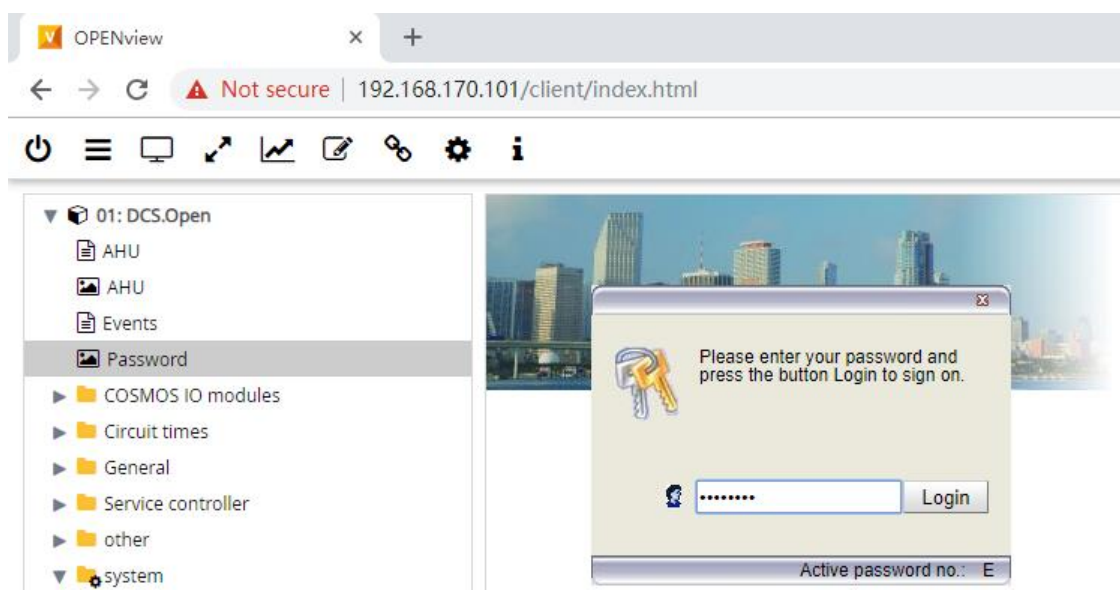

6. Now enter the old password for the password level you want to change, and enter the new password and password confirmation, and click “Accept”

A screenshot of a 'Change password.' dialog box. It has three text input fields: 'Old password' (containing three dots), 'New password' (containing two dots), and 'Password confirmation' (containing two dots and a cursor). Below the fields are two buttons: 'Accept' and 'Cancel'.

7. If you forgot the password you changed using browser access, you can reset it to the default password in FUP. First login the controller as level "E". Then click "Password" again and enter " 0" (2 space and a 0) and click "Login". After that you will see the message "The default passwords were set"

