



DDJ-1000: Pad modes

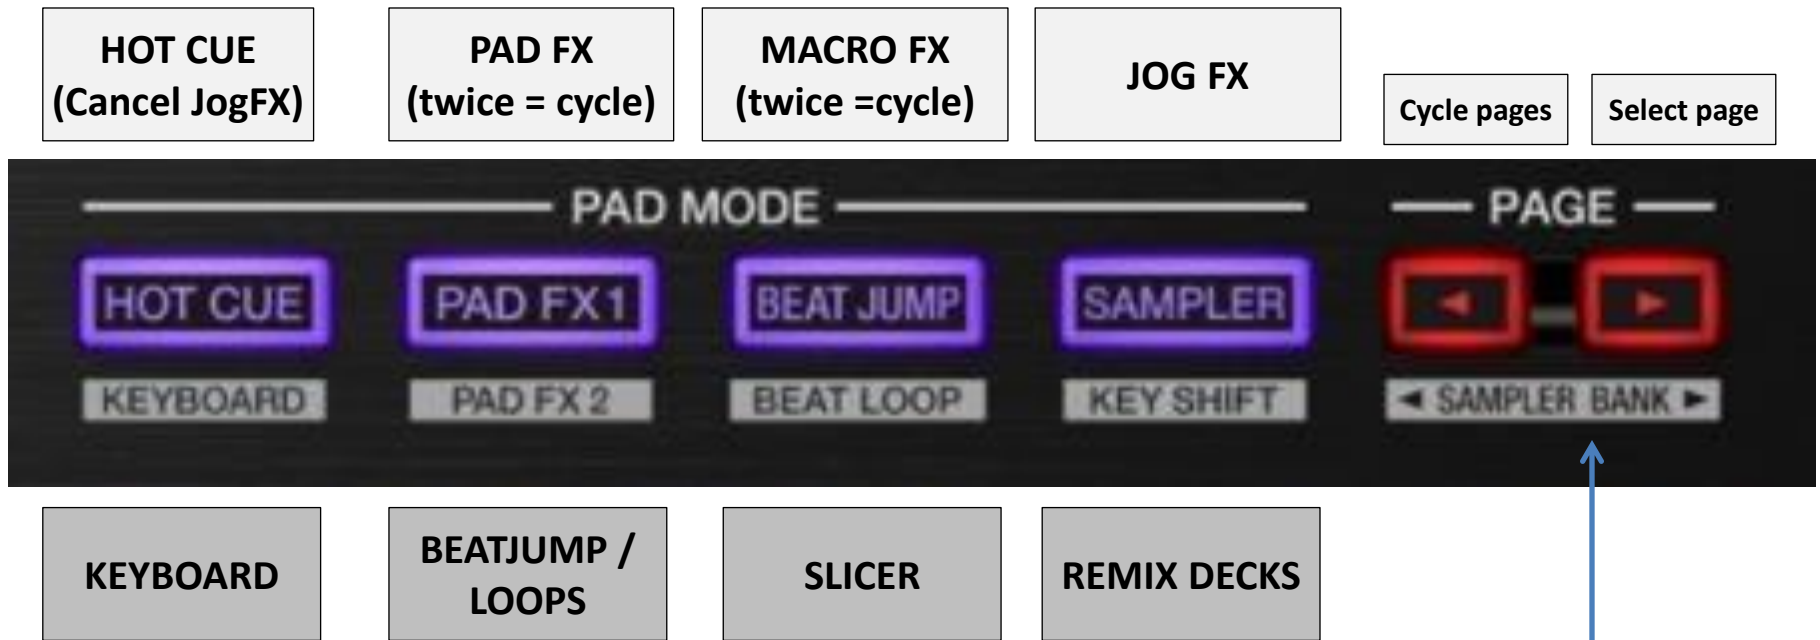

Most modes have sub-pages:

- Press “mode” to cycle the top 2 pages
- Press “<” to cycle all pages one by one
- Press “>” to select a specific page
- Press “shift” to select a specific page


DDJ-1000: Jog Screens

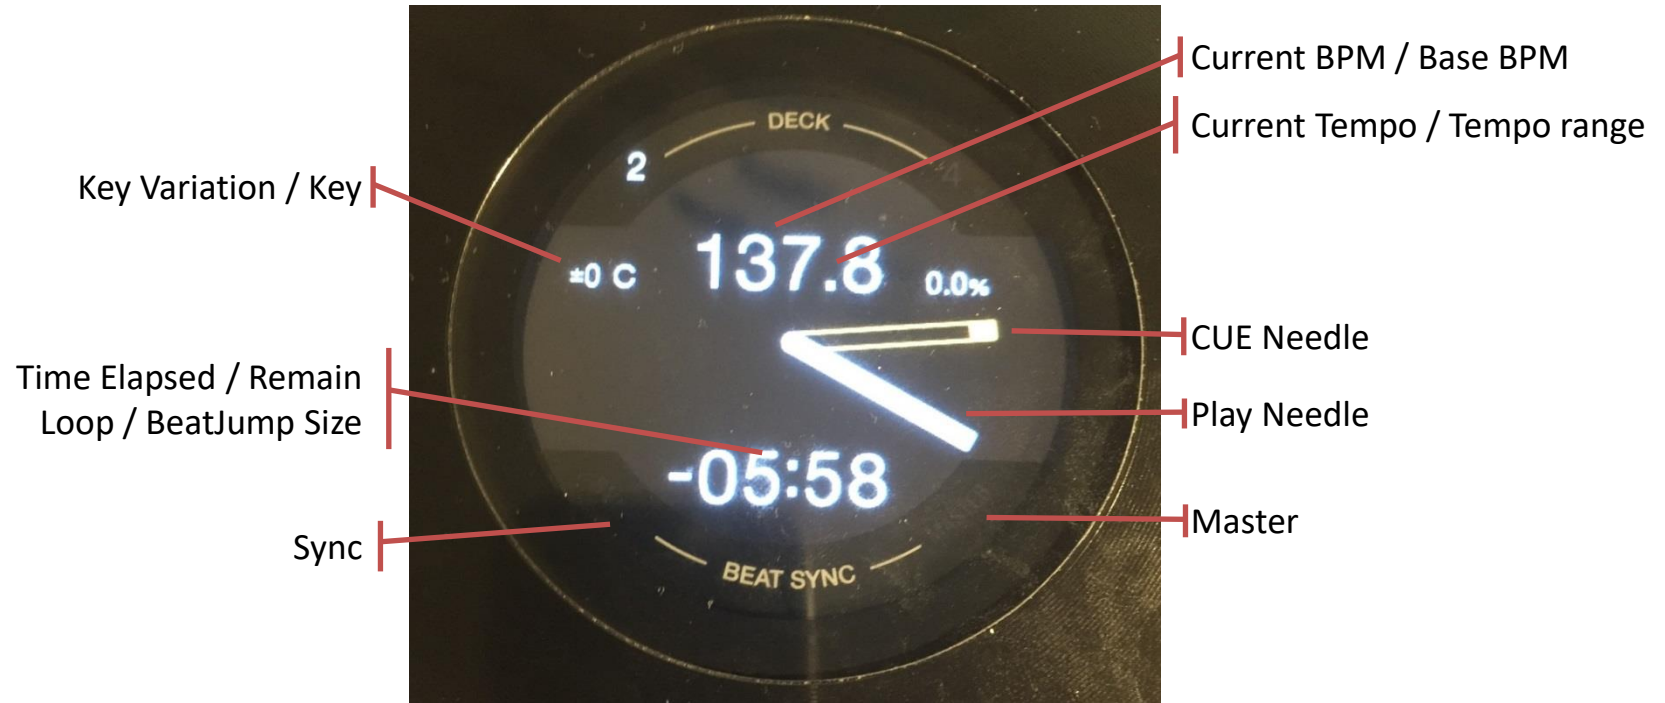

Preview base BPM,
Tempo range and
loop sizes



+

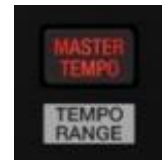

Set Tempo range




+



Screens Reset




+

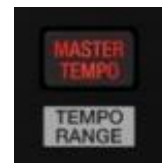

Set elapsed/remain

DDJ-1000: Jog Screens and LEDs

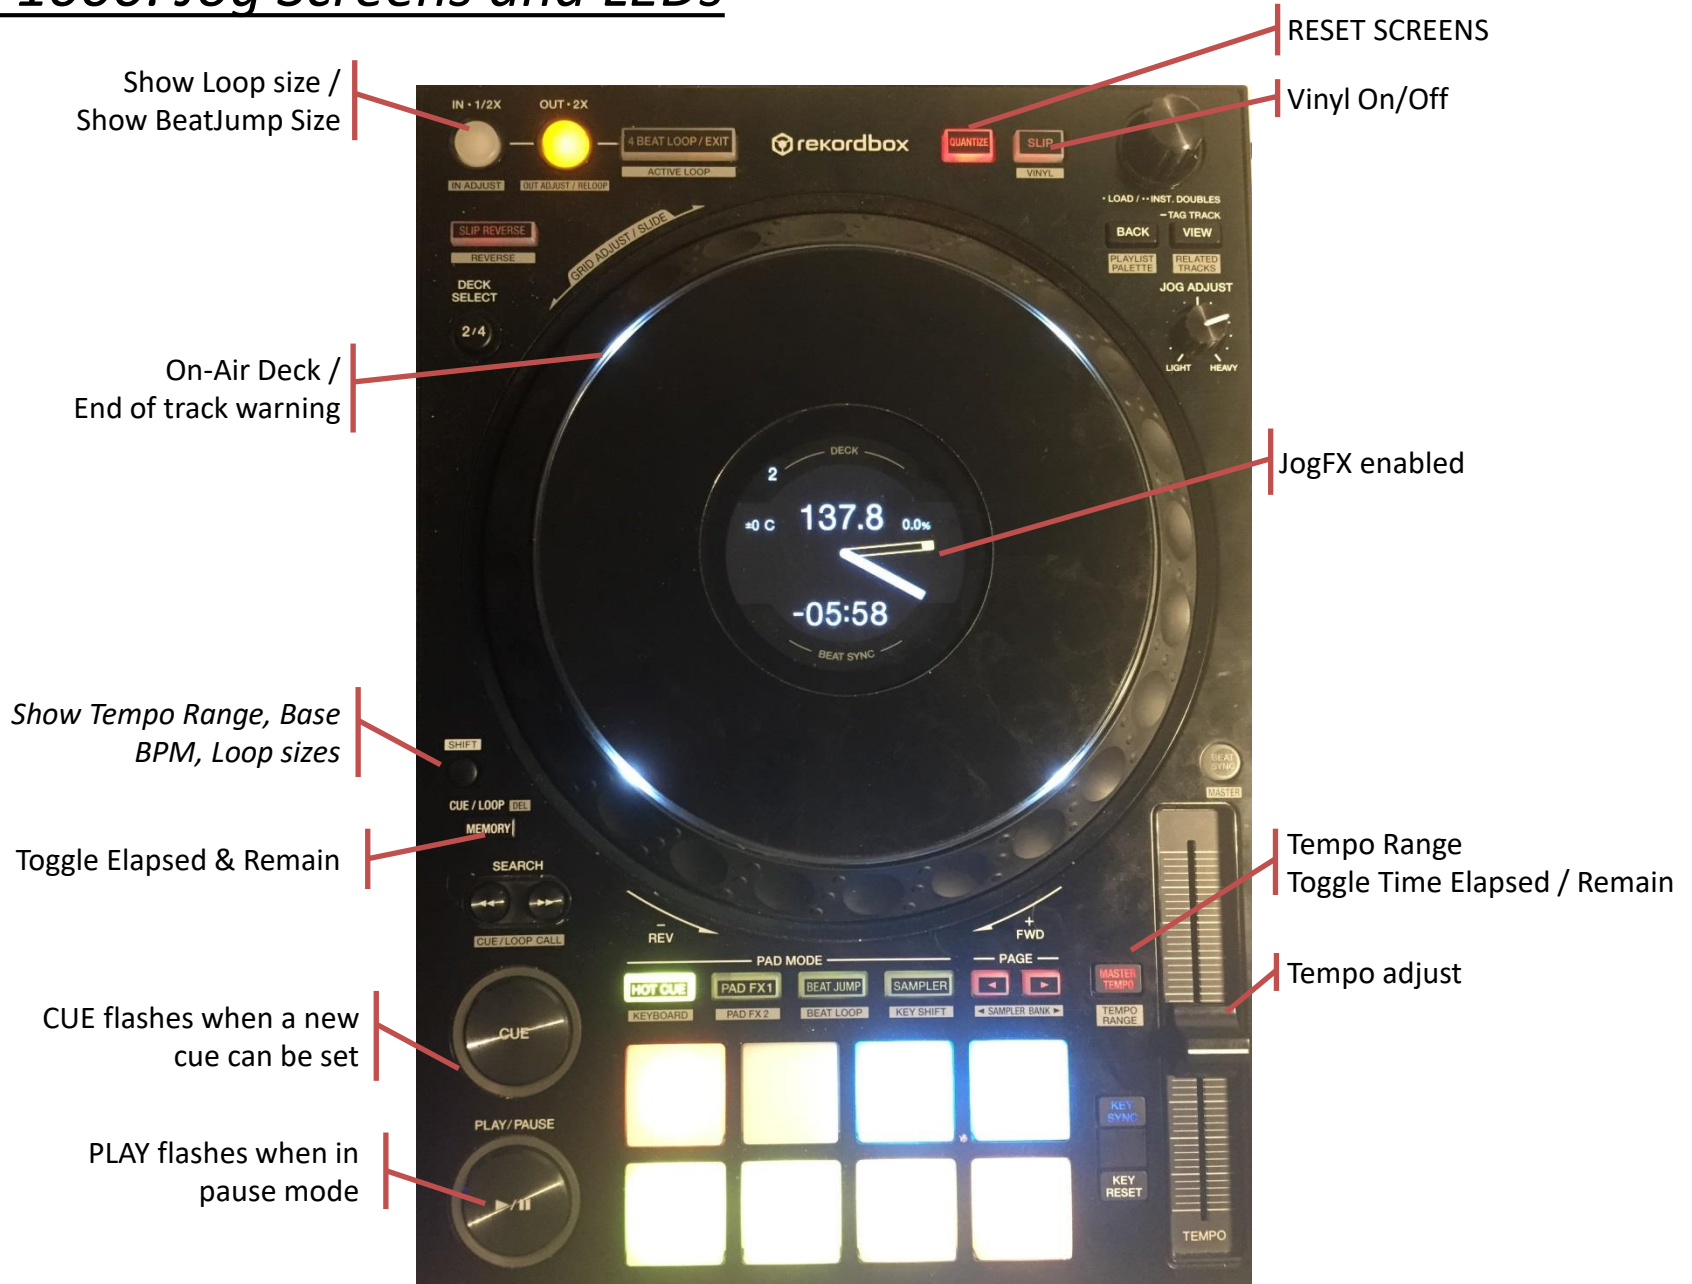

DDJ-1000: General overview - Deck

4-beat Loop /
Active Loop / Move 1-beat

LoopSize / MoveSize /
BeatJump

TP3 Slip Reverse

Layout change

JogFX / Quick Search
CDJ / Grid Adjust

Main shift
Second shift

Not used

Track begin

Vinyl Stop /
Release FX

Quantize + Snap (toggle)

CDJ mode (per deck)

List Browse / Tree Browse
Zoom / Preview player

Only Browser (toggle)

Preview Player
(using browser)

Sync Toggle / Sync Off / Master


Keylock / 6%→10%→16%→100%

BPM Slide / Set Marker / Auto




Key reset / BPM Adjust
Reset Marker / Lock



DDJ-1000: General overview - Mixer

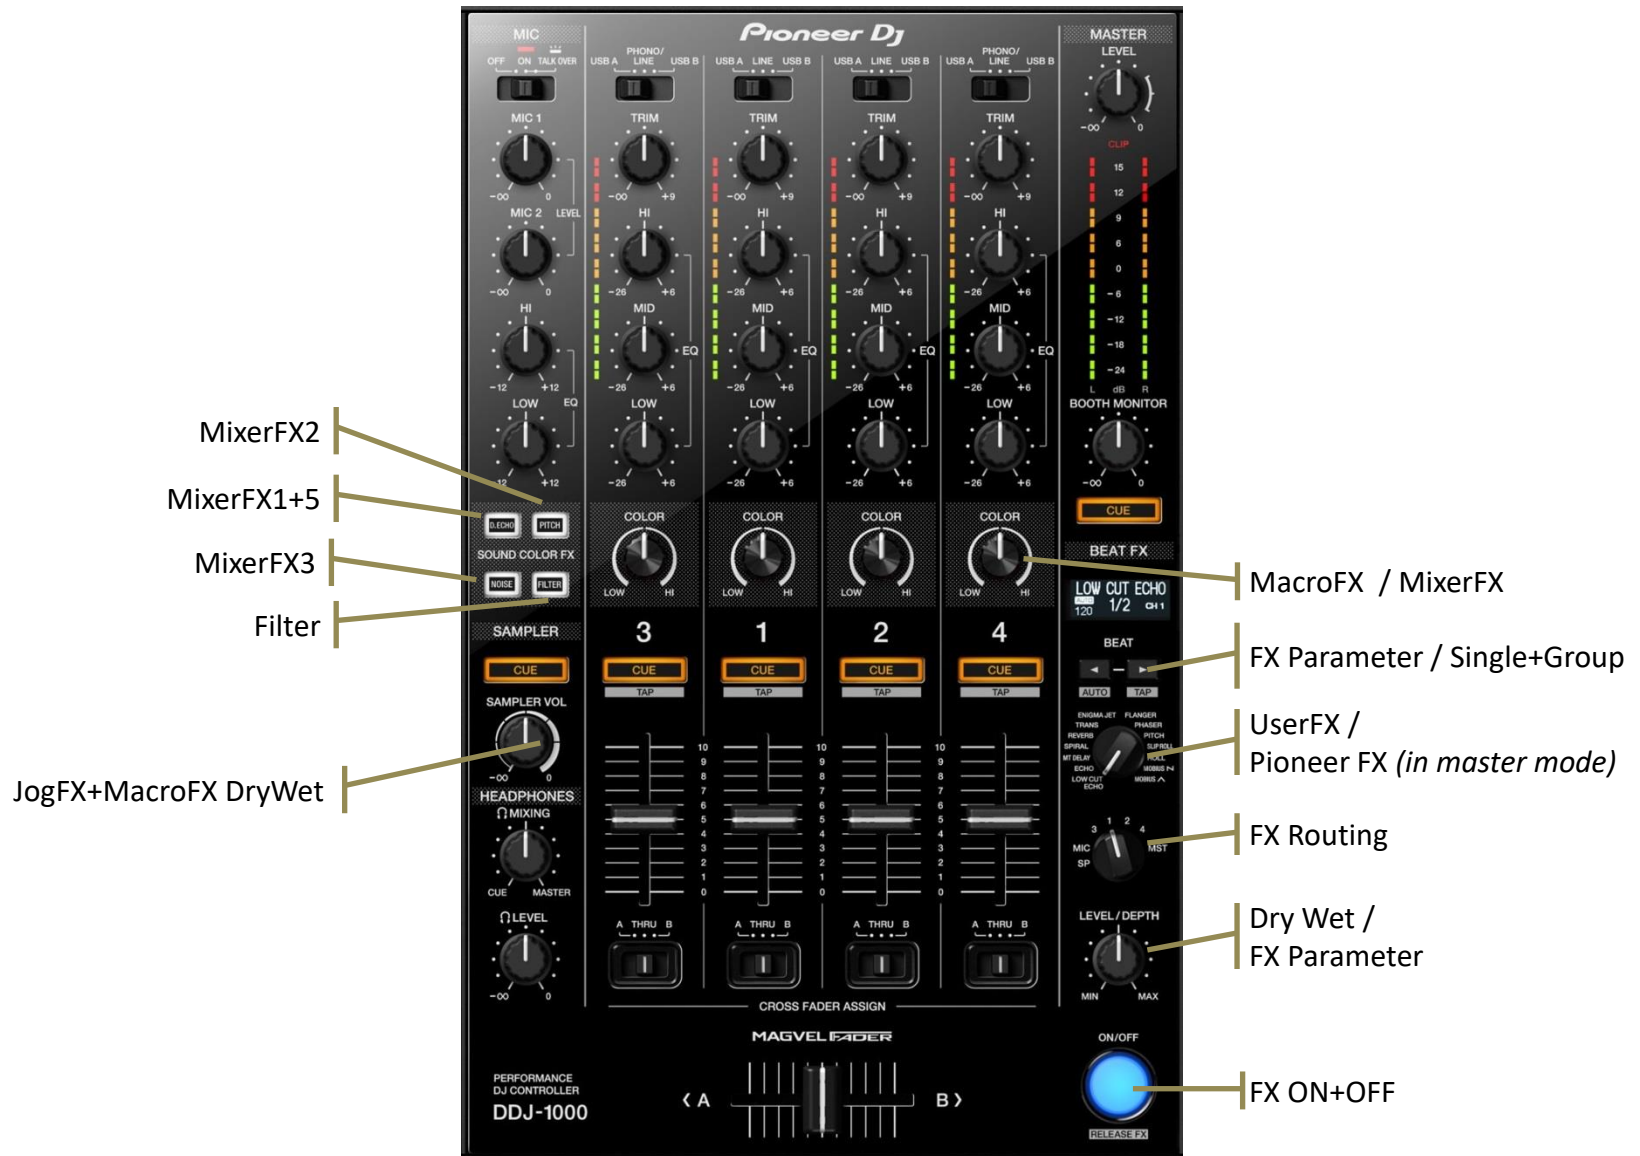

DDJ-1000: MixerFX and UserFX

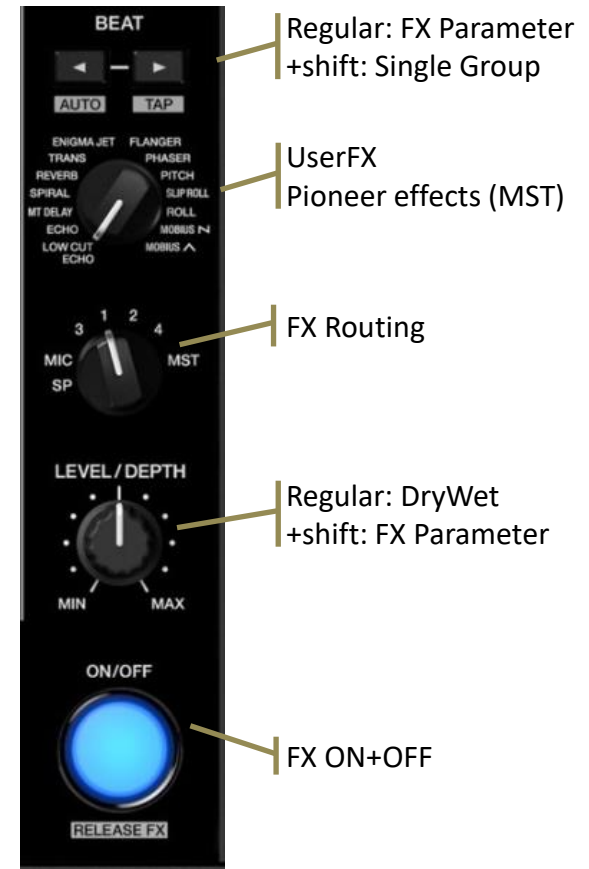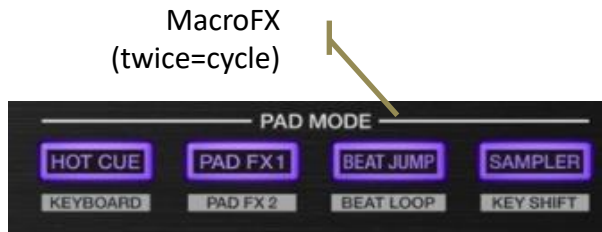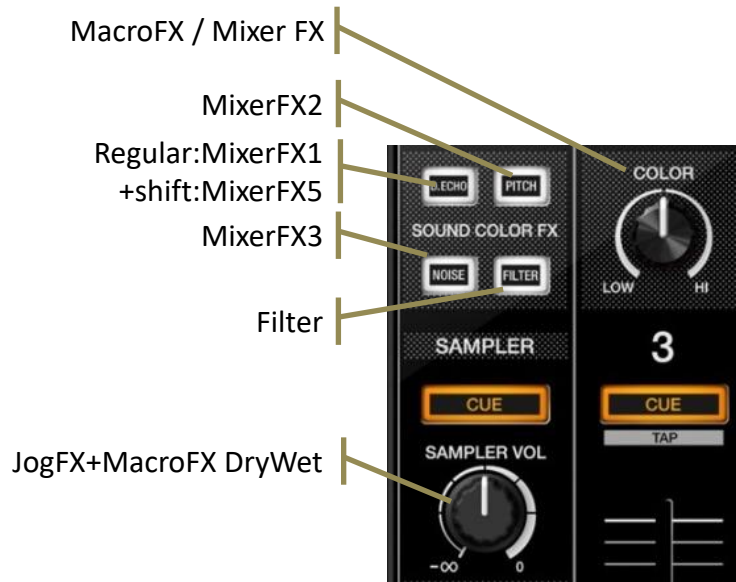

DDJ-1000: Loop Section

Regular: Loop In
Loop Engaged: 1/2x

Regular: Loop Out
Loop Engaged: 2x

4-beat Loop
Loop Exit



Whole loop adjust mode
+memory: Loop In adjust mode

Loop out adjust mode

Loop activate



+



Select 1/2x

Select 2x

AutoLoop
(selected size)




+



DDJ-1000: BeatJump Section

Select Size 1/2

Select Size 2x

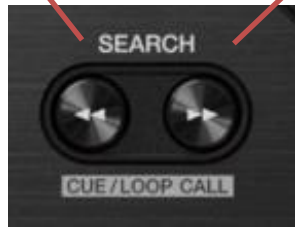


Beatjump left
Loop move left

Beatjump right
Loop move right



+

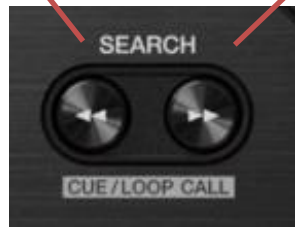


Beatjump 1-beat left
Loop 1-beat left

Beatjump 1-beat right
Loop 1-beat right



+

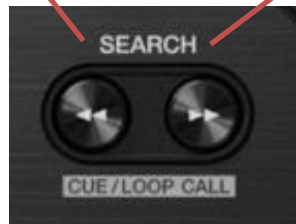

DDJ-1000: Sync Section

TRAKTOR MODE

SERATO MODE



Toggle ON/OFF


Phase Sync



+



Set master deck (always)

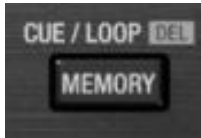


+



Sync Off (always)



+

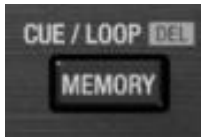

+



Toggle Traktor/Serato
sync mode

DDJ-1000: Browser



Turn: Browse List
Press: Load Track

Load Preview player

Only browser



+



Turn: Scroll Tree
Press: Expand Folder

Scroll Favorites

Goto Collection



+



Turn: Zoom deck
Press: Zoom reset



+



+



Press: Unload

DDJ-1000: Transport

Main shift


Second shift



regular: Cue
+shift: Move to front



regular: Pause
+shift: Vinyl quick stop
+memory: Vinyl long stop

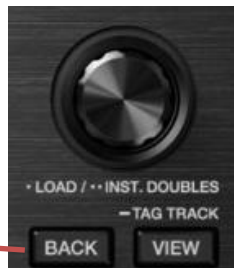

+shift: Unload deck

DDJ-1000: Beatgrid

+shift: BPM set
+Jog: grid slide
+KeyReset: BPM Auto

Regular: key reset
+shift: BPM delete
+Jog: grid adjust
+KeySync: Analysis Lock



DDJ-1000: Mapping Settings



+




+



Toggle Traktor/Serato sync mode



+

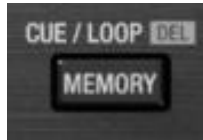

+




Toggle Monitor cue external/internal



+



Screens Reset

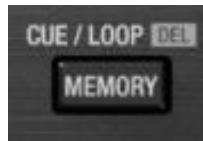


+



Cross-fader curve select



+

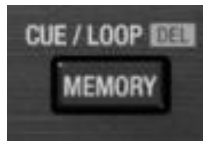


+



Deck Unload




+

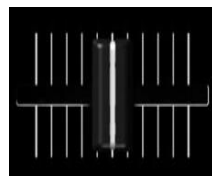

Crossfader Curve Adjust


DDJ-1000: Pad modes

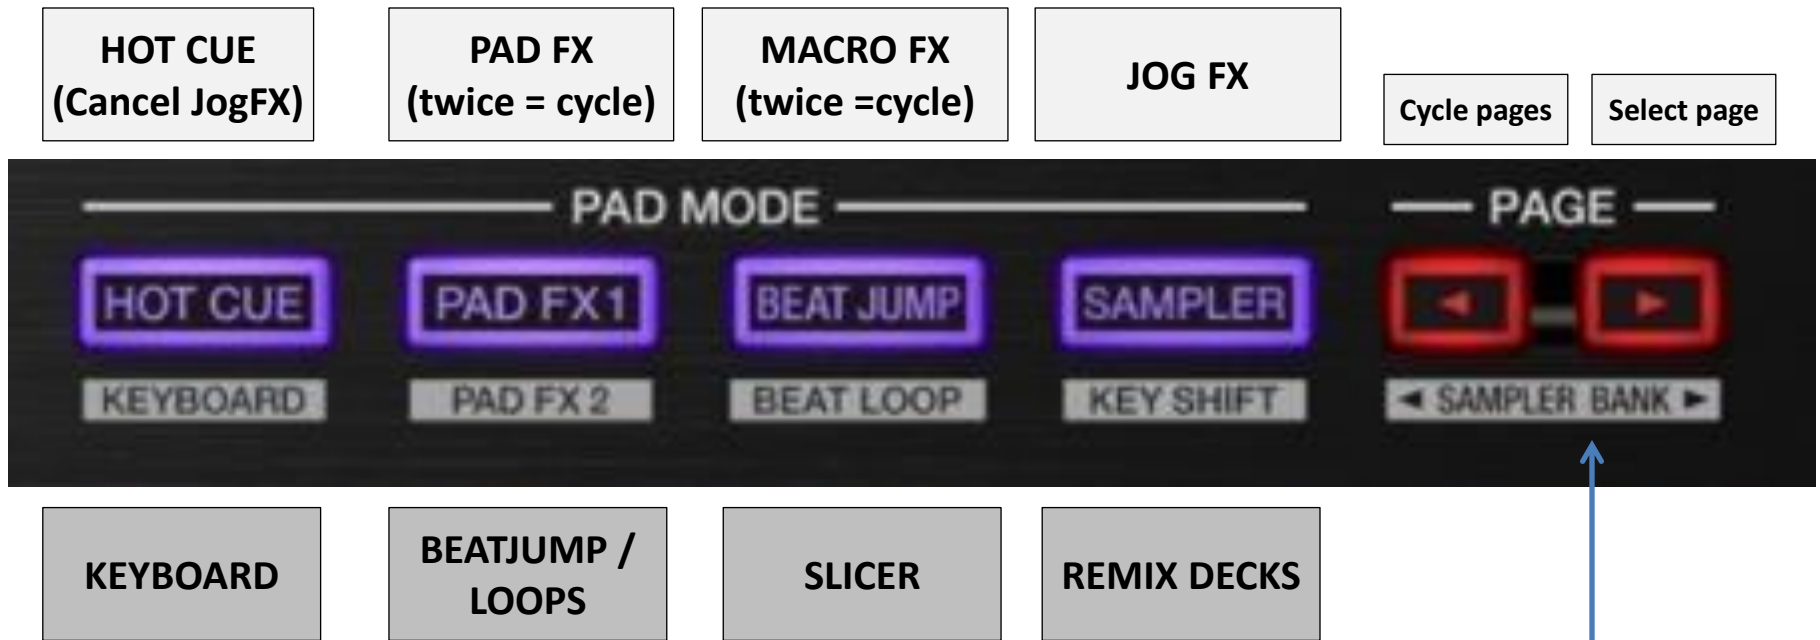

Most modes have sub-pages:

- Press “mode” to cycle the top 2 pages
- Press “<” to cycle all pages one by one
- Press “>” to select a specific page
- Press “shift” to select a specific page

DDJ-1000 mode #1: HotCues

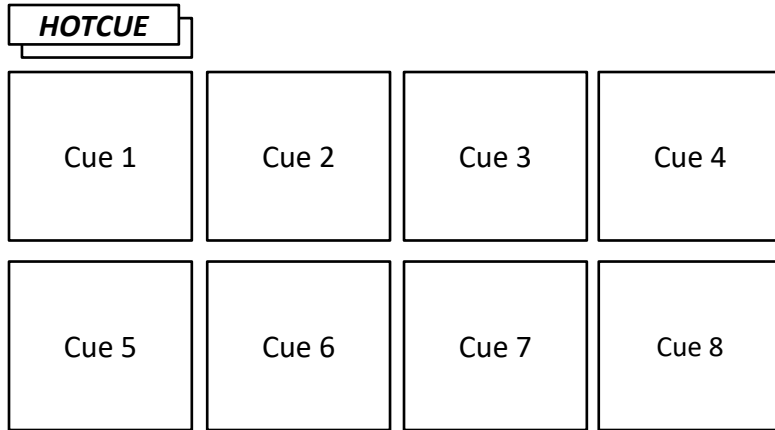

- Use shift to delete hot cues
- Hotcues move temporary cue as well

DDJ-1000 mode #2: PadFX and Rolls

Rolls

Roll 1/8	Roll 1/4	Roll 1/2	Roll 1/1
Roll 1/8 (NQ)	Roll 1/4 (NQ)	Roll 1/2 (NQ)	Roll 1/1 (NQ)

PadFX 2

Delay #1	Delay #2	Delay / BeatSlicer	Flanger Flux
Lofi / Slicer #1	Lofi / Slicer #2	BeatSlicer	Release FX (toggle)



PadFX 1

Gater #1	Gater #2	Gater #3	Peak Filter
Beat Masher #1	Beat Masher #2	Zzzurp	Release FX (toggle)

PadFX 3

Filter Pulse	LaserSlicer	Bass-O-Matic #1	Bass-O-Matic #2
Bouncer / EventH	Bouncer	EventH	Release FX (toggle)



- Use mode button to cycle top two pages
- Use “<” arrow to cycle all pages
- Use “>” or “shift” to select a specific page

DDJ-1000 mode #3: MixerFX and MacroFX

Macro FX1

MacroFX: WormHole	MacroFX: PolarWind	MacroFX: FlightTest	MacroFX: LaserSlicer
BeatFX: Delay T3	BeatFX: Flanger	BeatFX: Reverb	Toggle On/OFF

MacroFX2

Event Horizon	Zzzuurp	Dark Matter	Bass O Matic
Strrrretch (Slow)	Strrrretch (Fast)	Granu Phase	Toggle On/OFF

MacroFX / Mixer FX

MixerFX2

Regular:MixerFX1
+shift:MixerFX5

MixerFX3

Filter



MixerFX

MixerFX: Flanger	MixerFX: TimeGater	MixerFX: Noise	MixerFX: Crush
Filter			



- Use mode button to cycle top two pages
- Use "<" arrow to cycle all pages
- Use ">" or "shift" to select a specific page



DDJ-1000 mode #4: JogFX

JOG FX			
Beatmasher Digital filter Gater	Beatmasher Filter Reverb	EventHorizon (none) Gater	Gater Beatmasher Reverb
Flanger (None) Gater	Beatmasher Peak filter Gater	FormatFilter Peak filter Flightest	



- Enter jogFX mode on mode4 (jog will blink)
- Touch jog to apply FX
- Turn jog to change FX
- Release jog to stop FX
- Call “hotcues” to cancel jogFX (=scratch mode)





DDJ-1000 mode #5: Tone Play

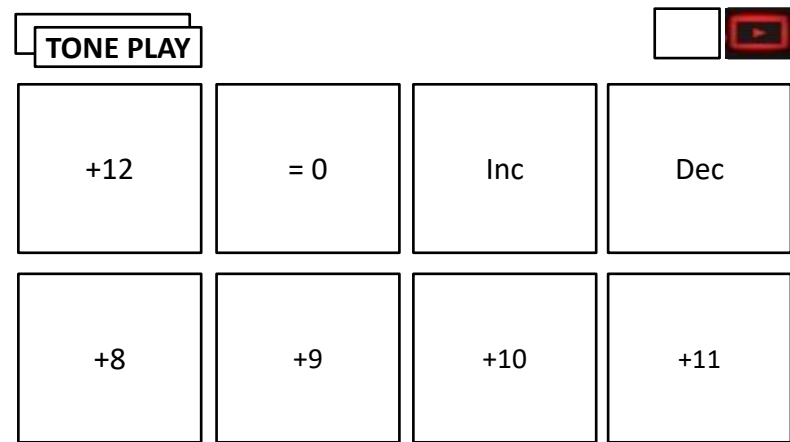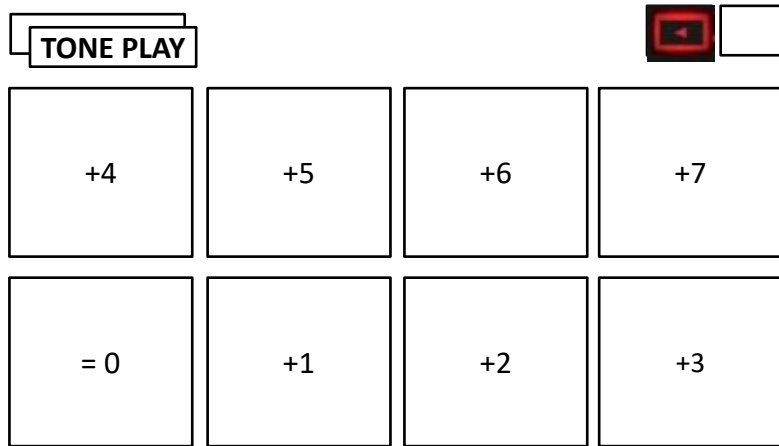

Use shift to choose between 3x modes:

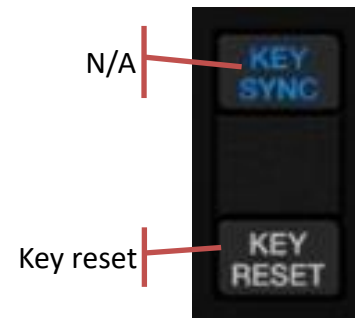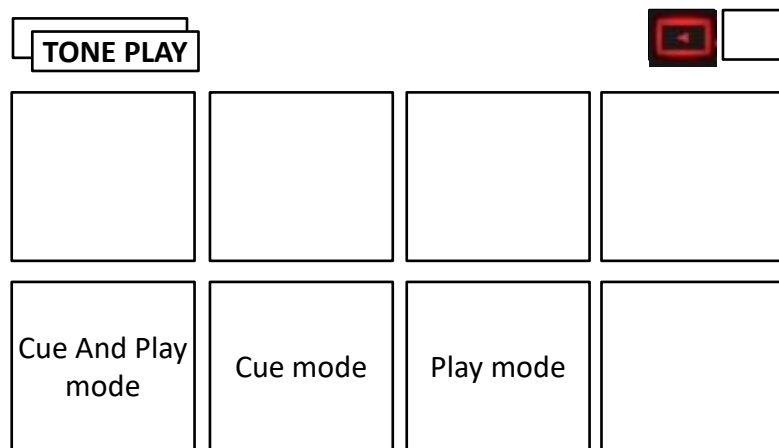


DDJ-1000 mode #6: BeatJumps and Loops

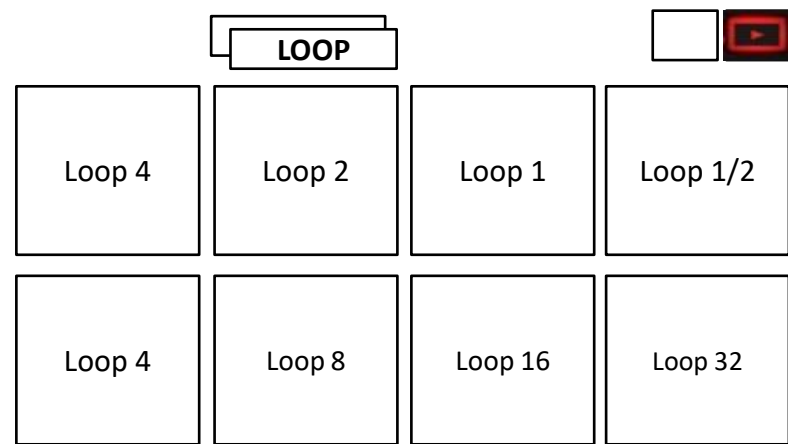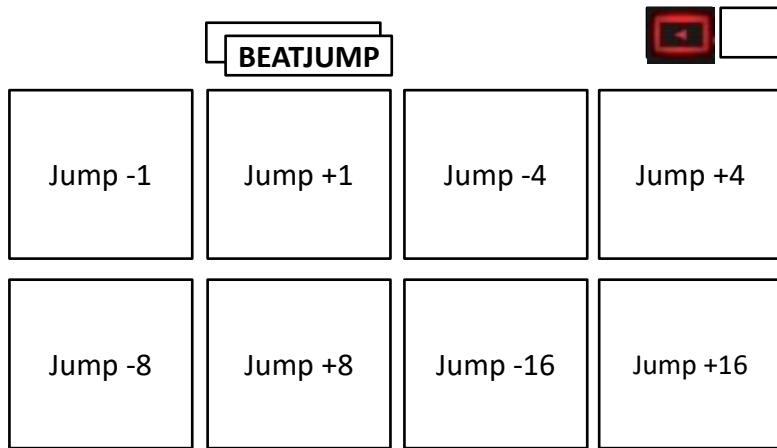


- Use "<" arrow to select beatjump mode
- Use ">" arrow to select loop mode

DDJ-1000 mode #7: Slicer

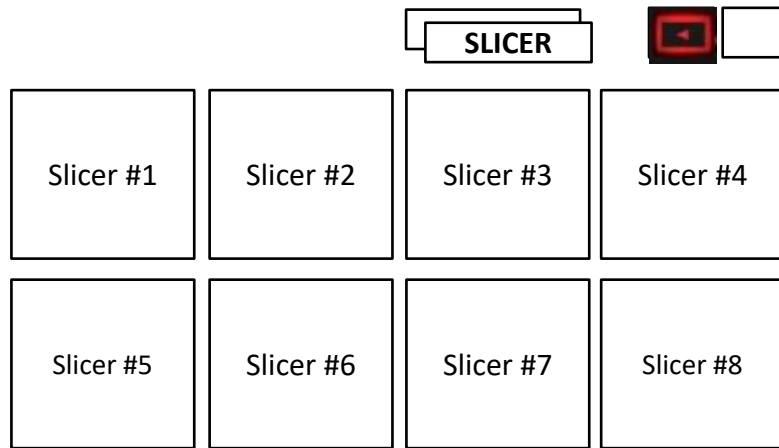

Use shift to choose between 3x modes:

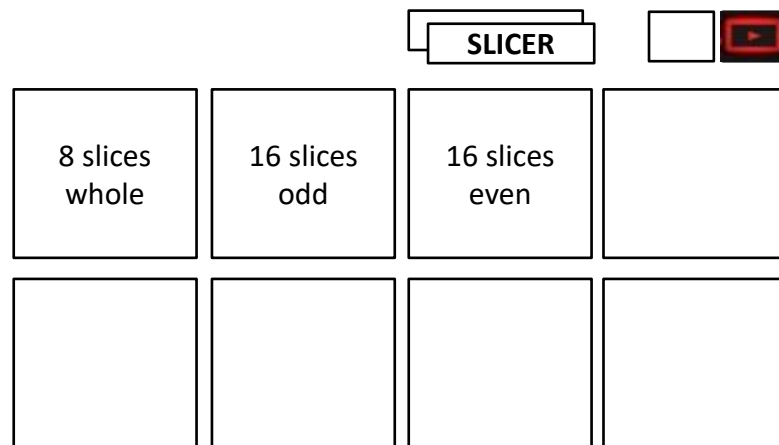

DDJ-1000 mode #8: Sampler

SAMPLER



Cell #1	Cell #2	Cell #3	Cell #4
Cell #5	Cell #6	Cell #7	Cell #8

Use shift to mute / Toogle 1-shot

SAMPLER



Mute #1	Mute #2	Mute #3	Mute #4
Loop / 1-shot #1	Loop / 1-shot #2	Loop / 1-shot #3	Loop / 1-shot #4