



OpenCore

Reference Manual (0.5.~~8~~.9)

[2020.05.08]

1 Introduction

This document provides information on OpenCore user configuration file format used to setup the correct functioning of macOS operating system. It is to be read as the official clarification of expected OpenCore behaviour. All deviations, if found in published OpenCore releases, shall be considered documentation or implementation bugs, and are requested to be reported through Acidanthera Bugtracker. All other sources or translations of this document are unofficial and may contain errors.

This document is structured as a specification, and is not meant to provide a step by step algorithm for configuring end-user board support package (BSP). Any third-party articles, tools, books, etc., providing such material are prone to their authors' preferences, tastes, this document misinterpretation, and essential obsolescence. In case you still use these sources, for example, OpenCore Desktop Guide (parent link), please ensure following this document for every made decision and judging its consequences. Regardless of the sources used you are required to fully understand every dedicated OpenCore configuration option and concept prior to reporting any issues in Acidanthera Bugtracker.

1.1 Generic Terms

- **plist** — Subset of ASCII Property List format written in XML, also known as XML plist format version 1. Uniform Type Identifier (UTI): `com.apple.property-list`. Plists consist of **plist objects**, which are combined to form a hierarchical structure. Due to plist format not being well-defined, all the definitions of this document may only be applied after plist is considered valid by running `plutil -lint`. External references: <https://www.apple.com/DTDs/PropertyList-1.0.dtd>, `man plutil`.
- **plist type** — plist collections (**plist array**, **plist dictionary**, **plist key**) and primitives (**plist string**, **plist data**, **plist date**, **plist boolean**, **plist integer**, **plist real**).
- **plist object** — definite realisation of **plist type**, which may be interpreted as value.
- **plist array** — array-like collection, conforms to `array`. Consists of zero or more **plist objects**.
- **plist dictionary** — map-like (associative array) collection, conforms to `dict`. Consists of zero or more **plist keys**.
- **plist key** — contains one **plist object** going by the name of **plist key**, conforms to `key`. Consists of printable 7-bit ASCII characters.
- **plist string** — printable 7-bit ASCII string, conforms to `string`.
- **plist data** — base64-encoded blob, conforms to `data`.
- **plist date** — ISO-8601 date, conforms to `date`, unsupported.
- **plist boolean** — logical state object, which is either true (1) or false (0), conforms to `true` and `false`.
- **plist integer** — possibly signed integer number in base 10, conforms to `integer`. Fits in 64-bit unsigned integer in two's complement representation, unless a smaller signed or unsigned integral type is explicitly mentioned in specific **plist object** description.
- **plist real** — floating point number, conforms to `real`, unsupported.
- **plist metadata** — value cast to data by the implementation. Permits passing **plist string**, in which case the result is represented by a null-terminated sequence of bytes (aka C string), **plist integer**, in which case the result is represented by 32-bit little endian sequence of bytes in two's complement representation, **plist boolean**, in which case the value is one byte: 01 for `true` and 00 for `false`, and **plist data** itself. All other types or larger integers invoke undefined behaviour.

3 Setup

3.1 Directory Structure

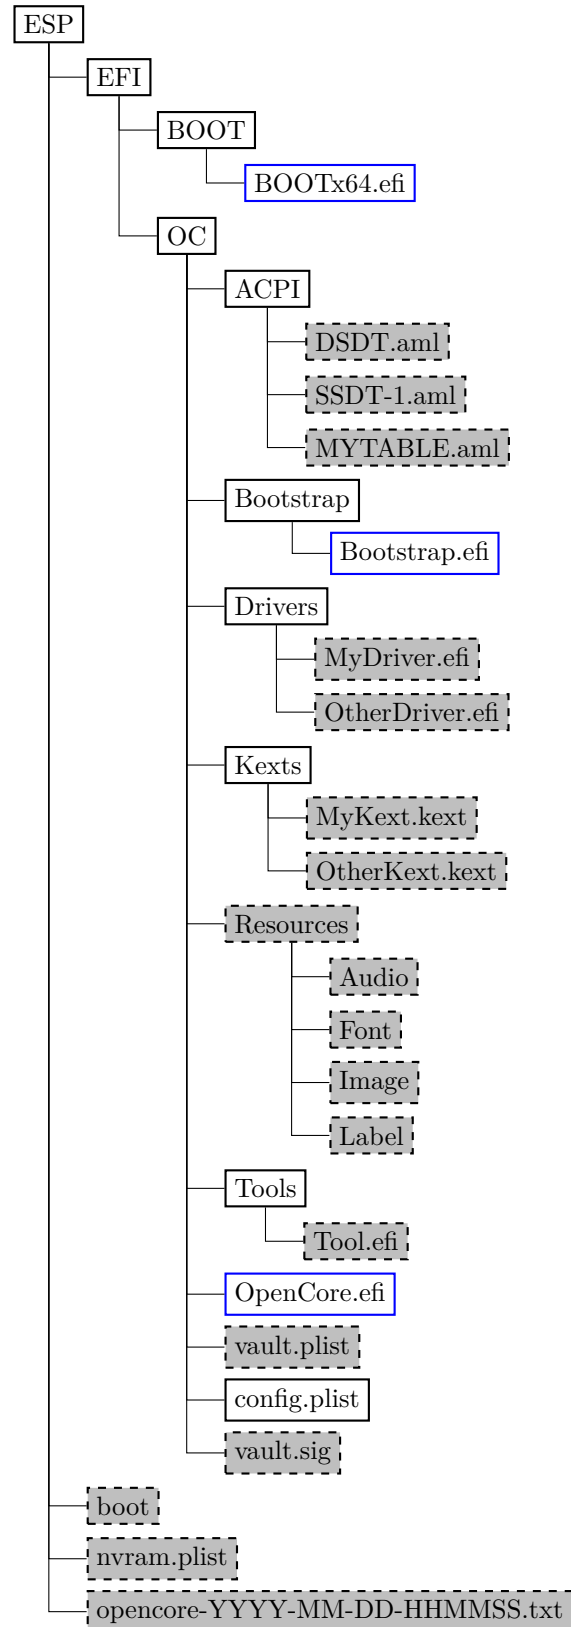


Figure 1. Directory Structure

When directory boot is used the directory structure used should follow the description on Directory Structure figure.

To compile with XCODE5, besides Xcode, one should also install NASM and MTOC. The latest Xcode version is recommended for use despite the toolchain name. Example command sequence may look as follows:

```
git clone https://github.com/acidanthera/udk UDK
cd UDK
git clone https://github.com/acidanthera/DuetPkg
git clone https://github.com/acidanthera/EfiPkg
git clone https://github.com/acidanthera/MacInfoPkg
git clone https://github.com/acidanthera/OpenCorePkg
source edksetup.sh
make -C BaseTools
build -a X64 -b RELEASE -t XCODE5 -p OpenCorePkg/OpenCorePkg.dsc
```

Listing 1: Compilation Commands

For IDE usage Xcode projects are available in the root of the repositories. Another approach could be Sublime Text with EasyClangComplete plugin. Add `.clang_complete` file with similar content to your UDK root:

```
-I/UefiPackages/MdePkg
-I/UefiPackages/MdePkg/Include
-I/UefiPackages/MdePkg/Include/X64
-I/UefiPackages/MdeModulePkg
-I/UefiPackages/MdeModulePkg/Include
-I/UefiPackages/MdeModulePkg/Include/X64
-I/UefiPackages/DuetPkg/Include
-I/UefiPackages/EfiPkg
-I/UefiPackages/EfiPkg/Include
-I/UefiPackages/EfiPkg/Include/X64
-I/UefiPackages/AppleSupportPkg/Include
-I/UefiPackages/OpenCorePkg/Include
-I/UefiPackages/OvmfPkg/Include
-I/UefiPackages/MacInfoPkg/Include
-I/UefiPackages/UefiCpuPkg/Include
-IInclude
-include
/UefiPackages/MdePkg/Include/Uefi.h
-fshort-wchar
-Wall
-Wextra
-Wno-unused-parameter
-Wno-missing-braces
-Wno-missing-field-initializers
-Wno-tautological-compare
-Wno-sign-compare
-Wno-varargs
-Wno-unused-const-variable
-DOC_TARGET_NOOPT=1
-DNO_MSABI_VA_FUNCS=1
```

Listing 2: ECC Configuration

Warning: Tool developers modifying `config.plist` or any other OpenCore files must ensure that their tool checks for `opencore-version` NVRAM variable (see Debug Properties section below) and warn the user if the version listed is unsupported or prerelease. OpenCore configuration may change across the releases and the tool shall ensure that it carefully follows this document. Failure to do so may result in this tool to be considered as malware and blocked with all possible means.

8 Misc

8.1 Introduction

This section contains miscellaneous configuration ~~entries for OpenCore behaviour that does not go to any other sections~~ affecting OpenCore operating system loading behaviour as well as other entries, which do not go to any other section.

OpenCore tries to follow “bless” model also known as “Apple Boot Policy”. The primary specialty of “bless” model is to allow embedding boot options within the file system (and be accessible through a specialised driver) as well as supporting a broader range of predefined boot paths compared to the removable media list found in the UEFI specification.

Each partition will only be used for booting when it corresponds to “Scan policy”: a set of restrictions to only use partitions with specific file systems and from specific device types. Scan policy behaviour is discussed in `ScanPolicy` property description.

Scan process starts with obtaining all the partitions filtered with “Scan policy”. Each partition may produce multiple primary and alternate options. Primary options describe operating systems installed on this media. Alternate options describe recovery options for the operating systems on the media. It is possible for alternate options to exist without primary options and vice versa. Be warned that the options may not necessarily describe the operating systems on the same partition. Each primary and alternate option can be an auxiliary option or not, refer to `HideAuxiliary` for more details. Algorithm to determine boot options behaves as follows:

1. Obtain all available partition handles filtered by “Scan policy” (and driver availability).
2. Obtain all available boot options from `BootOrder` UEFI variable.
3. For each found boot option:
 - Retrieve device path of the boot option.
 - Perform fixups (e.g. NVMe subtype correction) and expansion (e.g. for Boot Camp) of the device path.
 - Obtain device handle by locating device path of the resulting device path (ignore it on failure).
 - Find device handle in the list of partition handles (ignore it if missing).
 - For disk device paths (not specifying a bootloader) execute “bless” (may return > 1 entry).
 - For file device paths check presence on the file system directly.
 - Exclude options with blacklisted filenames (refer to `BlacklistAppleUpdate` option).
 - On OpenCore boot partition exclude all OpenCore bootstrap files by header checks.
 - Mark device handle as *used* in the list of partition handles if any.
 - Register the resulting entries as primary options and determine their types.
The option will become auxiliary for some types (e.g. Apple HFS recovery).
4. For each partition handle:
 - If partition handle is marked as *unused* execute “bless” primary option list retrieval.
In case `BlessOverride` list is set, not only standard “bless” paths will be found but also custom ones.
 - Exclude options with blacklisted filenames (refer to `BlacklistAppleUpdate` option).
 - On OpenCore boot partition exclude all OpenCore bootstrap files by header checks.
 - Register the resulting entries as primary options and determine their types if found.
The option will become auxiliary for some types (e.g. Apple HFS recovery).
 - If partition already has primary options of “Apple Recovery” type proceed to next handle.
 - Lookup alternate entries by “bless” recovery option list retrieval and predefined paths.
 - Register the resulting entries as alternate auxiliary options and determine their types if found.
5. Custom entries and tools are added as primary options without any checks with respect to `Auxiliary`.
6. System entries (e.g. `Reset NVRAM`) are added as primary auxiliary options.

The display order of the boot options in the picker and the boot process are determined separately from the scanning algorithm. The display order as follows:

- Alternate options follow corresponding primary options, i.e. Apple recovery will be following the relevant macOS option whenever possible.
- Options will be listed in file system handle firmware order to maintain an established order across the reboots regardless of the chosen operating system for loading.
- Custom entries, tools, and system entries will be added after all other options.
- Auxiliary options will only show upon entering “Advanced Mode” in the picker (usually by pressing “Space”).

The boot process is as follows:

- Try looking up first valid primary option through `BootNext` UEFI variable.
- On failure looking up first valid primary option through `BootOrder` UEFI variable.
- Mark the option as the default option to boot.
- Boot option through the picker or without it depending on the `ShowPicker` option.
- Show picker on failure otherwise.

Note 1: This process is meant to work reliably only when `RequestBootVarRouting` option is enabled or the firmware does not control UEFI boot options (`DuetPkg` or custom BDS). Without `BootProtect` it also is possible that other operating systems overwrite `OpenCore`, make sure to enable it if you plan to use them.

Note 2: UEFI variable boot options' boot arguments will be dropped if present as they may contain arguments compromising the operating system, which is undesired once secure boot is enabled.

Note 3: Some operating systems, namely Windows, will create their boot option and mark it as top most upon first boot or after NVRAM Reset. When this happens default boot entry choice will update till next manual reconfiguration.

8.2 Properties

1. Boot

Type: plist dict

Description: Apply boot configuration described in Boot Properties section below.

2. BlessOverride

Type: plist array

Description: Add custom scanning paths through bless model.

Designed to be filled with `plist string` entries containing absolute UEFI paths to customised bootloaders, for example, `\EFI\Microsoft\Boot\bootmgfw.efi` for Microsoft bootloader. This allows unusual boot paths to be automatically discovered by the boot picker. Designwise they are equivalent to predefined blessed path, such as `\System\Library\CoreServices\boot.efi`, but unlike predefined bless paths they have highest priority.

3. Debug

Type: plist dict

Description: Apply debug configuration described in Debug Properties section below.

4. Entries

Type: plist array

Description: Add boot entries to boot picker.

Designed to be filled with `plist dict` values, describing each load entry. See Entry Properties section below.

5. Security

Type: plist dict

Description: Apply security configuration described in Security Properties section below.

6. Tools

Type: plist array

Description: Add tool entries to boot picker.

Designed to be filled with `plist dict` values, describing each load entry. See Entry Properties section below.

Note: Select tools, for example, UEFI Shell, are very dangerous and **MUST NOT** appear in production configurations, especially in vaulted ones and protected with secure boot, as they may be used to easily bypass secure boot chain.

8.3 Boot Properties

1. ConsoleAttributes

Type: plist integer

Failsafe: 0

Description: Sets specific attributes for console.

Text renderer supports colour arguments as a sum of foreground and background colors according to UEFI specification. The value of black background and black foreground (0) is reserved. List of colour names:

- 0x00 — EFI_BLACK
- 0x01 — EFI_BLUE
- 0x02 — EFI_GREEN
- 0x03 — EFI_CYAN
- 0x04 — EFI_RED
- 0x05 — EFI_MAGENTA
- 0x06 — EFI_BROWN
- 0x07 — EFI_LIGHTGRAY
- 0x08 — EFI_DARKGRAY
- 0x09 — EFI_LIGHTBLUE
- 0x0A — EFI_LIGHTGREEN
- 0x0B — EFI_LIGHTCYAN
- 0x0C — EFI_LIGHTRED
- 0x0D — EFI_LIGHTMAGENTA
- 0x0E — EFI_YELLOW
- 0x0F — EFI_WHITE
- 0x10 — EFI_BACKGROUND_BLACK
- 0x11 — EFI_BACKGROUND_BLUE
- 0x12 — EFI_BACKGROUND_GREEN
- 0x13 — EFI_BACKGROUND_CYAN
- 0x14 — EFI_BACKGROUND_RED
- 0x15 — EFI_BACKGROUND_MAGENTA
- 0x16 — EFI_BACKGROUND_BROWN
- 0x17 — EFI_BACKGROUND_LIGHTGRAY

Note: This option may not work well with **System** text renderer. Setting a background different from black could help testing proper GOP functioning.

2. HibernateMode

Type: plist string

Failsafe: None

Description: Hibernation detection mode. The following modes are supported:

- None — Avoid hibernation for your own good.
- Auto — Use RTC and NVRAM detection.
- RTC — Use RTC detection.
- NVRAM — Use NVRAM detection.

3. HideAuxiliary

Type: plist boolean

Failsafe: false

Description: Hides auxiliary entries from picker menu by default.

An entry is considered auxiliary when at least one of the following applies:

- Entry is macOS recovery.
- Entry is macOS Time Machine.
- Entry is explicitly marked as **Auxiliary**.
- Entry is system (e.g. **Clean NVRAM**).

To see all entries picker menu needs to be reloaded in extended mode by pressing **Spacebar** key. Hiding auxiliary entries may increase boot performance for multidisk systems.

4. ~~HideSelf~~ ~~Type: plist boolean~~ ~~Failsafe: false~~ ~~Description: Hides own boot entry from boot picker. This may potentially hide other entries, for instance, when another UEFI OS is installed on the same volume and driver boot is used.~~

5. PickerAttributes

Type: plist integer

While OpenCore boot log already contains basic version information with build type and date, this data may also be found in NVRAM in `opencore-version` variable even with boot log disabled.

File logging will create a file named `opencore-YYYY-MM-DD-HHMMSS.txt` at EFI volume root with log contents (the upper case letter sequence is replaced with date and time from the firmware). Please be warned that some file system drivers present in firmwares are not reliable, and may corrupt data when writing files through UEFI. Log is attempted to be written in the safest manner, and thus is very slow. Ensure that `DisableWatchDog` is set to `true` when you use a slow drive.

8.5 Security Properties

1. `AllowNvramReset`
Type: plist boolean
Failsafe: false
Description: Allow CMD+OPT+P+R handling and enable showing NVRAM Reset entry in boot picker.
2. `AllowSetDefault`
Type: plist boolean
Failsafe: false
Description: Allow CTRL+Enter and CTRL+Index handling to set the default boot option in boot picker.
3. `AuthRestart`
Type: plist boolean
Failsafe: false
Description: Enable VirtualSMC-compatible authenticated restart.

Authenticated restart is a way to reboot FileVault 2 enabled macOS without entering the password. To perform authenticated restart one can use a dedicated terminal command: `sudo fdsetup authrestart`. It is also used when installing operating system updates.

VirtualSMC performs authenticated restart by saving disk encryption key split in NVRAM and RTC, which despite being removed as soon as OpenCore starts, may be considered a security risk and thus is optional.

4. [BlacklistAppleUpdate](#)
[Type: plist boolean](#)
[Failsafe: false](#)
[Description: Ignore boot options trying to update Apple peripheral firmware \(e.g. MultiUpdater.efi\).](#)
5. `BootProtect`
Type: plist string
Failsafe: None
Description: Attempt to provide bootloader persistence.

Valid values:

- `None` — do nothing.
- `Bootstrap` — create or update top-priority `\EFI\OC\Bootstrap\Bootstrap.efi` boot option (Boot9696) in UEFI variable storage at bootloader startup. For this option to work `RequestBootVarRouting` is required to be enabled.

This option provides integration with third-party operating system installation and upgrade at the times they overwrite `\EFI\BOOT\BOOTx64.efi` file. By creating a custom option in `Bootstrap` mode this file path becomes no longer used for bootstrapping OpenCore.

Note 1: Some firmwares may have broken NVRAM, no boot option support, or various other incompatibilities of any kind. While unlikely, the use of this option may even cause boot failure. Use at your own risk on boards known to be compatible.

Note 2: Be warned that ~~NVRAM reset will also~~ while NVRAM reset executed from OpenCore should not erase the boot option created in `Bootstrap` ~~mode~~, executing NVRAM reset prior to loading OpenCore will remove it.

6. `ExposeSensitiveData`
Type: plist integer

- `4D1EDE05-38C7-4A6A-9CC6-4BCCA8B38C14:ExtendedFirmwareFeaturesMask`
Combined `FirmwareFeaturesMask` and `ExtendedFirmwareFeaturesMask`. Present on newer Macs to avoid extra parsing of SMBIOS tables.
- `4D1EDE05-38C7-4A6A-9CC6-4BCCA8B38C14:HW_BID`
Hardware `BoardProduct` (e.g. `Mac-35C1E88140C3E6CF`). Not present on real Macs, but used to avoid extra parsing of SMBIOS tables, especially in `boot.efi`.
- `4D1EDE05-38C7-4A6A-9CC6-4BCCA8B38C14:HW_MLB`
Hardware `BoardSerialNumber`. Override for `MLB`. Present on newer Macs (2013+ at least).
- `4D1EDE05-38C7-4A6A-9CC6-4BCCA8B38C14:HW_ROM`
Hardware `ROM`. Override for `ROM`. Present on newer Macs (2013+ at least).
- `7C436110-AB2A-4BBB-A880-FE41995C9F82:prev-lang:kbd`
ASCII string defining default keyboard layout. Format is `lang-COUNTRY:keyboard`, e.g. `ru-RU:252` for Russian locale and ABC keyboard. Also accepts short forms: `ru:252` or `ru:0` (U.S. keyboard, compatible with 10.9). Full decoded keyboard list from `AppleKeyboardLayouts-L.dat` can be found [here](#). Using non-latin keyboard on 10.14 will not enable ABC keyboard, unlike previous and subsequent macOS versions, and is thus not recommended in case you need 10.14.
- `7C436110-AB2A-4BBB-A880-FE41995C9F82:security-mode`
ASCII string defining FireWire security mode. Legacy, can be found in `IOFireWireFamily` source code in `IOFireWireController.cpp`. It is recommended not to set this variable, which may speedup system startup. Setting to `full` is equivalent to not setting the variable and `none` disables FireWire security.
- `4D1EDE05-38C7-4A6A-9CC6-4BCCA8B38C14:UIScale`
One-byte data defining `boot.efi` user interface scaling. Should be **01** for normal screens and **02** for HiDPI screens.
- `4D1EDE05-38C7-4A6A-9CC6-4BCCA8B38C14:DefaultBackgroundColor`
Four-byte `RGBA` data defining `boot.efi` user interface background colour. Standard colours include **BF BF BF BF** (Light Gray) and **00 00 00 00** (Syrah Black). Other colours may be set at user's preference.

9.5 Other Variables

The following variables may be useful for certain configurations or troubleshooting:

- `7C436110-AB2A-4BBB-A880-FE41995C9F82:boot-args`
Kernel arguments, used to pass configuration to Apple kernel and drivers. There are many arguments, which may be found by looking for the use of `PE_parse_boot_argn` function in the kernel or driver code. Some of the known boot arguments include:
 - `acpi_layer=0xFFFFFFFF`
 - `acpi_level=0xFFFF5F` (implies `ACPI_ALL_COMPONENTS`)
 - `batman=VALUE` (`AppleSmartBatteryManager` debug mask)
 - `batman-nosmc=1` (disable `AppleSmartBatteryManager` SMC interface)
 - `cpus=VALUE` (maximum number of CPUs used)
 - `debug=VALUE` (debug mask)
 - `io=VALUE` (IOKit debug mask)
 - `keepsyms=1` (show panic log debug symbols)
 - `kextlog=VALUE` (kernel extension loading debug mask)
 - `nv_disable=1` (disables NVIDIA GPU acceleration)
 - `nvda_drv=1` (legacy way to enable NVIDIA web driver, removed in 10.12)
 - `npici=0x2000` (legacy, disables `kIOPCIConfiguratorPFM64`)
 - `lapic_dont_panic=1`
 - `slide=VALUE` (manually set KASLR slide)
 - `smcdebug=VALUE` (`AppleSMC` debug mask)
 - `-amd_no_dgpu_accel` (alternative to WhateverGreen's `-radvesa` for new GPUs)
 - `-nehalem_error_disable`
 - `-no_compat_check` (disable model checking)
 - `-s` (single mode)
 - `-v` (verbose mode)
 - `-x` (safe mode)

There are multiple external places summarising macOS argument lists: [example 1](#), [example 2](#).

- `7C436110-AB2A-4BBB-A880-FE41995C9F82:booterconfig`

- **HardDrive** — Generic OS (mandatory).
- **Apple** — Apple OS.
- **AppleRecovery** — Apple Recovery OS.
- **AppleTM** — Apple Time Machine.
- **Windows** — Windows.
- **Other** — Custom entry (see **Entries**).
- **ResetNVRAM** — Reset NVRAM system action or tool.
- **Shell** — Entry with UEFI Shell name (e.g. **OpenShell**).
- **Tool** — Any other tool.

Predefined labels are put to `\EFI\OC\Resources\Label` directory. Each label has `.1b1` or `.12x` suffix to represent the scaling level. Full list of labels is provided below. All labels are mandatory.

- **EFIBoot** — Generic OS.
- **Apple** — Apple OS.
- **AppleRecovery** — Apple Recovery OS.
- **AppleTM** — Apple Time Machine.
- **Windows** — Windows.
- **Other** — Custom entry (see **Entries**).
- **ResetNVRAM** — Reset NVRAM system action or tool.
- **Shell** — Entry with UEFI Shell name (e.g. **OpenShell**).
- **Tool** — Any other tool.

Label and icon generation can be performed with bundled utilities: **disklabel** and **icnspack**. Please refer to sample data for the details about the dimensions. [Font is Helvetica 12 pt times scale factor.](#)

[Font format corresponds to](#) AngelCode binary BMF. [While there are many utilities to generate font files, currently it is recommended to use dpFontBaker to generate bitmap font \(using CoreText produces best results\) and fonverter to export it to binary format.](#)

WARNING: OpenCanopy is currently considered experimental and is not recommended for everyday use. Refer to [acidanthera/bugtracker#759](#) for more details regarding the current limitations.

11.5 OpenRuntime

OpenRuntime is an OpenCore plugin implementing `OC_FIRMWARE_RUNTIME` protocol. This protocol implements multiple features required for OpenCore that are otherwise not possible to implement in OpenCore itself as they are needed to work in runtime, i.e. during operating system functioning. Feature highlights:

- NVRAM namespaces, allowing to isolate operating systems from accessing select variables (e.g. **RequestBootVarRouting** or **ProtectSecureBoot**).
- NVRAM proxying, allowing to manipulate multiple variables on variable updates (e.g. **RequestBootVarFallback**).
- Read-only and write-only NVRAM variables, enhancing the security of OpenCore, Lilu, and Lilu plugins, like VirtualSMC, which implements **AuthRestart** support.
- NVRAM isolation, allowing to protect all variables from being written from an untrusted operating system (e.g. **DisableVariableWrite**).
- UEFI Runtime Services memory protection management to workaround read-only mapping (e.g. **EnableWriteUnprotector**).

11.6 Properties

1. APFS

Type: plist dict

Failsafe: None

Description: Provide APFS support as configured in APFS Properties section below.

2. Audio

Type: plist dict

Failsafe: None

Description: Configure audio backend support described in Audio Properties section below.

- Logging is enabled (1) and shown onscreen (2): Misc → Debug → Target = 3.
- Logged messages from at least DEBUG_ERROR (0x80000000), DEBUG_WARN (0x00000002), and DEBUG_INFO (0x00000040) levels are visible onscreen: Misc → Debug → DisplayLevel = 0x80000042.
- Critical error messages, like DEBUG_ERROR, stop booting: Misc → Security → HaltLevel = 0x80000000.
- Watch Dog is disabled to prevent automatic reboot: Misc → Debug → DisableWatchDog = true.
- Boot Picker (entry selector) is enabled: Misc → Boot → ShowPicker = true.

If there is no obvious error, check the available hacks in Quirks sections one by one. For early boot troubleshooting, for instance, when OpenCore menu does not appear, using [UEFI Shell \(bundled with OpenCore\)](#) may help to see early debug messages.

2. How to customise boot entries?

OpenCore follows standard Apple Bless model and extracts the entry name from `.contentDetails` and `.disk_label.contentDetails` files in the booter directory if present. These files contain an ASCII string with an entry title, which may then be customised by the user.

3. How to choose the default boot entry?

OpenCore uses the primary UEFI boot option to select the default entry. This choice can be altered from UEFI Setup, with the macOS Startup Disk preference, or the Windows Boot Camp Control Panel. Since choosing OpenCore's `BOOTx64.EFI` as a primary boot option limits this functionality in addition to several firmwares deleting incompatible boot options, potentially including those created by macOS, you are strongly encouraged to use the `RequestBootVarRouting` quirk, which will preserve your selection made in the operating system within the OpenCore variable space. Note, that `RequestBootVarRouting` requires a separate driver for functioning.

4. What is the simplest way to install macOS?

Copy online recovery image (`*.dmg` and `*.chunklist` files) to `com.apple.recovery.boot` directory on a FAT32 partition with OpenCore. Load OpenCore Boot Picker and choose the entry, it will have a `(dmg)` suffix. Custom name may be created by providing `.contentDetails` file.

To download recovery online you may use `macrecovery.py` tool from `MacInfoPkg`.

For offline installation refer to How to create a bootable installer for macOS article. Apart from App Store and `softwareupdate` utility there also are third-party tools to download an offline image.

5. Why do online recovery images (*.dmg) fail to load?

This may be caused by missing HFS+ driver, as all presently known recovery volumes have HFS+ filesystem.

6. Can I use this on Apple hardware or virtual machines?

Sure, most relatively modern Mac models including `MacPro5,1` and virtual machines are fully supported. Even though there are little to none specific details relevant to Mac hardware, some ongoing instructions can be found in `acidanthera/bugtracker#377`.

7. Why do Find&Replace patches must equal in length?

For machine code (x86 code) it is not possible to do differently sized replacements due to relative addressing. For ACPI code this is risky, and is technically equivalent to ACPI table replacement, thus not implemented. More detailed explanation can be found on `AppleLife.ru`.

8. How can I migrate from AptioMemoryFix?

Behaviour similar to that of `AptioMemoryFix` can be obtained by installing `OpenRuntime` driver and enabling the quirks listed below. Please note, that most of these are not necessary to be enabled. Refer to their individual descriptions in this document for more details.

- `ProvideConsoleGop` (UEFI quirk)
- `AvoidRuntimeDefrag`
- `DiscardHibernateMap`
- `EnableSafeModeSlide`
- `EnableWriteUnprotector`
- `ForceExitBootServices`
- `ProtectMemoryRegions`