



## LPS8 LoRaWAN Gateway User Manual

### Document Version: 1.3.0

Firmware Version: lgw--build-v5.4.1615882321-20210316-1613

Version	Description	Date
1.0	Release	2019-Aug-10
1.0.1	Add trouble shooting for wifi AP not access issue	2019-Sep-23
1.0.2	Change the HTTP Port and SSH port for firmware version > v5.3	2019-Oct-26
1.1.0	Add more features such packet filter, remote access	2020-Mar-02
1.1.1	Polish network access description to make it clear	2020-Mar-16
1.2.0	Add TTN server explain, change to use new UI and firmware	2020-May-27
1.3.0	Add Auto – provision (system --> Remote Mgmt)	2021-Jan-3
1.3.1	Add Amazon AWS-IoT Support	2021-Mar-27

## Table of Contents

<b>1</b>	<b>Introduction.....</b>	<b>5</b>
1.1	What is the LPS8.....	5
1.2	Specifications.....	6
1.3	Features.....	7
1.4	Hardware System Structure.....	7
1.5	LPS8 Applications .....	8
1.6	LED Indicators.....	8
<b>2</b>	<b>Access and Configure LPS8.....</b>	<b>9</b>
2.1	Find IP address of LPS8.....	9
2.1.1	Connect via WiFi .....	9
2.1.2	Connect via Ethernet with DHCP IP from router .....	9
2.1.3	Connect via WiFi with DHCP IP from router .....	10
2.1.4	Connect via Ethernet with fall back ip .....	10
2.2	Access Configure Web UI.....	11
<b>3</b>	<b>Typical Network Setup .....</b>	<b>12</b>
3.1	Overview .....	12
3.2	Use WAN port to access Internet.....	12
3.3	Access the Internet as a WiFi Client.....	13
3.4	Check Internet connection.....	13
<b>4</b>	<b>Example: Configure as a LoRaWAN gateway .....</b>	<b>14</b>
4.1	Create a gateway in TTN Server .....	15
4.2	Configure LPS8 to connect to TTN .....	17
4.3	Configure frequency .....	19
4.4	Add a LoRaWAN End Device .....	20
<b>5</b>	<b>Web Configure Pages .....</b>	<b>22</b>
5.1	Home .....	22
5.2	LoRa Settings.....	23

5.2.1	LoRa --> LoRa .....	23
5.2.2	LoRa --> ABP Decryption .....	24
5.3	LoRaWAN Settings.....	25
5.3.1	LoRaWAN --> LoRaWAN .....	25
1.1.1	LoRaWAN --> Amazon AWS-IoT .....	25
5.3.2	LoRaWAN --> LORIoT .....	25
5.4	MQTT Settings .....	27
5.5	System .....	28
5.5.1	System --> System Overview.....	28
5.5.2	System --> General ( login settings) .....	28
5.5.3	System --> Network .....	30
5.5.4	System --> WiFi .....	31
5.5.5	System --> Network Status.....	31
5.5.6	System --> Remote Mgnt & Auto Update .....	32
5.5.7	System --> Firmware Upgrade .....	34
5.5.8	System --> Reboot/Reset .....	35
5.5.9	System --> Package Maintain .....	36
<b>6</b>	<b>More features .....</b>	<b>37</b>
6.1	Packet Filtering.....	37
6.2	Remote Access.....	37
6.3	How to decode ABP LoRaWAN node .....	37
6.4	How to set data to MQTT broker.....	37
6.5	More instructions .....	37
6.6	Auto-Provision .....	38
<b>7</b>	<b>Linux System .....</b>	<b>39</b>
7.1	SSH Access for Linux console .....	39
7.2	Edit and Transfer files .....	40
7.3	File System.....	40
7.4	Package maintenance system .....	41
<b>8</b>	<b>Upgrade Linux Firmware .....</b>	<b>42</b>
8.1	Upgrade via Web UI .....	42
8.2	Upgrade via Linux console.....	43
<b>9</b>	<b>FAQ .....</b>	<b>44</b>
9.1	How can I configure for a customized frequency band?.....	44

---

9.2	<i>Can I make my own firmware for the gateway, Where can I find the source code?</i>	44
9.3	<i>Can I use 868Mhz version for 915Mhz bands?</i>	44
<b>10</b>	<b>Trouble Shooting</b>	<b>45</b>
10.1	<i>I get kernel error when install new package, how to fix?</i>	45
10.2	<i>How to recover the LPS8 if the firmware crashes</i>	45
10.3	<i>I configured LPS8 for WiFi access and lost its IP. What to do now?</i>	46
10.4	<i>I connect to the LPS8's SSID but LPS8 didn't assign DHCP IP to my laptop?</i>	47
<b>11</b>	<b>Order Info</b>	<b>47</b>
<b>12</b>	<b>Packing Info</b>	<b>48</b>
<b>13</b>	<b>Support</b>	<b>48</b>
<b>14</b>	<b>FCC Warning</b>	<b>48</b>

## 1 Introduction


### 1.1 What is the LPS8

The LPS8 is an **open source** LoRaWAN Gateway. It lets you bridge LoRa wireless network to an IP network via **WiFi, Ethernet**. The LoRa wireless allows users to send data and reach extremely long ranges at low data-rates.

The LPS8 uses **Semtech packet forwarder** and fully compatible with LoRaWAN protocol. It includes a **SX1308 LoRa concentrator**, which provides 10 programmable parallel demodulation paths.

LPS8 has **pre-configured standard LoRaWAN frequency bands** to use for different countries. User can also **customized the frequency bands** to use in their own LoRa network.

#### LPS8 In a LoRaWAN IoT Network:

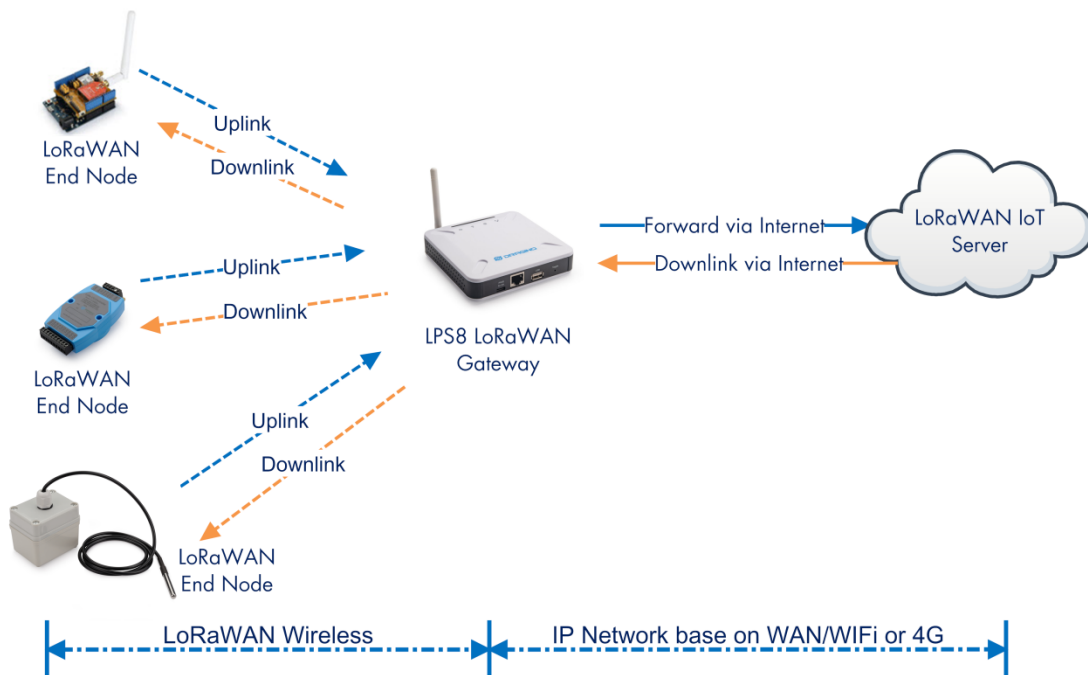

## 1.2 Specifications

### Hardware System:

Linux Part:

- 400Mhz ar9331 processor
- 64MB RAM
- 16MB Flash

### Interface:

- 10M/100M RJ45 Ports x 1
- WiFi : 802.11 b/g/n
- LoRaWAN Wireless
- Power Input: 5V DC, 2A, Type C
- USB 2.0 host connector x 1

### WiFi Spec:

- IEEE 802.11 b/g/n
- Frequency Band: 2.4 ~ 2.462GHz
- Tx power:
  - ✓ 11n tx power : mcs7/15: 11db    mcs0 : 17db
  - ✓ 11b tx power: 18db
  - ✓ 11g 54M tx power: 12db
  - ✓ 11g 6M tx power: 18db
- Wifi Sensitivity
  - ✓ 11g 54M : -71dbm
  - ✓ 11n 20M : -67dbm

### LoRa Spec:

- Up to -140 dBm sensitivity with SX1257 Tx/Rx front-end
- 70 dB CW interferer rejection at 1 MHz offset
- Able to operate with negative SNR, CCR up to 9dB
- Emulates 49 x LoRa demodulators and 1 x (G)FSK demodulator
- Dual digital TX & RX radio front-end interfaces
- 10 programmable parallel demodulation paths
- Dynamic data-rate (DDR) adaptation
- True antenna diversity or simultaneous dual-band operation


**Max Power: 5v, 1.3A**

### 1.3 Features

- ✓ Open Source OpenWrt system
- ✓ Managed by Web GUI, SSH via WAN or WiFi
- ✓ Remote access with Reverse-SSH
- ✓ Emulates 49x LoRa demodulators
- ✓ LoRaWAN Gateway
- ✓ 10 programmable parallel demodulation paths
- ✓ Pre-configure to support different LoRaWAN regional settings.
- ✓ Allow to customize LoRaWAN regional parameters.
- ✓ Support Local decode ABP end node info and transfer to MQTT server
- ✓ Support different level log in.

### 1.4 Hardware System Structure

LPS8 System Overview:

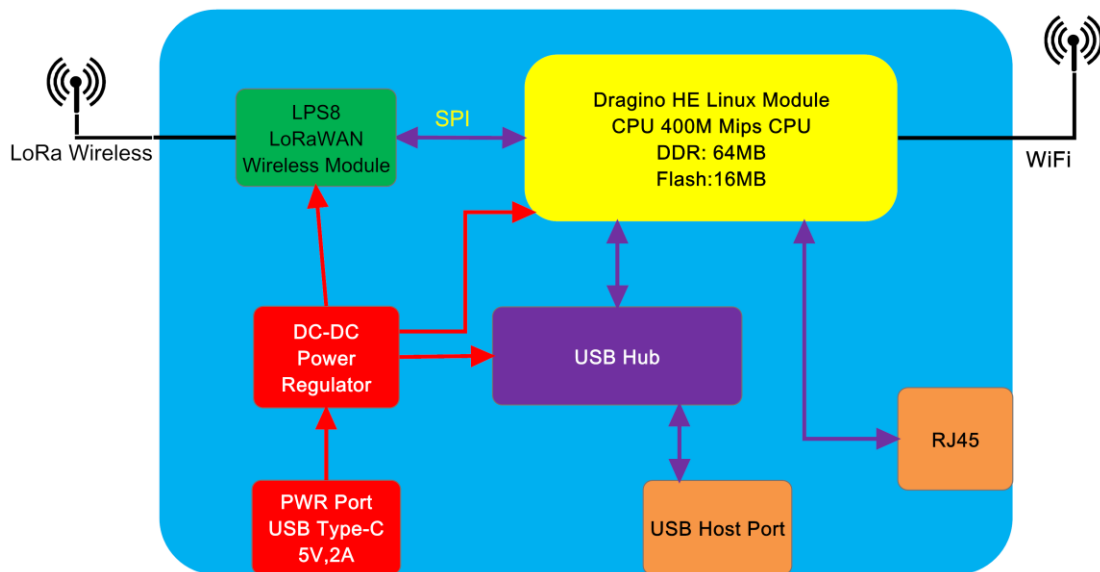





## 1.5 LPS8 Applications



## 1.6 LED Indicators

LPS8 has totally four LEDs, They are:

- **Power LED** : This **RED LED** will be **solid on** if the device is properly powered.
- **LoRa LED** : This **RGB LED** will **blink GREEN** when LoRaWAN module starts or transmit a packet.
- **SYS LED** : This **RGB LED** will shows different colors on different state:
  - ✓ **SOLID BLUE**: Device is alive with LoRaWAN server connection.
  - ✓ **BLINKING BLUE**: a) Device has internet connection but no LoRaWAN Connection. or b) Device is in booting stage, in this stage, it will **BLINKING BLUE** for several seconds and then with **SOLID RED** and **BLINKING BLUE** together
  - ✓ **SOLID RED**: Device doesn't have Internet connection.
- **ETH LED** : This LED shows the ETH interface connection status.



## 2 Access and Configure LPS8

The LPS8 is configured as a WiFi Access Point by factory default. You can access and configure the LPS8 after connecting to its WiFi network, or via its WAN Ethernet port.

### 2.1 Find IP address of LPS8

#### 2.1.1 Connect via WiFi




At the first boot of LPS8, it will auto generate a WiFi network called **dragino-xxxxxx** with password:

**dragino+dragino**

You can use a PC to connect to this WiFi network. The PC will get an IP address 10.130.1.xxx and the LPS8 has the default IP **10.130.1.1**



#### 2.1.2 Connect via Ethernet with DHCP IP from router

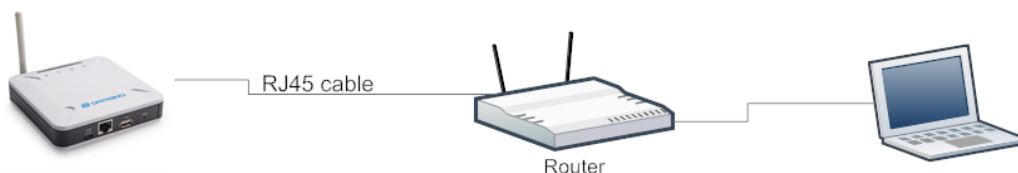

Alternatively, connect the LPS8 Ethernet port to your router and LPS8 can obtain an IP address from your router. In the router's management portal, you should be able to find what IP address the router has assigned to the LPS8. You can also use this IP to connect.

### 2.1.3 Connect via WiFi with DHCP IP from router



If the LPS8 already connect to the router via WiFi, use can use the WiFi IP to connect to LPS8.

### 2.1.4 Connect via Ethernet with fall back ip

The WAN port also has a [fall back ip address](#) for access if user doesn't connect to uplink router. Click [here to see how to configure](#).

## 2.2 Access Configure Web UI

### Web Interface

Open a browser on the PC and type in the LPS8 ip address (depends on your connect method)

<http://10.130.1.1/> (Access via WiFi AP network)

or


[http://IP\\_ADDRESS](http://IP_ADDRESS) or [http://IP\\_ADDRESS:8000](http://IP_ADDRESS:8000) (The web port has been changed to 8000 in **WAN interface**(WAN port or WiFi Client Mode) since firmware 5.3.xxx firmware)

You will see the login interface of LPS8 as shown below.

The account details for Web Login are:

**User Name:** root

**Password:** dragino

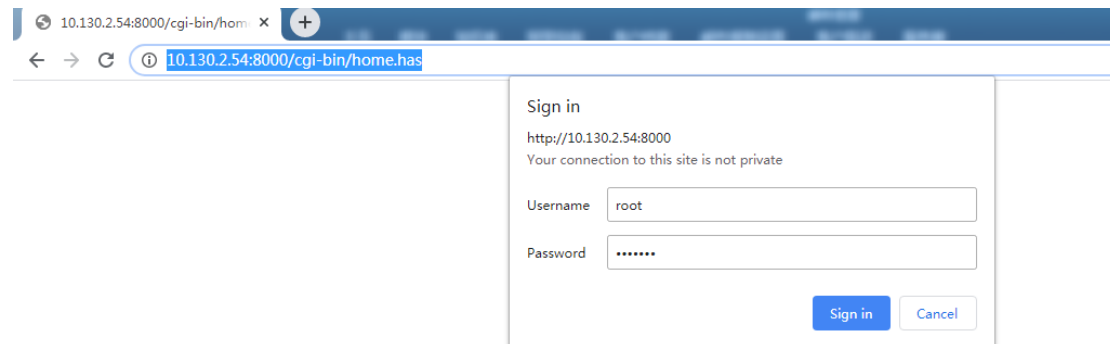

## 3 Typical Network Setup


### 3.1 Overview

The LPS8 supports flexible network set up for different environments. This section describes the typical network topology can be set in LPS8. The network set up includes:

- ✓ **WAN Port Internet Mode**
- ✓ **WiFi Client Mode**
- ✓ **WiFi AP Mode**

### 3.2 Use WAN port to access Internet

By default, the LPS8 is set to use the WAN port to connect to an upstream network. When you connect the LPS8's WAN port to an upstream router, LPS8 will get an IP address from the router and have Internet access via the upstream router. The network status can be checked as below:

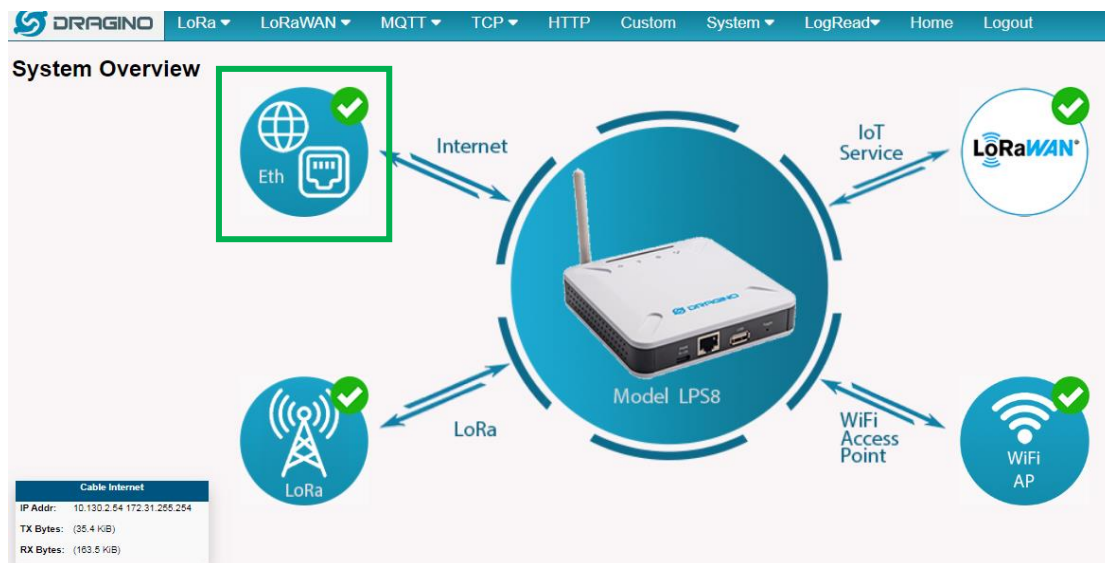

### 3.3 Access the Internet as a WiFi Client.

In the WiFi Client Mode, LPS8 acts as a WiFi client and gets DHCP from an upstream router via WiFi.

The settings for WiFi Client is under page [System](#) → [WiFi](#) → [WiFi WAN Client Settings](#)

WiFi

Radio Settings

Channel (1-11)

11

Tx Power (0-18) dBm

17

WiFi Access Point Settings

Enable WiFi Access Point

WiFi Name SSID

dragino-1baf44

Passphrase (8-32 char)

Show

Encryption

WPA2

WiFi WAN Client Settings

Enable WiFi WAN Client

Host WiFi SSID

dragino-RD

Passphrase

Show

WiFi Survey

dragino-RD (Ch: 6 Enc

Encryption

WPA/WPA2

Save&Apply




Cancel


Refresh

In the WiFi Survey Choose the WiFi AP, and input the Passphrase then click Save & Apply to connect.

### 3.4 Check Internet connection

In the [Home](#) page, we can check the Internet connection.


- GREEN Tick  : This interface has Internet connection.
- Yellow Tick  : This interface has IP address but don't use it for internet connection.
- RED Cross  : This interface doesn't connected.

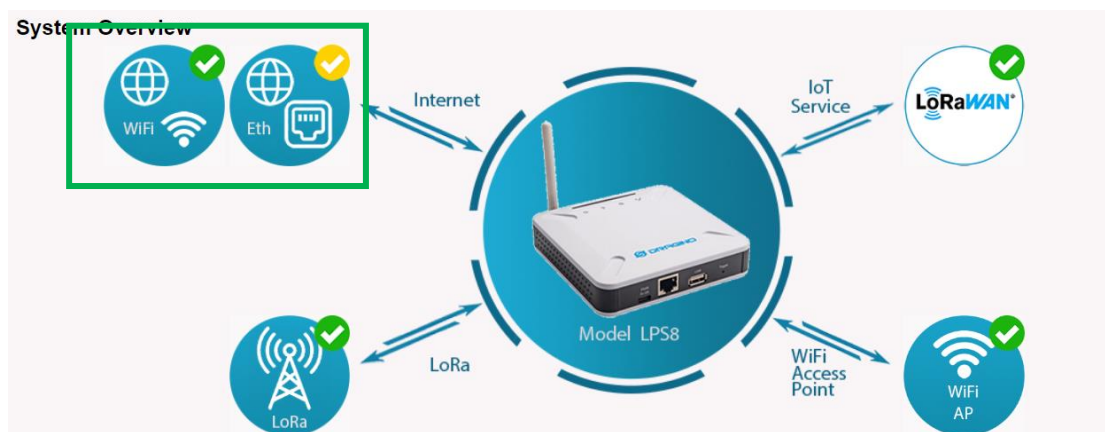

## 4 Example: Configure as a LoRaWAN gateway

LPS8 is fully compatible with LoRaWAN protocol. It uses the legacy Semtech Packet forwarder to forward the LoRaWAN packets to server. The structure is as below.

### LPS8 In a LoRaWAN IoT Network:

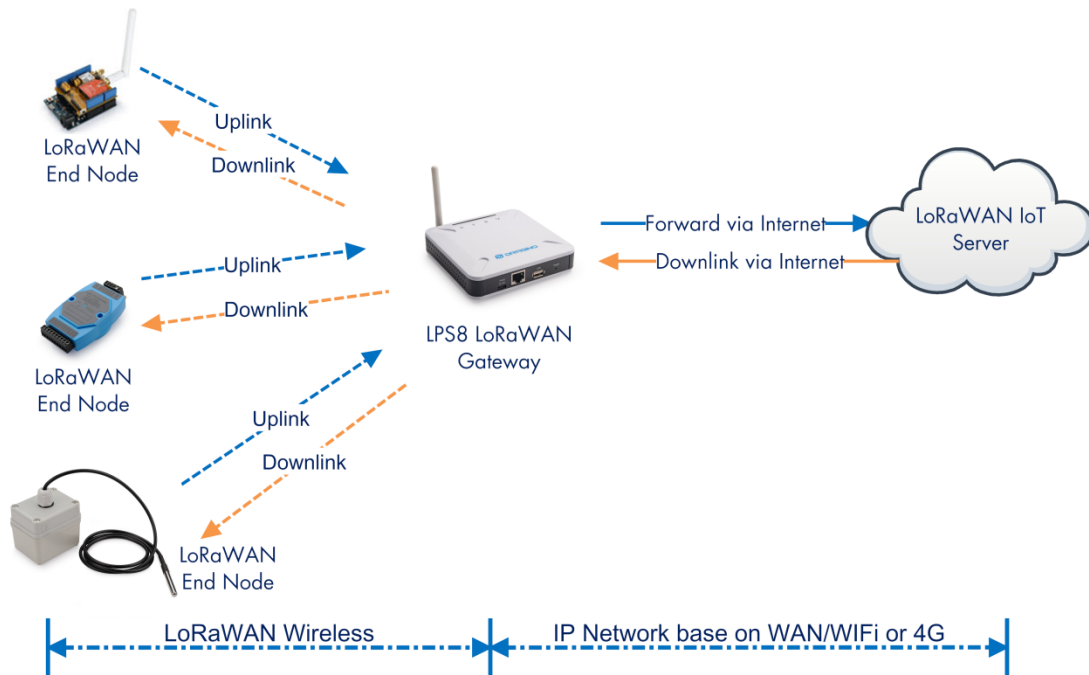


This chapter describes how to use the LPS8 to work with

[TheThingsNetwork \(TTN\) LoRaWAN Server](http://www.thethingsnetwork.org) ([www.thethingsnetwork.org](http://www.thethingsnetwork.org))

## 4.1 Create a gateway in TTN Server

### Step 1: Get a Unique gateway ID.

Every LPS8 has a unique gateway id. The ID can be found at LoRaWAN page:

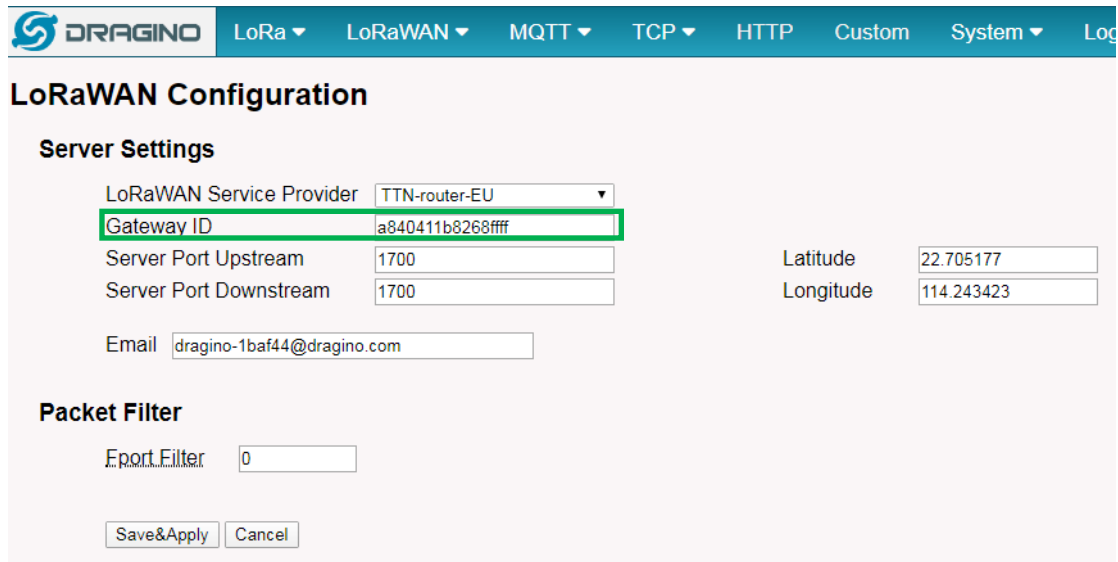

**LoRaWAN Configuration**

**Server Settings**

LoRaWAN Service Provider: TTN-router-EU

**Gateway ID**: a840411b8268ffff

Server Port Upstream: 1700

Server Port Downstream: 1700

Latitude: 22.705177

Longitude: 114.243423

Email: dragino-1baf44@dragino.com


**Packet Filter**

Eport Filter: 0


Save&Apply Cancel

The example gateway id is: **a840411b8268ffff**


### Step 2: Sign up a user account in TTN server

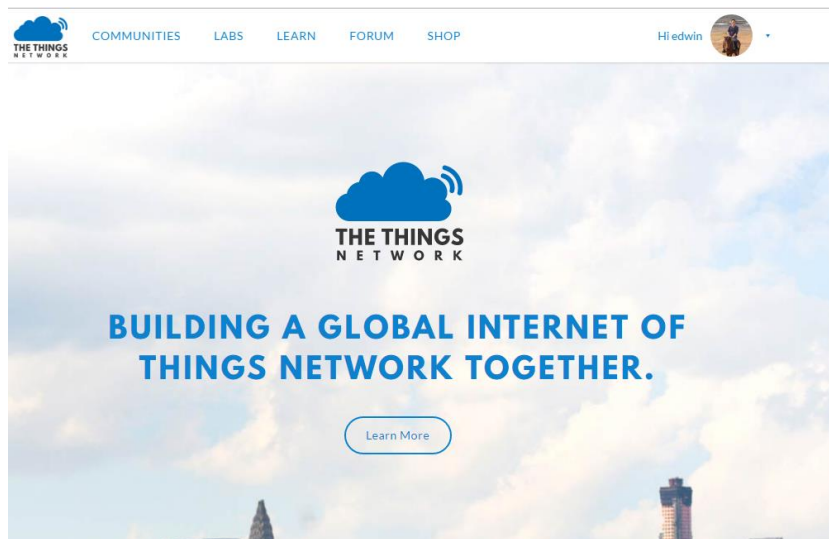

### Step 3: Create a Gateway

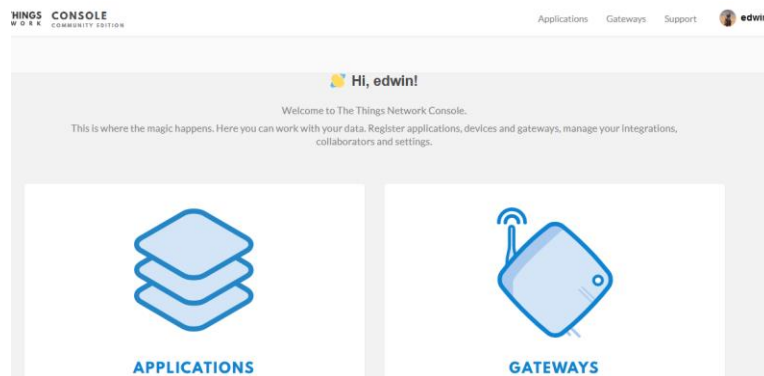

Click on the Gateways icon to open the page below:

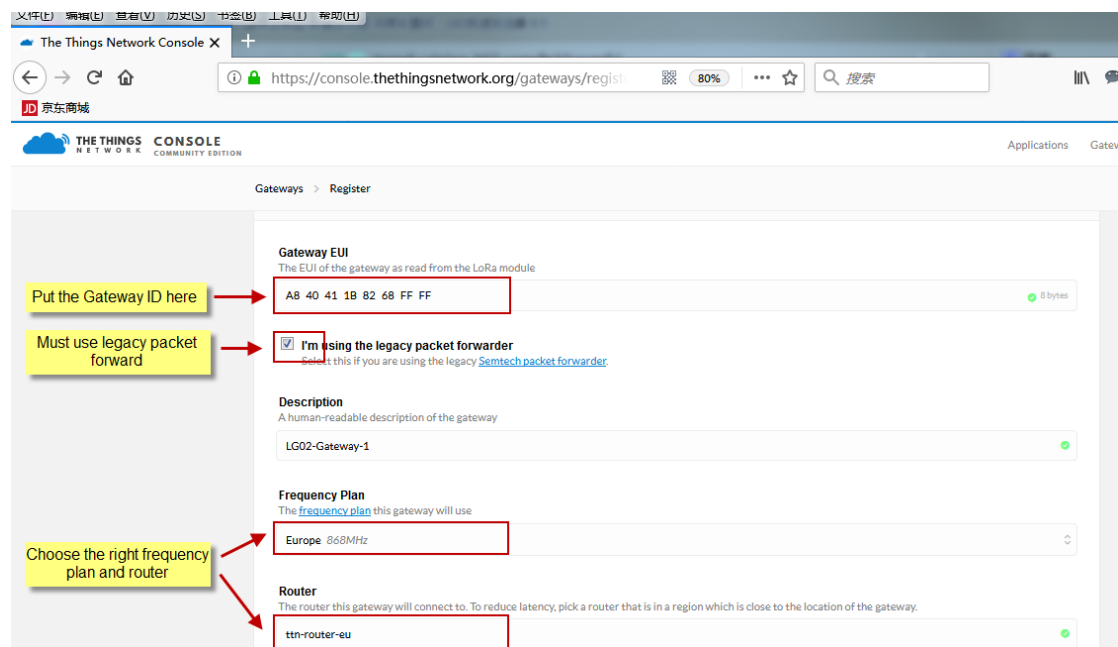

**Notice:** The TTN router should match the Frequency Plan you choose, otherwise you will have problem for End Node to join the network. If you don't which router you need to select, please check: [https://www.thethingsnetwork.org/docs/gateways/packet-forwarder/semtech-udp.html#connect-a-gateway\\_server-addresses](https://www.thethingsnetwork.org/docs/gateways/packet-forwarder/semtech-udp.html#connect-a-gateway_server-addresses)

After creating the gateway, you can see the gateway info, as below.






## 4.2 Configure LPS8 to connect to TTN

You can now configure the LPS8 to let it connect to TTN network.  
Make sure your LPS8 has a working Internet Connection first.

Choose the right server provider and click [Save&Apply](#)

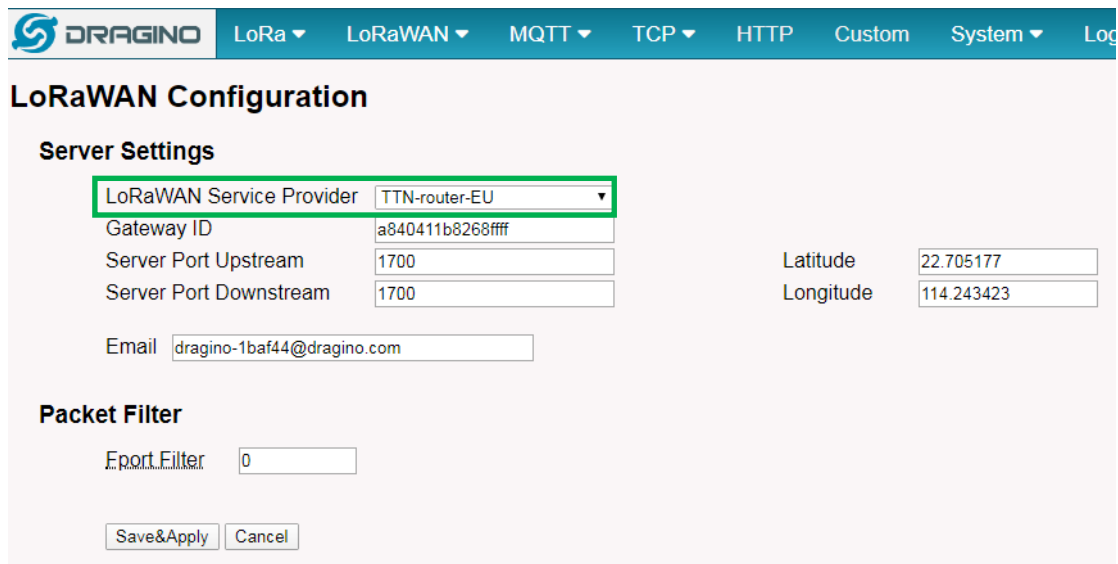


The screenshot shows the 'LoRaWAN Configuration' page. At the top is a navigation bar with tabs: LoRa, LoRaWAN, MQTT, TCP, HTTP, Custom, System, and Log. The 'LoRaWAN' tab is selected. Below the navigation bar is the 'LoRaWAN Configuration' section. Under 'Server Settings', there is a table with the following fields:

LoRaWAN Service Provider	TTN-router-EU		
Gateway ID	a840411b8268ffff	Latitude	22.705177
Server Port Upstream	1700	Longitude	114.243423
Server Port Downstream	1700		

Below the table is an 'Email' field with the value 'dragino-1baf44@dragino.com'. Under the 'Packet Filter' section, there is a 'Port Filter' field with the value '0'. At the bottom of the configuration section are 'Save&Apply' and 'Cancel' buttons.

**Note:** The server address must match the router you choose in TTN.


In the home page, we can see the LoRaWAN connection is ready now.

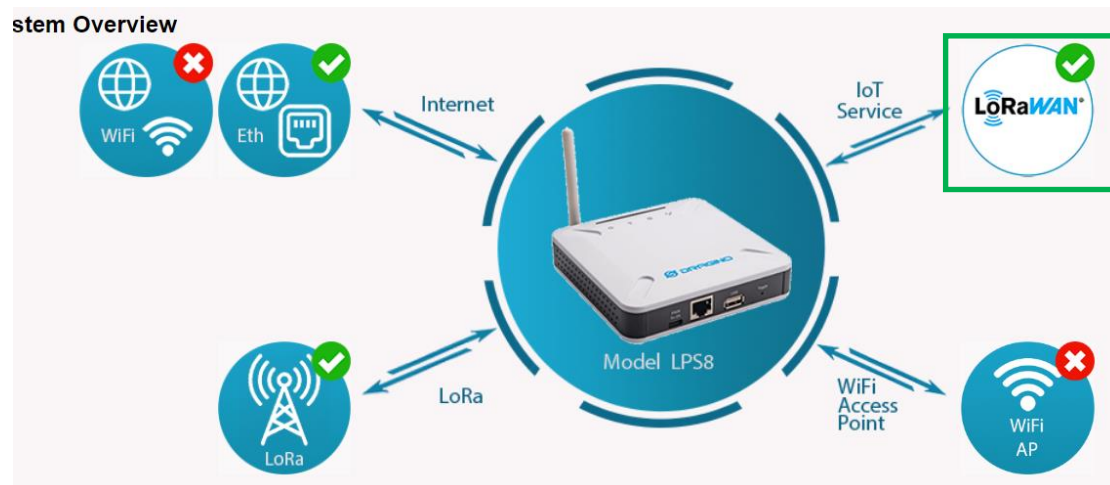


In TTN portal, we can also see the gateway is connected.

CONSOLE  
COMMUNITY EDITION

Applications Gateways Su


Gateways >  eui-a840411b8268fff

Overview Traffic Settings

GATEWAY OVERVIEW  [settings](#)

Gateway ID eui-a840411b8268fff



Description Gateway-1

Owner  **edwin** [Transfer ownership](#)

Status connected

Frequency Plan Europe 868MHz

Router ttn-router-eu

Gateway Key  base64 


Last Seen 23 seconds ago

Received Messages 0

Transmitted Messages 0


### 4.3 Configure frequency

We also need to set the frequency plan in LPS8 to match the end node we use, so to receive the LoRaWAN packets from the LoRaWAN sensor.

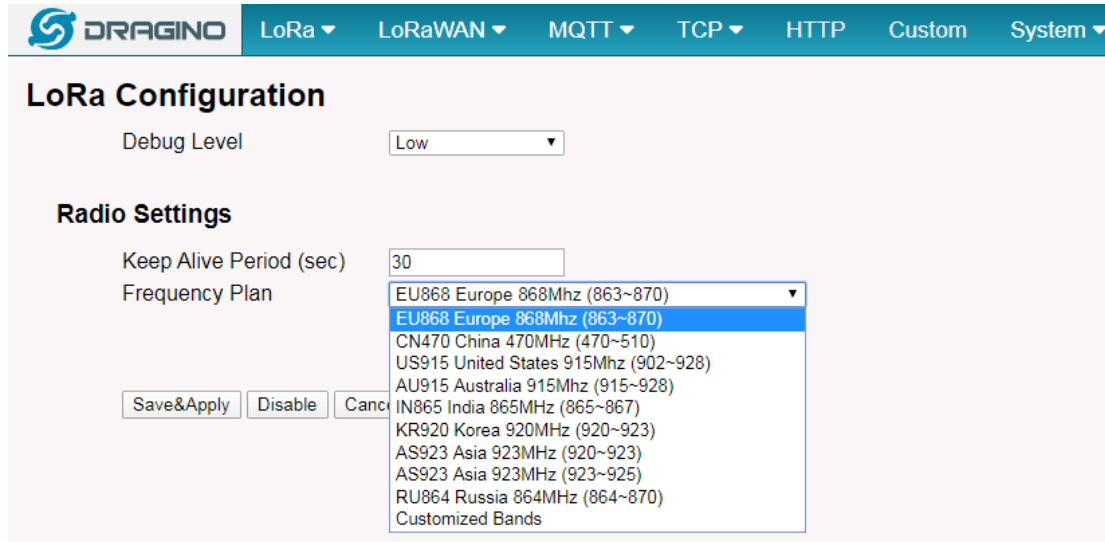

The screenshot shows the 'LoRa Configuration' page. Under 'Radio Settings', the 'Frequency Plan' dropdown menu is open, displaying a list of options: EU868 Europe 868Mhz (863~870), CN470 China 470MHz (470~510), US915 United States 915Mhz (902~928), AU915 Australia 915Mhz (915~928), IN865 India 865MHz (865~867), KR920 Korea 920MHz (920~923), AS923 Asia 923MHz (920~923), AS923 Asia 923MHz (923~925), RU864 Russia 864MHz (864~870), and Customized Bands. The 'Keep Alive Period (sec)' is set to 30. Buttons for 'Save&Apply', 'Disable', and 'Cancel' are visible at the bottom of the settings area.

In logread page, user can check the frequency actually used.

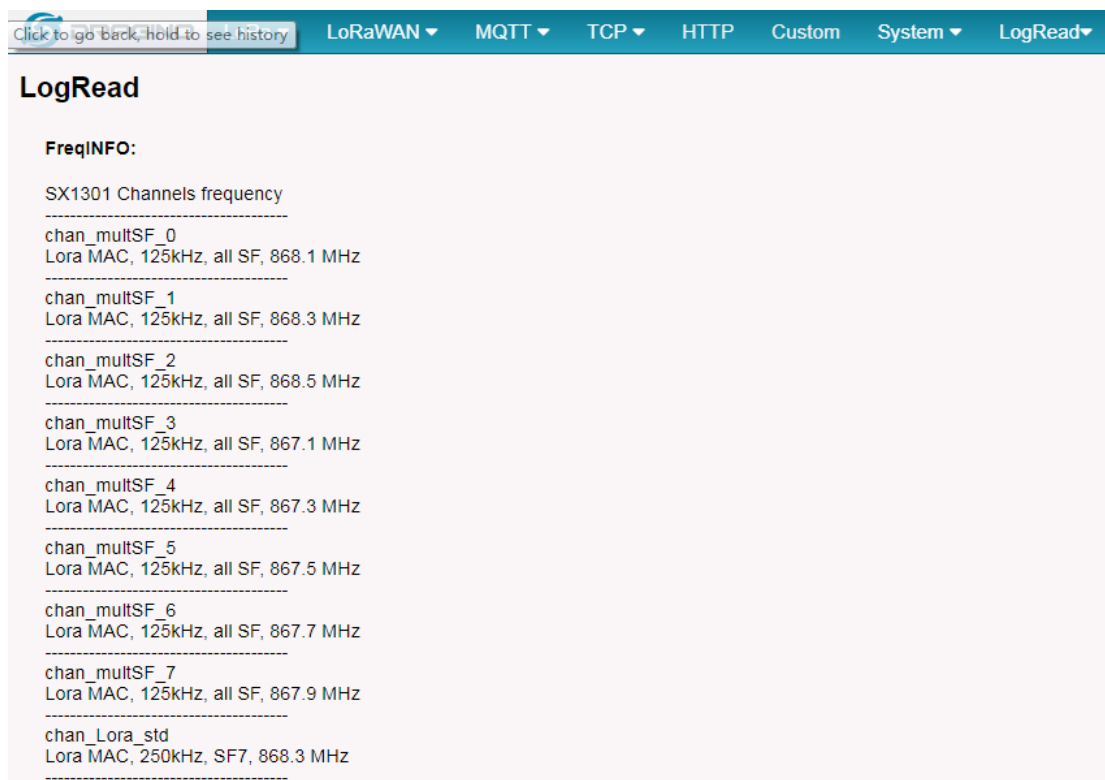

The screenshot shows the 'LogRead' page. Under the 'FreqINFO:' section, it lists the 'SX1301 Channels frequency' and provides details for multiple channels (chan\_multSF\_0 through chan\_multSF\_7) and a standard channel (chan\_Lora\_std). Each entry specifies the Lora MAC, SF (Spread Factor), and the frequency in MHz.

Channel	MAC	SF	Frequency (MHz)
chan_multSF_0	Lora MAC	125kHz	all SF, 868.1 MHz
chan_multSF_1	Lora MAC	125kHz	all SF, 868.3 MHz
chan_multSF_2	Lora MAC	125kHz	all SF, 868.5 MHz
chan_multSF_3	Lora MAC	125kHz	all SF, 867.1 MHz
chan_multSF_4	Lora MAC	125kHz	all SF, 867.3 MHz
chan_multSF_5	Lora MAC	125kHz	all SF, 867.5 MHz
chan_multSF_6	Lora MAC	125kHz	all SF, 867.7 MHz
chan_multSF_7	Lora MAC	125kHz	all SF, 867.9 MHz
chan_Lora_std	Lora MAC	250kHz	SF7, 868.3 MHz

#### 4.4 Add a LoRaWAN End Device

This section shows how to add a LoRaWAN End device to a LoRaWAN network and see the data from TTN web site.

We use [LT-22222-L](#) IO Controller as a reference device - the setup for other LoRaWAN devices will be similar.



**Step 1:** Create a Device definition in TTN with the OTAA keys from the example LT-33222-L IO Controller device.

Three codes are required to define the device in TTN:

- ✓ DEV EUI - Unique ID code for a particular device.
- ✓ APP EUI - ID code for an Application defined in TTN.
- ✓ APP Key - Unique key to secure communications with a particular device.

A set of these codes are stored in each device by the manufacturer as the default codes for that particular device. Each device is shipped with a sticker with the default Device EUI as shown below.




Note: You may be able to change these codes in a device by using a configuration facility on the device e.g. the LT-22222 uses a serial port access and a series of AT commands. Changing the codes may be necessary in the case where you have to use codes assigned by a LoRa WAN server.

For the TTN server, you can use the codes set in the device as in the following example.


Select **Add Application** to open the screen below.

Note that there is an APP EUI already created by TTN, but this is not the one set in the device. To add the APP EUI for the LT-22222-L device, select **Manage EUIs** and **Add EUI**, then enter the required code.

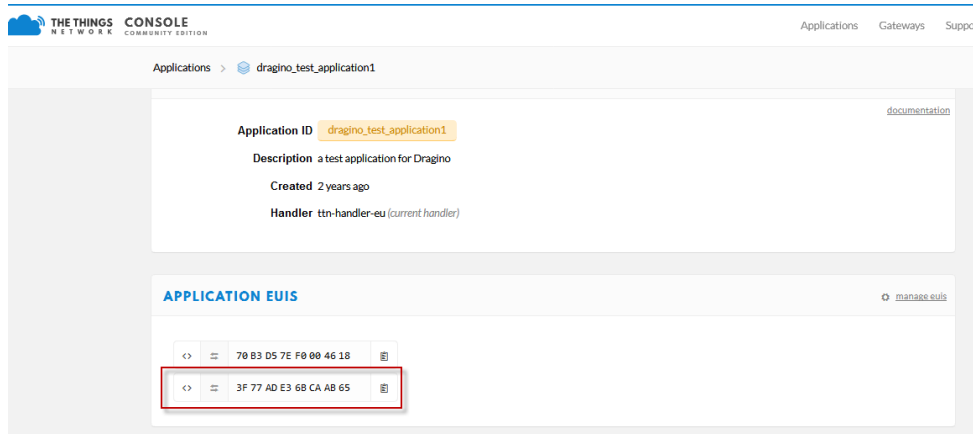

Select **Devices** and **Register Device** to open the screen below.

Enter the **Device EUI** and **APP KEY** codes, then select the App EUI from the list. Check that all three codes match those shown on the device label before saving the configuration.

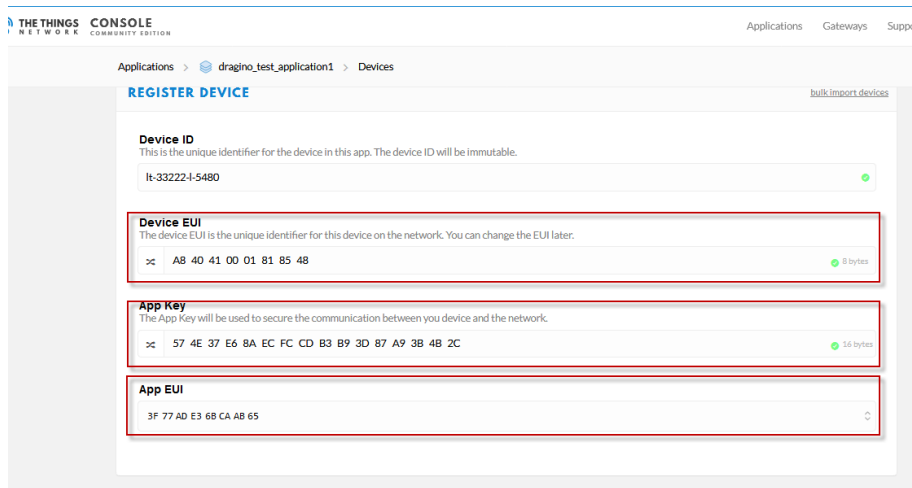

**Step 2:** Power on LT-22222-L device and it will automatically join the TTN network. After joining successfully, it will start to upload messages to the TTN. Select the Data tab and you will see the data appearing in the panel.

Note that it may take some time for the device data to appear in the TTN display.

ONSOLE  
MINI EDITION

Applications > dragino\_test\_application1 > Devices > It-33222-I-5362 > Data

Overview Data Settings

**APPLICATION DATA** pause clear

Filters: uplink downlink activation ack error


time	counter	port	retry	payload
16:54:53	0	2	retry	00 02 01 36 04 C1 04 C2 38
16:54:47				dev addr: 26 01 2C 6B app eui: FCDEC9B2D32FA6 61 dev eui: A8 40 41 00
16:54:40				dev addr: 26 01 2C 85 app eui: FCDEC9B2D32FA6 61 dev eui: A8 40 41 00
16:54:33				dev addr: 26 01 2E EC app eui: FCDEC9B2D32FA6 61 dev eui: A8 40 41 00

## 5 Web Configure Pages

### 5.1 Home

Shows the system running status:

System Overview

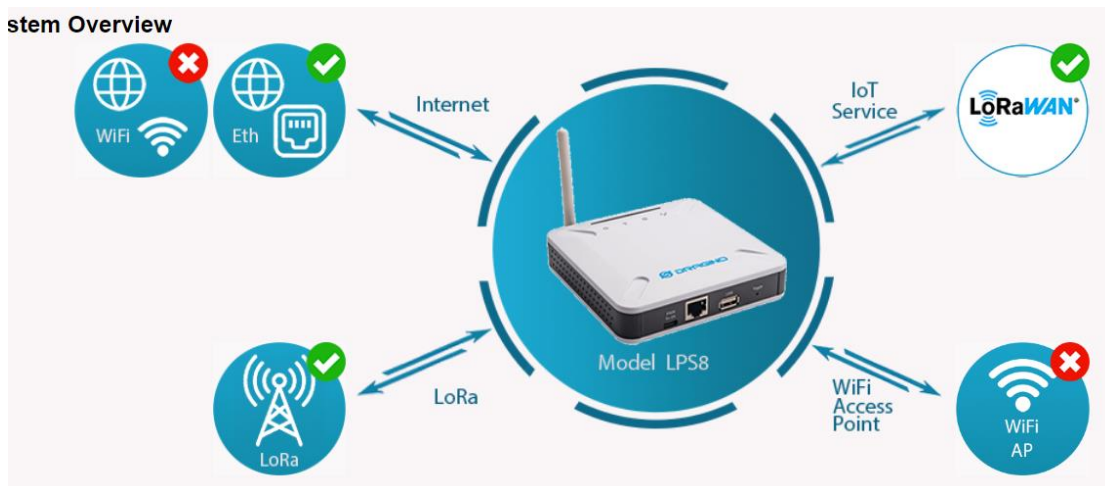

## 5.2 LoRa Settings


### 5.2.1 LoRa --> LoRa

This page shows the LoRa Radio Settings. There are a set of default frequency band according to LoRaWAN protocol, and user can customize the band\* as well.

Different LPS8 hardware version can support different frequency range:

- **868**: valid frequency: 863Mhz ~ 870Mhz. for bands EU868, RU864, IN865 or KZ865.
- **915**: valid frequency: 902Mhz ~ 928Mhz. for bands US915, AU915, AS923 or KR920

After user choose the frequency plan, he can see the actually frequency in used by checking the page **LogRead --> LoRa Log**

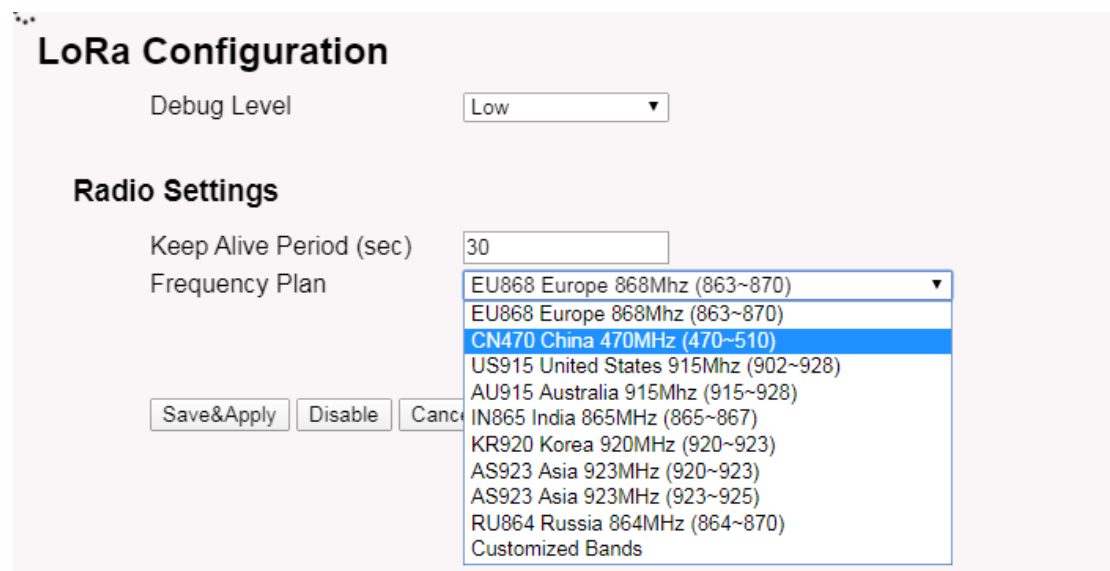

Note \*: See this instruction for how to customize frequency band:

[http://wiki.dragino.com/index.php?title=Customized\\_Frequency\\_Band\\_for\\_Gateway](http://wiki.dragino.com/index.php?title=Customized_Frequency_Band_for_Gateway)

### 5.2.2 LoRa --> ABP Decryption

The LPS8 can communicate with LoRaWAN ABP End Node without the need of LoRaWAN server. It can be used in some cases such as:

- No internet connection.
- User wants to get data forward in gateway and forward to their server based on MQTT/HTTP, etc. (Combine ABP communication method and MQTT forward together).

Detail of this feature:

[http://wiki.dragino.com/index.php?title=Communication with ABP End Node](http://wiki.dragino.com/index.php?title=Communication_with_ABP_End_Node)

#### Decrypt ABP End Node Packets

Enable ABP Decryption ☐ SAVE

##### Add Key

Dev ADDR:

APP Session Key:

Network Session Key:

ADD\_KEY

##### Delete Key

Dev ADDR:

DELETE

##### ABP Keys:

Dev ADDR | APP Session Key | Network Session Key



## 5.3 LoRaWAN Settings

### 5.3.1 LoRaWAN --> LoRaWAN

This page is for the connection set up to a general LoRaWAN Network server such as: [TTN](http://www.ttn.ch), [ChirpStack](http://www.chirpstack.io) etc

### LoRaWAN Configuration

#### Server Settings

LoRaWAN Service Provider	TTN-router-EU		
Gateway ID	a84041ffff1d25dc		
Server Port Upstream	1700	Latitude	22.705177
Server Port Downstream	1700	Longitude	114.243423
Email	dragino-1d25dc@dragino.com		

#### Packet Filter


Port Filter	0
-------------	---

Note

\*\* : Packet filter is to drop the unwanted LoRaWAN packet, instruction see here:

See [http://wiki.dragino.com/index.php?title=Main\\_Page#Filter\\_unwanted\\_LoRaWAN\\_packets](http://wiki.dragino.com/index.php?title=Main_Page#Filter_unwanted_LoRaWAN_packets)

### 1.1.1 LoRaWAN --> Amazon AWS-IoT


LoRa LoRaWAN MQTT TCP Custom Network System LogRead

### Amazon AWS IoT -- LoRaWAN

#### Settings

CUPS URI	example: https://xxxxxxxx.cups.lorawan.us-east-1.amazonaws.com:443		
Email	dragino-1ec39c@dragino.com		
Gateway ID	a84041ffff1ec39c		
CUPS trust	Not Found	<input type="button" value="選擇檔案"/> 未選擇任何檔案	<input type="button" value="Upload_CUPS_Trust"/>
Private key	Not Found	<input type="button" value="選擇檔案"/> 未選擇任何檔案	<input type="button" value="Upload_Private_key"/>
Cert pem	Not Found	<input type="button" value="選擇檔案"/> 未選擇任何檔案	<input type="button" value="Upload_Cert_pem"/>

Current Mode: **LoRaWAN Semtech UDP** Click Save & Apply will change to mode: **LoRaWAN Station for AWS**

Please see this instruction to know more detail and demo for how to connect to AWS-IoT

LoRaWAN Core: [http://wiki.dragino.com/index.php?title=Notes\\_for\\_AWS-IoT-Core](http://wiki.dragino.com/index.php?title=Notes_for_AWS-IoT-Core)

### 5.3.2 LoRaWAN --> LORIoT

Settings to communicate to LORIoT LoRaWAN Network Server: <https://www.loriot.io/>

Instruction: [http://wiki.dragino.com/index.php?title=Notes\\_for\\_LORIoT](http://wiki.dragino.com/index.php?title=Notes_for_LORIoT)

## LORIENT Client Configuration

**LORIENT software not installed.**

Server Address

Server Port

Client Certificate

Client Key

CA File


Device EUI: A840411D25DF

[Certificate Management](#)

## 5.4 MQTT Settings

If end nodes work in ABP mode, user can configure LPS8 to transfer the data to MQTT broker, Instruction:

[http://wiki.dragino.com/index.php?title=Main\\_Page#MQTT\\_Forward\\_Instruction](http://wiki.dragino.com/index.php?title=Main_Page#MQTT_Forward_Instruction)

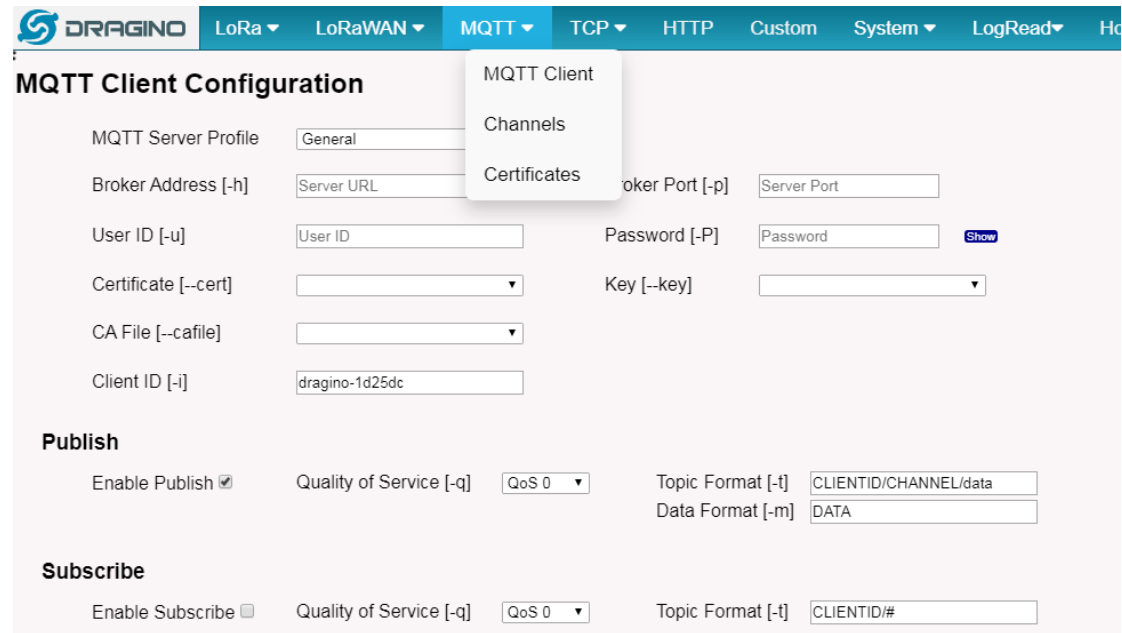

**MQTT Client Configuration**

MQTT Server Profile: General

Broker Address [-h]: Server URL

User ID [-u]: User ID

Password [-P]: Password [Show](#)

Certificate [--cert]:

Key [--key]:

CA File [--cafile]:

Client ID [-i]: dragino-1d25dc

**Publish**

Enable Publish ☒

Quality of Service [-q]: QoS 0

Topic Format [-t]: CLIENTID/CHANNEL/data

Data Format [-m]: DATA

**Subscribe**

Enable Subscribe ☐


Quality of Service [-q]: QoS 0

Topic Format [-t]: CLIENTID/#

## 5.5 System

### 5.5.1 System --> System Overview

Shows the system info:

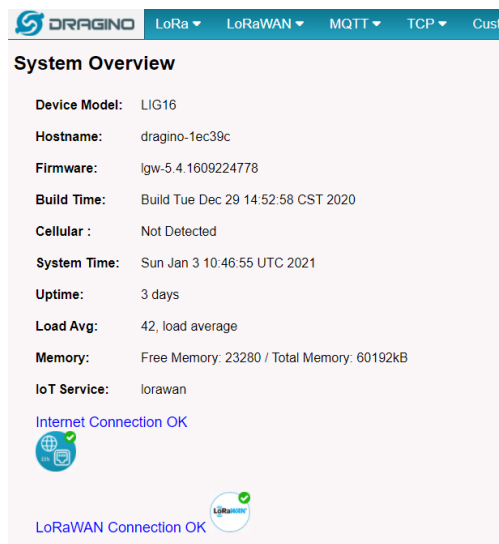


The screenshot shows the 'System Overview' page of the Dragino web interface. At the top, there is a navigation bar with tabs: LoRa, LoRaWAN, MQTT, TCP, and Custom. The 'System Overview' section displays the following information:

- Device Model:** LIG16
- Hostname:** dragino-1ec39c
- Firmware:** lgw-5.4.1609224778
- Build Time:** Build Tue Dec 29 14:52:58 CST 2020
- Cellular :** Not Detected
- System Time:** Sun Jan 3 10:46:55 UTC 2021
- Uptime:** 3 days
- Load Avg:** 42, load average
- Memory:** Free Memory: 23280 / Total Memory: 60192kB
- IoT Service:** lorawan

Below the system info, there are two status indicators:

- Internet Connection OK** (with a green globe icon)
- LoRaWAN Connection OK** (with a LoRaWAN logo icon)

### 5.5.2 System --> General ( login settings)

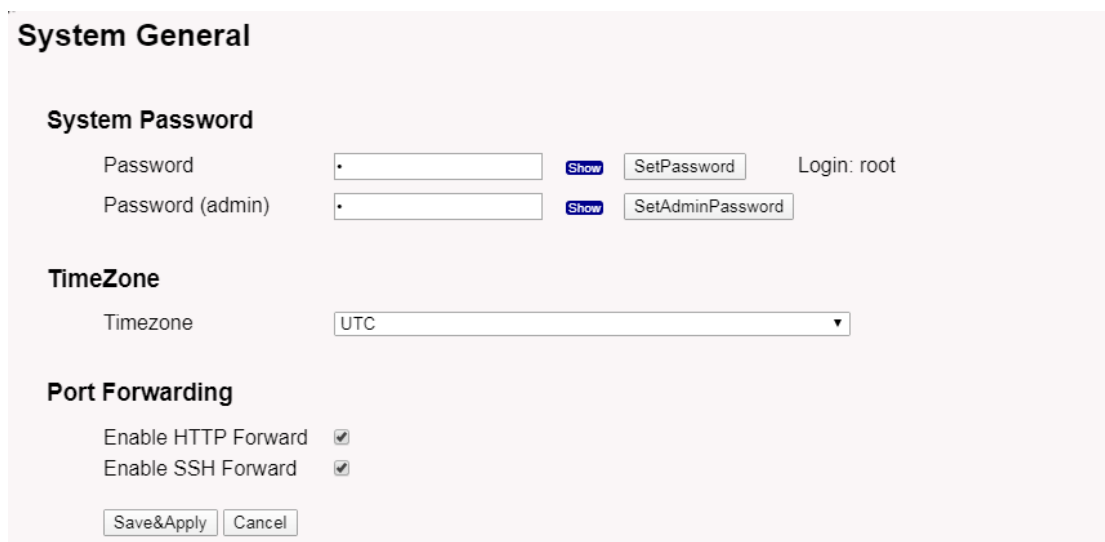

The screenshot shows the 'System General' settings page. It contains three main sections:

- System Password:**
  - Password:** A text input field with a 'Show' button and a 'SetPassword' button. The login is 'root'.
  - Password (admin):** A text input field with a 'Show' button and a 'SetAdminPassword' button.
- TimeZone:**
  - Timezone:** A dropdown menu currently set to 'UTC'.
- Port Forwarding:**
  - Enable HTTP Forward:** ☒
  - Enable SSH Forward:** ☒

At the bottom, there are two buttons: 'Save&Apply' and 'Cancel'.

#### System Password:

There are two logins for LPS8: **root /dragino** or **admin /dragino**. Both root and admin have the same right for WEB access. But root user has also the right to access via SSH to Linux system. admin only able to access WEB interface.

This page can be used to set the password for them.

#### Timezone:

Set device timezone.

**Port forwarding:**

Enable/Disable the HTTP and SSH access via WAN interface.

### 5.5.3 System --> Network

**Network**

**LAN Settings**

IP Address	<input type="text" value="10.130.1.1"/>	Gateway	<input type="text" value="255.255.255.255"/>
Netmask	<input type="text" value="255.255.255.0"/>	DNS	<input type="text" value="8.8.8.8"/>

**WAN Settings**

Enable DHCP

**WiFi WAN Settings**

Enable DHCP

#### **LAN Settings:**

When the LPS8 has the AP enable, LAN settings specify the network info for LPS8's own network.

#### **WAN Settings:**

Setting for LPS8 WAN port

#### **WiFi Settings:**

Setting for LPS8 WiFi IP when use it as WiFi Client

## 5.5.4 System --> WiFi

LPS8 WiFi Settings.

WiFi

Radio Settings

Channel (1-11)

11

Tx Power (0-18) dBm

17

WiFi Access Point Settings

Enable WiFi Access Point

WiFi Name SSID

dragino-1d25dc

Passphrase (8-32 char)

Show

Encryption

WPA2

WiFi WAN Client Settings

Enable WiFi WAN Client

Host WiFi SSID

EDWIN-OFFICE

Passphrase

Show

WiFi Survey

Choose WiFi SSID...

Encryption

WPA/WPA2

Save&Apply

Cancel

Refresh

## 5.5.5 System --> Network Status

### System Status

#### Network / WiFi Status

```

Network
-----
Lan IP Address:
  inet addr:10.130.1.1 Bcast:10.130.1.255 Mask:255.255.255.0

Eth WAN IP Address:
  inet addr:10.130.2.207 Bcast:10.130.2.255 Mask:255.255.255.0
  inet addr:172.31.255.254 Bcast:172.31.255.255 Mask:255.255.255.252

WiFi WAN IP Address:
Cellular:

Bridge:
bridge name bridge id      STP enabled interfaces
br-lan    7fff.a840411d25df    no      eth0
                                wlan0

WiFi
----
wlan0  ESSID: "dragino-1d25dc"
       Access Point: A8:40:41:1D:25:DC
       Mode: Master Channel: 11 (2.462 GHz)
       Tx-Power: 17 dBm Link Quality: unknown/70
       Signal: unknown Noise: -95 dBm
       Bit Rate: unknown
       Encryption: WPA2 PSK (CCMP)
       Type: nl80211 HW Mode(s): 802.11bgn
  
```


LPS8 LoRaWAN Gateway User Manual

31 / 48


## 5.5.6 System --> Remote Mgmt & Auto Update

Auto Provision is the feature for batch configure and remote management. It can be used in below two cases:


Case 1:  
Batch  
configure  
gateways  
before  
deploy

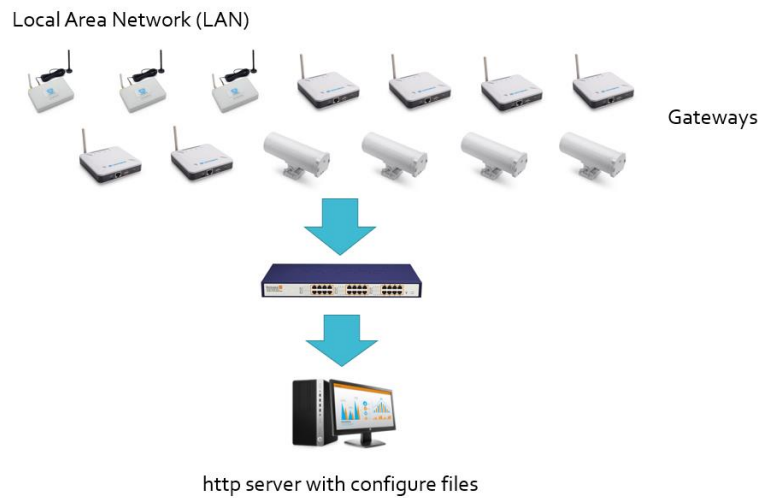

Case 2:  
Maintain  
gateway  
configure  
from  
cloud

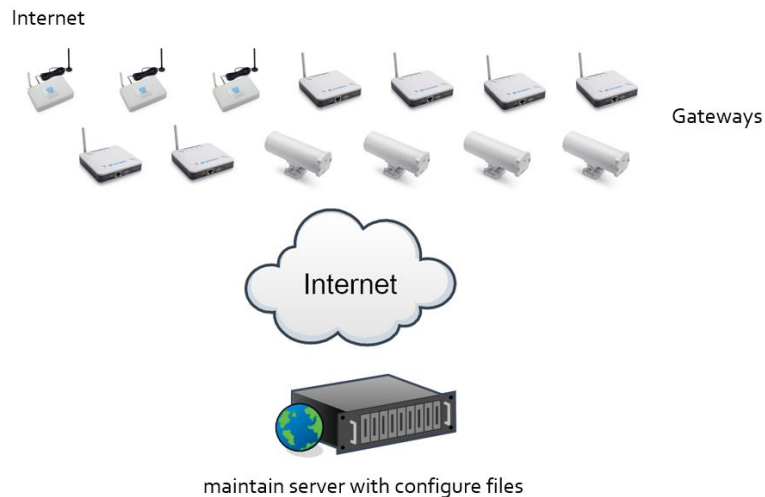

How it works

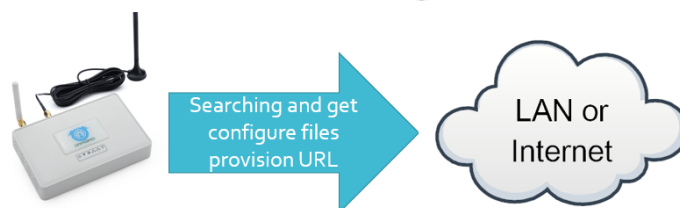

1. Gateways search (on every boot or 23:00 every day) the provision URL to get configure files or script files.
2. Gateways compare version number of the configure file, and process update if configure files has higher version.



Please see this document for detail:

[http://www.dragino.com/downloads/index.php?dir=LoRa\\_Gateway/LPS8/Firmware/Application\\_Note/&file=Auto-update-feature.pdf](http://www.dragino.com/downloads/index.php?dir=LoRa_Gateway/LPS8/Firmware/Application_Note/&file=Auto-update-feature.pdf)



R-SSH is for remote access device and management, introduction for how to use:

[http://wiki.dragino.com/index.php?title=Main\\_Page#Remote\\_Access\\_Gateway\\_via\\_Reverse\\_SSH](http://wiki.dragino.com/index.php?title=Main_Page#Remote_Access_Gateway_via_Reverse_SSH)

### R-SSH Host Settings

Login ID	<input type="text" value="sshuser"/>	Host Port	<input type="text"/>
Host Address	<input type="text" value="support.dragino.com"/>		
Connect at Startup <input type="checkbox"/>	GWID: a84041ffff1d25dc		
Connection Status: <b>Not connected to RSSH Host</b>			
<input type="button" value="Save"/> <input type="button" value="Connect"/> <input type="button" value="Disconnect"/> <input type="button" value="SetDefault"/> <input type="button" value="Cancel/Refresh"/>			

Note: Auto connection after startup may take up to 5 minutes to clear previous connection

### Generate New Keys

Current Key ID: **No keyfile present**

**Caution: Generating new keys will break any existing server connections!!**

[Download Public Key](#)


### 5.5.7 System --> Firmware Upgrade

We keep improving the LPS8 firmware for new features and bug fixes. Below are the links for reference.

- **Latest firmware:** [LoRa Gateway Firmware](http://www.dragino.com/downloads/index.php?dir=LoRa_Gateway/LPS8/Firmware),  
( [http://www.dragino.com/downloads/index.php?dir=LoRa\\_Gateway/LPS8/Firmware](http://www.dragino.com/downloads/index.php?dir=LoRa_Gateway/LPS8/Firmware) )
- **Change Log:** [Firmware Change Log](http://www.dragino.com/downloads/downloads/LoRa_Gateway/LPS8/Firmware/ChangeLog).  
( [http://www.dragino.com/downloads/downloads/LoRa\\_Gateway/LPS8/Firmware/ChangeLog](http://www.dragino.com/downloads/downloads/LoRa_Gateway/LPS8/Firmware/ChangeLog) )

The file named as **dragino-lgw-xxxxx-squashfs-sysupgrade.bin** is the upgrade Image. as below.

#### Web → System → Firmware Upgrade

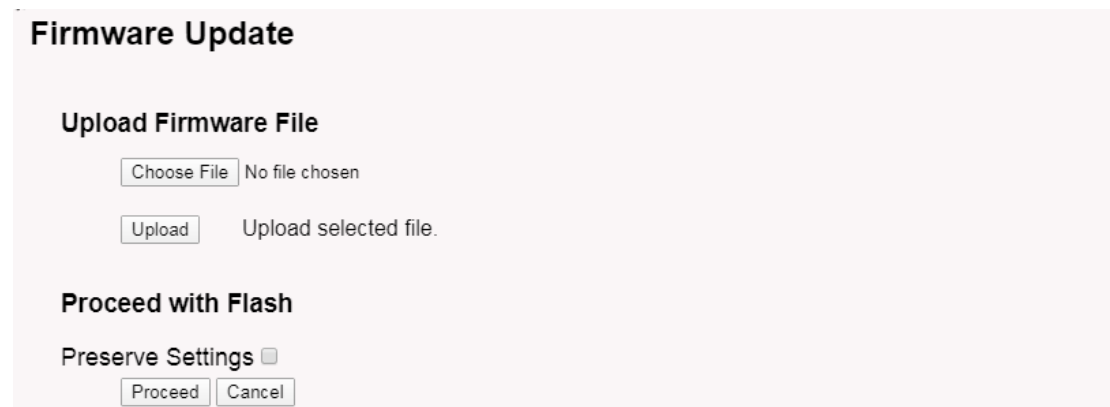


The screenshot shows a web interface titled "Firmware Update". It contains two main sections. The first section, "Upload Firmware File", has a "Choose File" button next to the text "No file chosen", and an "Upload" button next to the text "Upload selected file.". The second section, "Proceed with Flash", has a "Preserve Settings" checkbox which is currently unchecked, and "Proceed" and "Cancel" buttons below it.

Select the required image and click **Upload**. The image will be uploaded to the device, and then click **Process** to upgrade.

**NOTE:** You normally need to **uncheck** the **Preserve Settings** checkbox when doing an upgrade to ensure that there is no conflict between the old settings and the new firmware. The new firmware will start up with its default settings.

The system will automatically boot into the new firmware after upgrade.

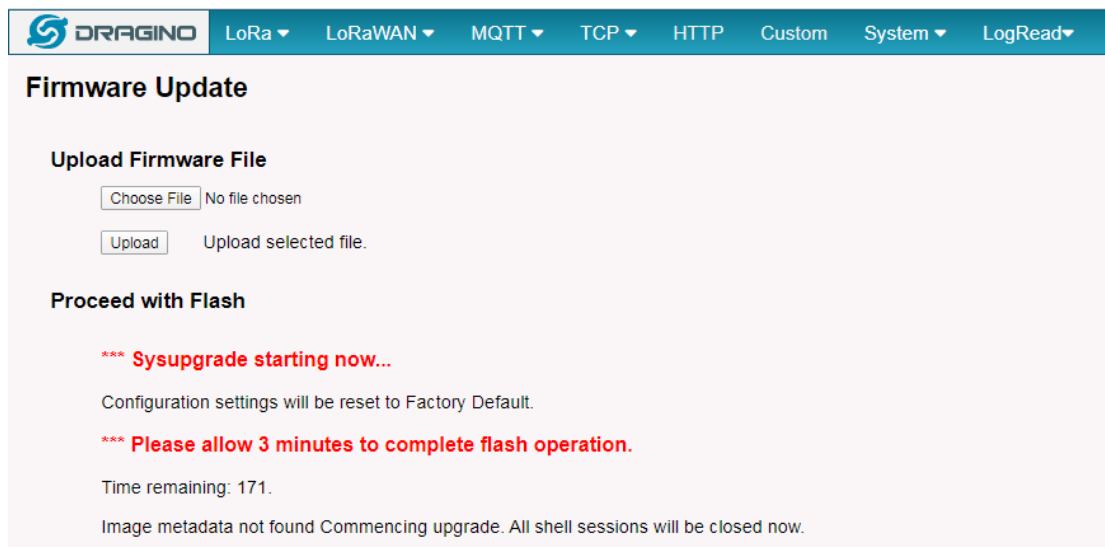


Note \*: User can also upgrade firmware via Linux console

SCP the firmware to the system **/var** directory and then run

```
root@OpenWrt:~# /sbin/sysupgrade -n /var/Your_Image
```

**NOTE:** it is important to transfer the image in the /var directory, otherwise it may exceed the available flash size.

### 5.5.8 System --> Reboot/Reset

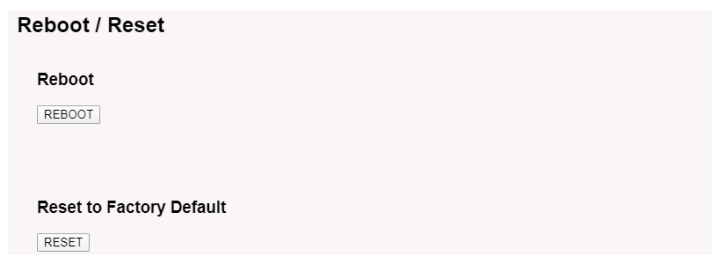

## 5.5.9 System --> Package Maintain

### Package Management

#### Package List

Package data is not loaded. Click on Reload to download package data.

Click Reload to download package list. This will take a while.

#### Installed Package List

```
atftp - 0.7.1-5
base-files - 190-r5-ce45a50
blkid - 2.32-2
block-mount - 2018-04-16-e2436836-1
busybox - 1.28.3-4
ca-certificates - 20180409
cifs-utils - 7.0-1.1
```

Place to show what packages have been installed and possible to upgrade packages.

## 6 More features

### 6.1 Packet Filtering

Drop unwanted packets:

See [http://wiki.dragino.com/index.php?title=Main\\_Page#Filter\\_unwanted\\_LoRaWAN\\_packets](http://wiki.dragino.com/index.php?title=Main_Page#Filter_unwanted_LoRaWAN_packets)

### 6.2 Remote Access

Remote Access Devices for management:

Instruction

[http://wiki.dragino.com/index.php?title=Main\\_Page#Remote\\_Access\\_Gateway\\_via\\_Reverse\\_SSH](http://wiki.dragino.com/index.php?title=Main_Page#Remote_Access_Gateway_via_Reverse_SSH)

### 6.3 How to decode ABP LoRaWAN node

Decode ABP

[http://wiki.dragino.com/index.php?title=Communication\\_with\\_ABP\\_End\\_Node](http://wiki.dragino.com/index.php?title=Communication_with_ABP_End_Node)

### 6.4 How to set data to MQTT broker

Only support ABP LoRaWAN End Node

Instruction:

[http://wiki.dragino.com/index.php?title=Main\\_Page#MQTT\\_Forward\\_Instruction](http://wiki.dragino.com/index.php?title=Main_Page#MQTT_Forward_Instruction)

### 6.5 More instructions


[http://wiki.dragino.com/index.php?title=Main\\_Page#LoRa.2FLoRaWAN\\_Gateway\\_Instruction](http://wiki.dragino.com/index.php?title=Main_Page#LoRa.2FLoRaWAN_Gateway_Instruction)

## 6.6 Auto-Provision

Auto Provision is the feature for batch configure and remote management. It can be used in below two cases:


Case 1:  
Batch  
configure  
gateways  
before  
deploy

Local Area Network (LAN)

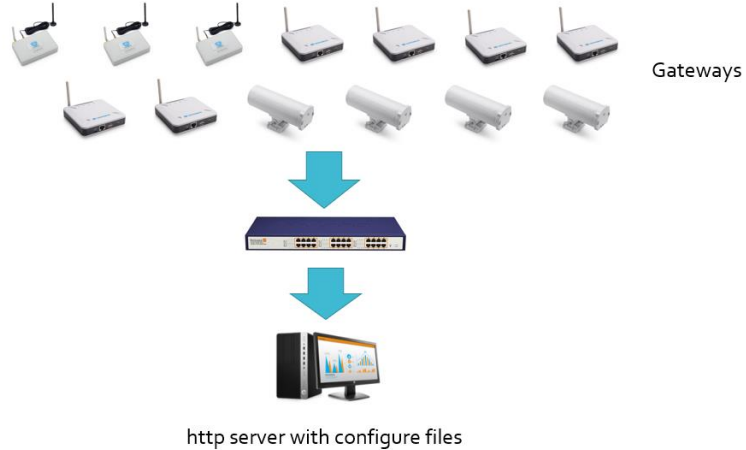


Case 2:  
Maintain  
gateway  
configure  
from  
cloud

Internet

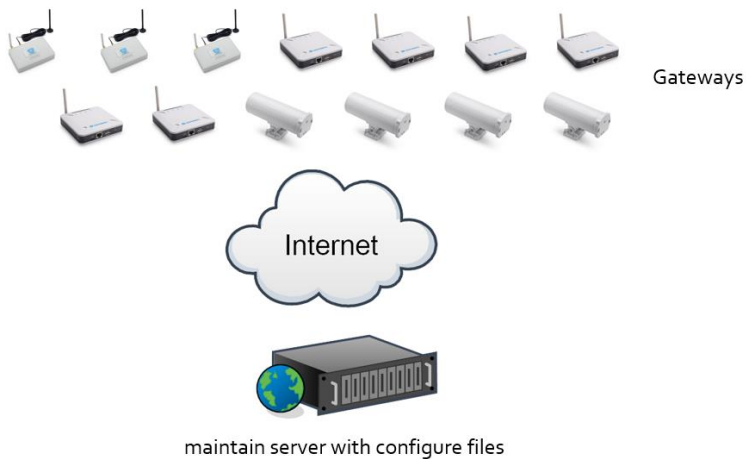

How it works

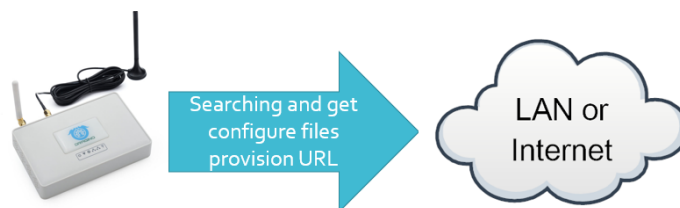

1. Gateways search (on every boot or 23:00 every day) the provision URL to get configure files or script files.
2. Gateways compare version number of the configure file, and process update if configure files has higher version.



Please see this document for detail:

[http://www.dragino.com/downloads/index.php?dir=LoRa\\_Gateway/LPS8/Firmware/Application\\_Note/&file=Auto-update-feature.pdf](http://www.dragino.com/downloads/index.php?dir=LoRa_Gateway/LPS8/Firmware/Application_Note/&file=Auto-update-feature.pdf)

## 7 Linux System

The LPS8 is based on the OpenWrt Linux system. It is open source, and users are free to configure and modify the Linux settings.

### 7.1 SSH Access for Linux console

User can access the Linux console via the SSH protocol. Make sure your PC and the LPS8 are connected to the same network, then use a SSH tool (such as [putty](#) in Windows) to access it.


IP address: IP address of LPS8

Port: 22 or 2222 (SSH port in WAN interface has been change to 2222 since firmware 5.3.xx, for security reason)

User Name: **root**

Password: **dragino** (default)

After logging in, you will be in the Linux console and can enter commands as shown below.

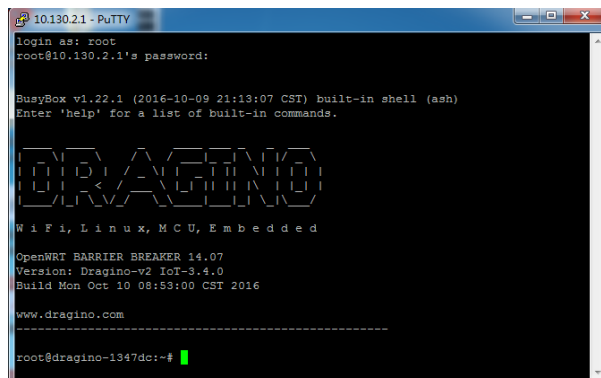

```

10130.21 - PuTTY
login as: root
root@10.130.2.1's password:


BusyBox v1.22.1 (2016-10-09 21:13:07 CST) built-in shell (ash)
Enter 'help' for a list of built-in commands.

dragino
W i F i , L i n u x , M C U , E m b e d d e d

OpenWRT BARRIER BREAKER 14.07
Version: Dragino-v2 IoT-3.4.0
Build Mon Oct 10 08:53:00 CST 2016
www.dragino.com

root@dragino-1947dc:~#
  
```

The “logread -f” command can be used to debug how system runs.

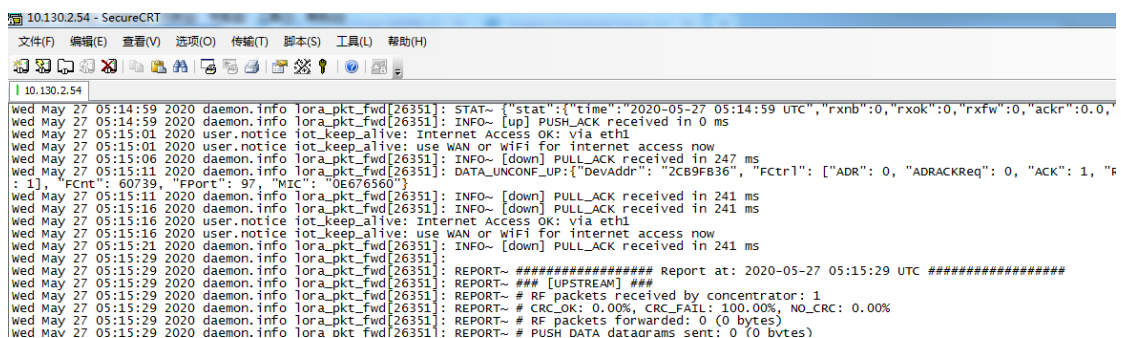

```

10.130.2.54
文件(F) 编辑(E) 查看(V) 选项(O) 传输(T) 脚本(S) 工具(L) 帮助(H)

10.130.2.54
wed May 27 05:14:59 2020 daemon.info lora_pkt_fwd[26351]: STAT~ {"stat":{"time":"2020-05-27 05:14:59 UTC","rxnb":0,"rxok":0,"rxfw":0,"ackr":0.0,
wed May 27 05:14:59 2020 daemon.info lora_pkt_fwd[26351]: INFO~ [up] PUSH_ACK received in 0 ms
wed May 27 05:15:01 2020 user.notice iot_keep_alive: Internet Access OK: via eth1
wed May 27 05:15:01 2020 user.notice iot_keep_alive: use WAN or WiFi for internet access now
wed May 27 05:15:06 2020 daemon.info lora_pkt_fwd[26351]: INFO~ [down] PULL_ACK received in 247 ms
wed May 27 05:15:11 2020 daemon.info lora_pkt_fwd[26351]: DATA_UNCONF_UP:{"DevAddr": "2c89f836", "FCtrl": [{"ADR": 0, "ADRACKReq": 0, "ACK": 1, "F
: 1}, {"Cnt": 60739, "FPort": 97, "Mic": "0e676560"}]
wed May 27 05:15:11 2020 daemon.info lora_pkt_fwd[26351]: INFO~ [down] PULL_ACK received in 241 ms
wed May 27 05:15:16 2020 daemon.info lora_pkt_fwd[26351]: INFO~ [down] PULL_ACK received in 241 ms
wed May 27 05:15:16 2020 user.notice iot_keep_alive: Internet Access OK: via eth1
wed May 27 05:15:16 2020 user.notice iot_keep_alive: use WAN or WiFi for internet access now
wed May 27 05:15:21 2020 daemon.info lora_pkt_fwd[26351]: INFO~ [down] PULL_ACK received in 241 ms
wed May 27 05:15:29 2020 daemon.info lora_pkt_fwd[26351]: REPORT~ ##### Report at: 2020-05-27 05:15:29 UTC #####
wed May 27 05:15:29 2020 daemon.info lora_pkt_fwd[26351]: REPORT~ ### [UPSTREAM] ###
wed May 27 05:15:29 2020 daemon.info lora_pkt_fwd[26351]: REPORT~ # RF packets received by concentrator: 1
wed May 27 05:15:29 2020 daemon.info lora_pkt_fwd[26351]: REPORT~ # CRC_OK: 0.00%, CRC_FAIL: 100.00%, NO_CRC: 0.00%
wed May 27 05:15:29 2020 daemon.info lora_pkt_fwd[26351]: REPORT~ # RF packets forwarded: 0 (0 bytes)
wed May 27 05:15:29 2020 daemon.info lora_pkt_fwd[26351]: REPORT~ # PUSH DATA datagrams sent: 0 (0 bytes)
  
```


## 7.2 Edit and Transfer files

The LPS8 supports the **SCP protocol** and has a built-in **SFTP server**. There are many ways to edit and transfer files using these protocols.

In Windows, one of the easiest methods is using the [WinSCP](#) utility.

After establishing access via WinSCP to the device, you can use an FTP style window to drag / drop files to the LPS8, or edit the files directly in the windows.

Screenshot is as below:

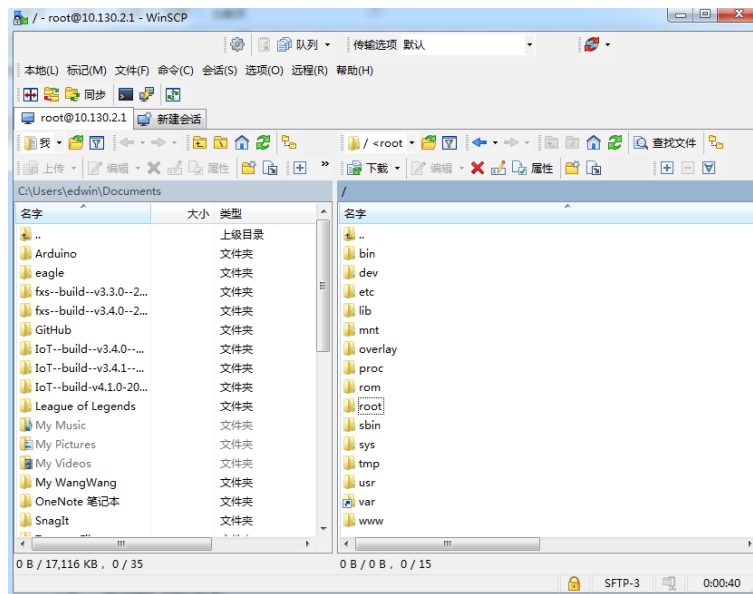

## 7.3 File System

The LPS8 has a 16MB flash and a 64MB RAM. The /var and /tmp directories are in the RAM, so contents stored in /tmp and /var will be erased after rebooting the device. Other directories are in the flash and will remain after reboot.

The Linux system uses around 8MB ~10MB flash size which means there is not much room for user to store data in the LPS8 flash.

You can use an external USB flash memory device to extend the size of flash memory for storage.



## 7.4 Package maintenance system

LPS8 uses the OpenWrt [OPKG package maintenance system](#). There are more than 3000+ packages available in our package server for users to install for their applications. For example, if you want to add the *iperf* tool, you can install the related packages and configure LPS8 to use *iperf*.

Below are some example *opkg* commands. For more information please refer to the [OPKG package maintain system](#) (<https://wiki.openwrt.org/doc/techref/opkg>)

In Linux Console run:

```
root@dragino-169d30:~# opkg update // to get the latest packages list
```

```
root@dragino-169d30:~# opkg list //shows the available packages
```

```
root@dragino-169d30:~# opkg install iperf // install iperf
```

The system will automatically install the required packages as shown below.

```
root@dragino-169d30:/etc/opkg# opkg install iperf
```

```
Installing iperf (2.0.12-1) to root...
```

```
Downloading http://downloads.openwrt.org/snapshots/packages/mips\_24kc/base/iperf\_2.0.12-1\_mips\_24kc.ipk
```

```
Installing uclibcxx (0.2.4-3) to root...
```

```
Downloading http://downloads.openwrt.org/snapshots/packages/mips\_24kc/base/uclibcxx\_0.2.4-3\_mips\_24kc.ipk
```

```
Configuring uclibcxx.
```

```
Configuring iperf.
```

## 8 Upgrade Linux Firmware

We keep improving the LPS8 Linux side firmware for new features and bug fixes. Below are the links for reference.

- **Latest firmware:** [LoRa Gateway Firmware](http://www.dragino.com/downloads/index.php?dir=LoRa_Gateway/LG02-OLG02/Firmware),  
( [http://www.dragino.com/downloads/index.php?dir=LoRa\\_Gateway/LG02-OLG02/Firmware](http://www.dragino.com/downloads/index.php?dir=LoRa_Gateway/LG02-OLG02/Firmware) )
- **Change Log:** [Firmware Change Log](http://www.dragino.com/downloads/downloads/LoRa_Gateway/LG02-OLG02/Firmware/ChangeLog).  
( [http://www.dragino.com/downloads/downloads/LoRa\\_Gateway/LG02-OLG02/Firmware/ChangeLog](http://www.dragino.com/downloads/downloads/LoRa_Gateway/LG02-OLG02/Firmware/ChangeLog) )

The file named as **xxxxx-xxxxx-squashfs-sysupgrade.bin** is the upgrade Image. There are different methods to upgrade, as below.


### 8.1 Upgrade via Web UI

Go to the page: **Web → System → Firmware Upgrade**

Select the required image and click **Flash Image**. The image will be uploaded to the device, and then click **Process Update** to upgrade.

**NOTE:** You normally need to **uncheck** the **Preserve Settings** checkbox when doing an upgrade to ensure that there is no conflict between the old settings and the new firmware. The new firmware will start up with its default settings.

The system will automatically boot into the new firmware after upgrade.

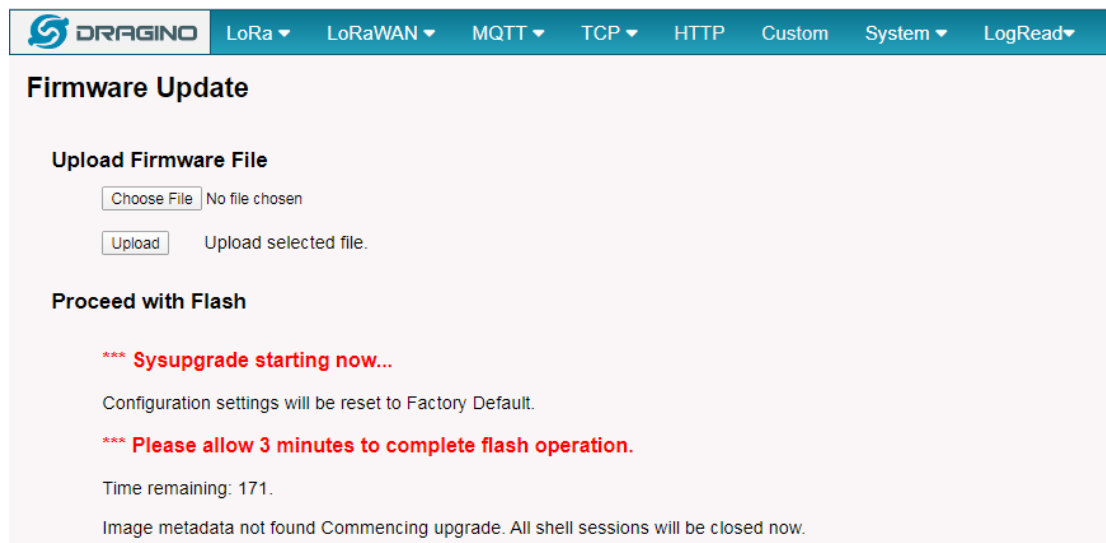

The screenshot shows the Dragino web interface for firmware upgrade. At the top is a navigation bar with the Dragino logo and tabs for LoRa, LoRaWAN, MQTT, TCP, HTTP, Custom, System, and LogRead. The 'System' tab is selected, leading to the 'Firmware Update' page. The page has a light purple background and contains two main sections: 'Upload Firmware File' and 'Proceed with Flash'. The 'Upload Firmware File' section has a 'Choose File' button (labeled 'No file chosen') and an 'Upload' button (labeled 'Upload selected file.'). The 'Proceed with Flash' section displays a red status message: '\*\*\* Sysupgrade starting now...'. Below this, it states 'Configuration settings will be reset to Factory Default.' and another red message: '\*\*\* Please allow 3 minutes to complete flash operation.' The 'Time remaining: 171.' is shown, followed by the text 'Image metadata not found Commencing upgrade. All shell sessions will be closed now.'

## 8.2 Upgrade via Linux console

SCP the firmware to the system **/var** directory and then run

```
root@OpenWrt:~# /sbin/sysupgrade -n /var/Your_Image
```

**NOTE:** it is important to transfer the image in the /var directory, otherwise it may exceed the available flash size.

## 9 FAQ

### 9.1 How can I configure for a customized frequency band?

See below link for how to customize frequency band:

[http://wiki.dragino.com/index.php?title=Customized\\_Frequency\\_Band\\_for\\_Gateway](http://wiki.dragino.com/index.php?title=Customized_Frequency_Band_for_Gateway)

### 9.2 Can I make my own firmware for the gateway, Where can I find the source code?

Yes, You can make your own firmware for the LPS8 for branding purposes or to add customized applications.

The source code and compile instructions can be found at:

[https://github.com/dragino/openwrt\\_lede-18.06](https://github.com/dragino/openwrt_lede-18.06)

### 9.3 Can I use 868Mhz version for 915Mhz bands?

It is possible but the distance will be very short, you can select US915 frequency band in 868Mhz version hardware. It will work but you will see the performance is greatly decreased because the 868Mhz version has an RF filter for band 863~870Mhz, all other frequencies will have high attenuation.

## 10 Trouble Shooting

### 10.1 I get kernel error when install new package, how to fix?

In some cases, when installing a package with **opkg**, it will generate a kernel error such as below due to a mismatch I the kernel ID:

```
root@dragino-16c538:~# opkg install kmod-dragino2-si3217x_3.10.49+0.2-1_ar71xx.ipk
Installing kmod-dragino2-si3217x (3.10.49+0.2-1) to root...
Collected errors:
* satisfy_dependencies_for: Cannot satisfy the following dependencies for kmod-dragino2-si3217x:
*   kernel (= 3.10.49-1-4917516478a753314254643facdf360a) *
* opkg_install_cmd: Cannot install package kmod-dragino2-si3217x.
```

In this case, you can use the `--force-depends` option to install such package as long as the actual kernel version is the same.


```
Opkg install kmod-dragino2-si3217x_3.10.49+0.2-1_ar71xx.ipk --force-depends
```

### 10.2 How to recover the LPS8 if the firmware crashes

Please follow this instruction to recover your gateway:

[http://wiki.dragino.com/index.php?title=Recover\\_Gateway](http://wiki.dragino.com/index.php?title=Recover_Gateway)

### 10.3 I configured LPS8 for WiFi access and lost its IP. What to do now?

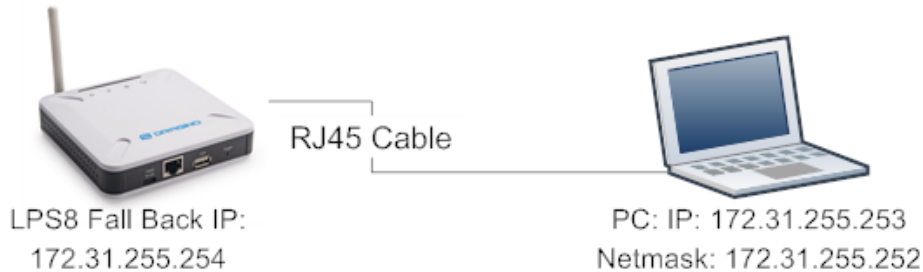


The LPS8 has a fall-back IP address on its WAN port. This IP is always enabled so you can use the fall-back IP to access LPS8 no matter what the WiFi IP is. The fall back IP is useful for connecting and debug the unit.

(Note: fallback IP can be disabled in the WAN and DHCP page)

Steps to connect via fall back IP:

1. Connect PC's Ethernet port to LG01's WAN port
2. Configure PC's Ethernet port has  
IP: 172.31.255.253 and  
Netmask: 255.255.255.252

As below photo:

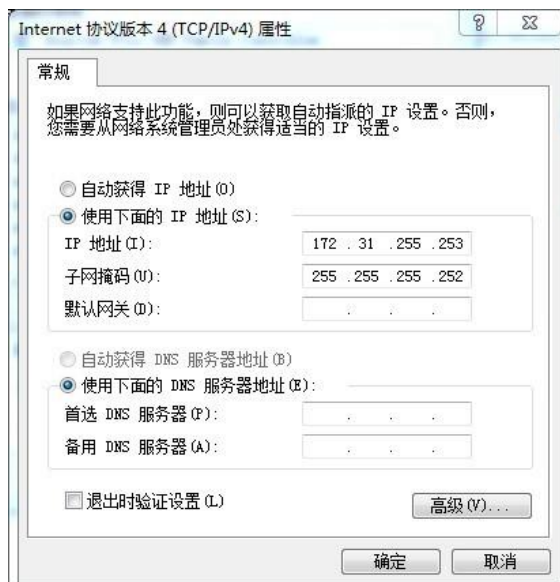

3. In the PC, use IP address 172.31.255.254 to access the LPS8 via Web or Console. Please note the latest firmware uses port 8000 for http and 2222 for ssh access.

## 10.4 I connect to the LPS8's SSID but LPS8 didn't assign DHCP IP to my laptop?

This is a known bug for the firmware version before 2019-09-23 for LPS, the issue was fixed since version: LG02\_LG08--build-v5.2.1569218466-20190923-1402.

In the old version, user can use the [fall back ip method](#) to access and configure the device.

## 11 Order Info

**PART: LPS8-XXX-YYY:**

**XXX: Frequency Band**

- **868**: valid frequency: 863Mhz ~ 870Mhz. for bands EU868, RU864, IN865 or KZ865.
- **915**: valid frequency: 902Mhz ~ 928Mhz. for bands US915, AU915, AS923 or KR920

## 12 Packing Info

### **Package Includes:**

- ✓ LPS8 LoRaWAN Gateway x 1
- ✓ Stick Antenna for LoRa RF part. Frequency is one of 470 or 868 or 915Mhz depends the model ordered
- ✓ Packaging with environmental protection paper box

### **Dimension and weight:**

- ✓ Device Size: 12 x 12 x 3 cm
- ✓ Weight: 187g
- ✓ Package Size: 14.5 x 13.5 x 6 cm
- ✓ Weight: 300g

## 13 Support

- Try to see if your questions already answered in the [wiki](#).
- Support is provided Monday to Friday, from 09:00 to 18:00 GMT+8.  
Due to different timezones we cannot offer live support. However, your questions will be answered as soon as possible in the before mentioned schedule.
- Provide as much information as possible regarding your enquiry (product models, accurately describe your problem and steps to replicate it etc) and send a mail to:

[support@dragino.com](mailto:support@dragino.com)

## 14 FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation