


COLUMNS

1 2 3 4 5 6 7 8 9 10

ROWS

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15

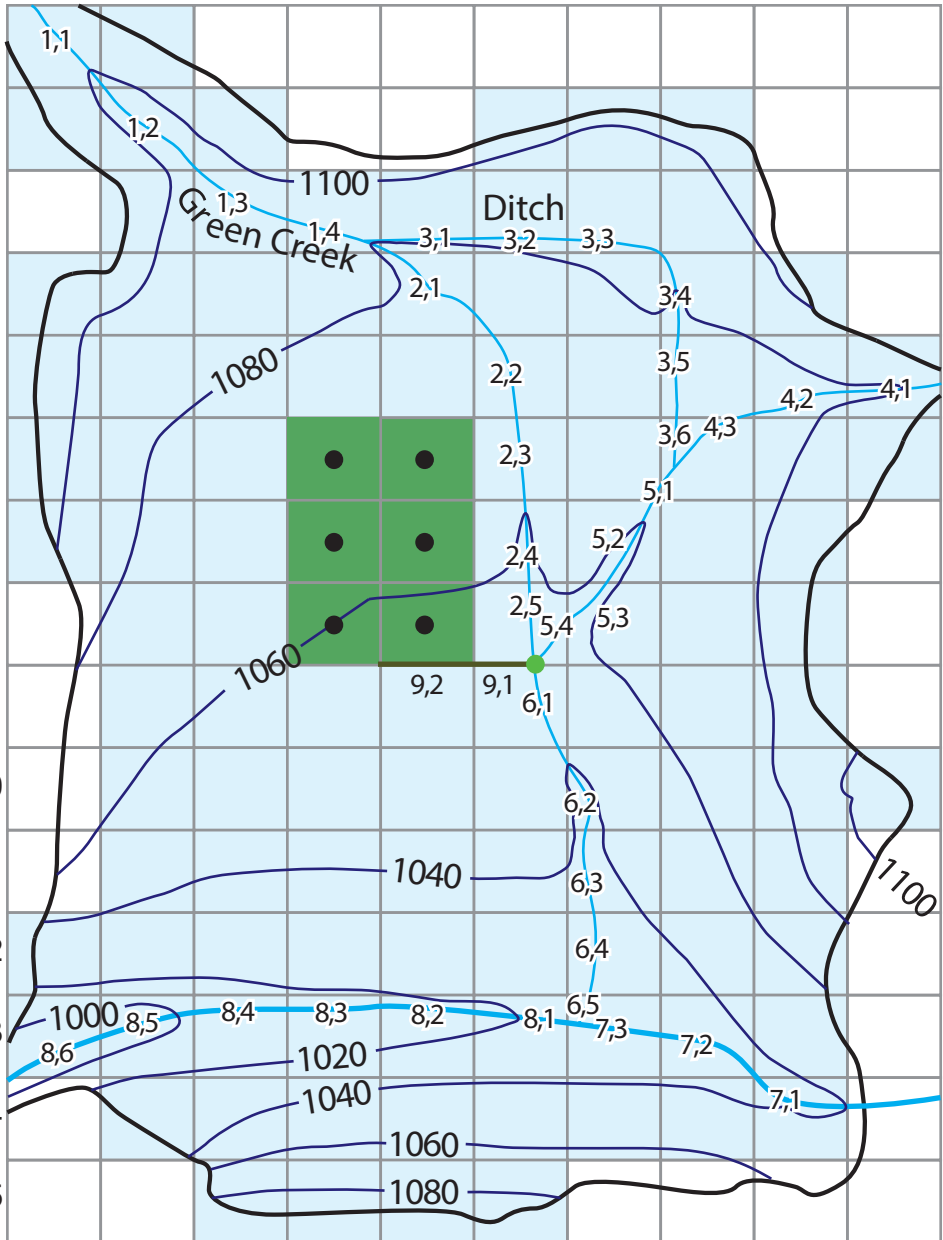

0 10,000 20,000 FEET

EXPLANATION



Irrigated model cell



Active model cell

8,4

Segment number and reach number

— 1000 —

Contour—Shows altitude of land surface.
Contour interval is 20 feet



Irrigation canal



Irrigation wells



Basin-fill boundary



Irrigation diversion point