


***** SMS Commands Examples *****

*** Here “EDS” is password that can be changed by user.

1. SOS Number -> @SETCONF#EDS,SOS-9876543210,
2. IP Address -> @SETCONF#EDS,IP-210.7.74.185,
3. Port Number -> @SETCONF#EDS,PORT-4441,
4. Hitting time (Ignition ON) -> @SETCONF#EDS,AT-10,
5. Hitting time (Ignition OFF) -> @SETCONF#EDS,ST-120,
6. Hitting Distance interval (meter)-> @SETCONF#EDS,AD-100,
7. Hitting angle -> @SETCONF#EDS,AA-30,
8. Internal battery low level(%) -> @SETCONF#EDS,IBL-15,
9. External battery low level(%) -> @SETCONF#EDS,EBL-25,
10. New Password -> @SETCONF#EDS,PWD- EDS,
11. Master Number -> @SETCONF#EDS,MNO-1234567890,
12. Speed Limit -> @SETCONF#EDS,SL-150,
13. SMS Tracking Interval -> @SETCONF#EDS,TT-300,
14. Sleep Mode Time Internal -> @SETCONF#EDS,SMT-900,
15. SMS enable Byte -> @SETCONF#EDS,SCFG-00000000,

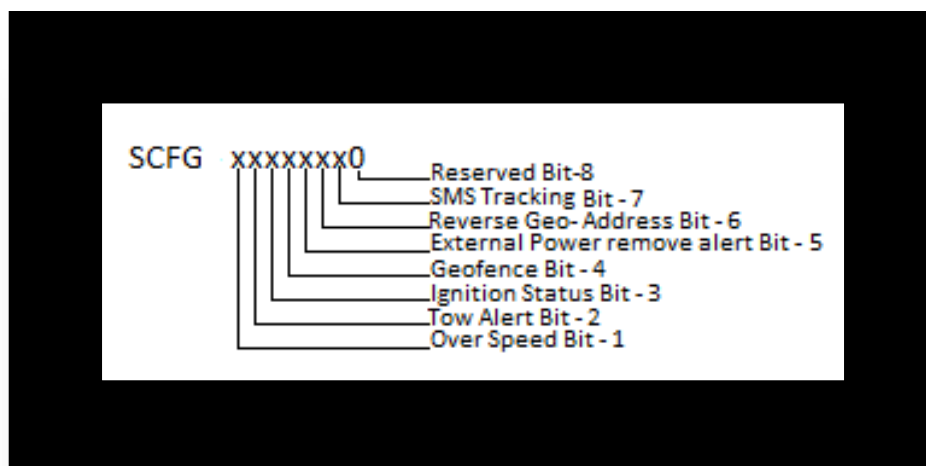

16. Set APN -> @SETCONF#EDS,APN-aircelgprs.com,

17. Location -> @GET#

- 18. GPS/GPRS Data -> @SMSDATA#
- 19. Configuration check -> @GETCONF#
- 20. TO hit server instantly -> @POLL#
- 21. To reset system -> @RESET#
- 22. Debug -> @DEBUG#
- 23. Clear backup data -> @BKPRST#

***** DISPLAY SMS Commands *****

@SETCONF#EDS,TIME-XXX	PAGE TIME OUT
@SETCONF#EDS,SPEED-XXX	SPEED OF MOVING CHARACTERS IN DESENDING ORDER
@SETCONF#EDS,RAD-XX	RADIUS OF GEOFENCE AREA
@SETCONF#EDS,VOL-XX	VOLUME LEVEL OF SPEAKER

@GETPAGE#<Number> Number of required page not more than 10

@CLRPG#<Number> Number of target page to be deleted

@MSG#<Page Number>,<bus number>#1,<effect>,<MSG>^

EXP: @MSG#1,711#1,S,Display Message ^