



Divisible Workspace: End User Guide

Tap the **Room Controls** button.

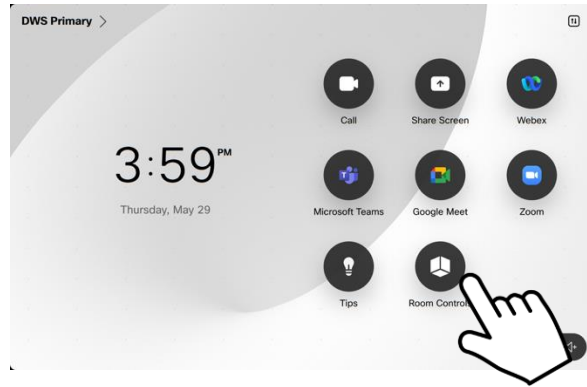

Tap the **Combine Rooms** button. If prompted, select the rooms you wish to combine with.

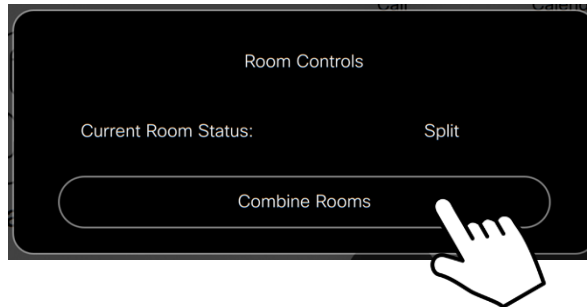


Confirm the request to combine the rooms.



To **Split** the rooms, Follow the same steps to combine. The button will now say **Split Rooms**.

Important Note:


Splitting or Combining the Workspaces takes approximately **two minutes** to complete.

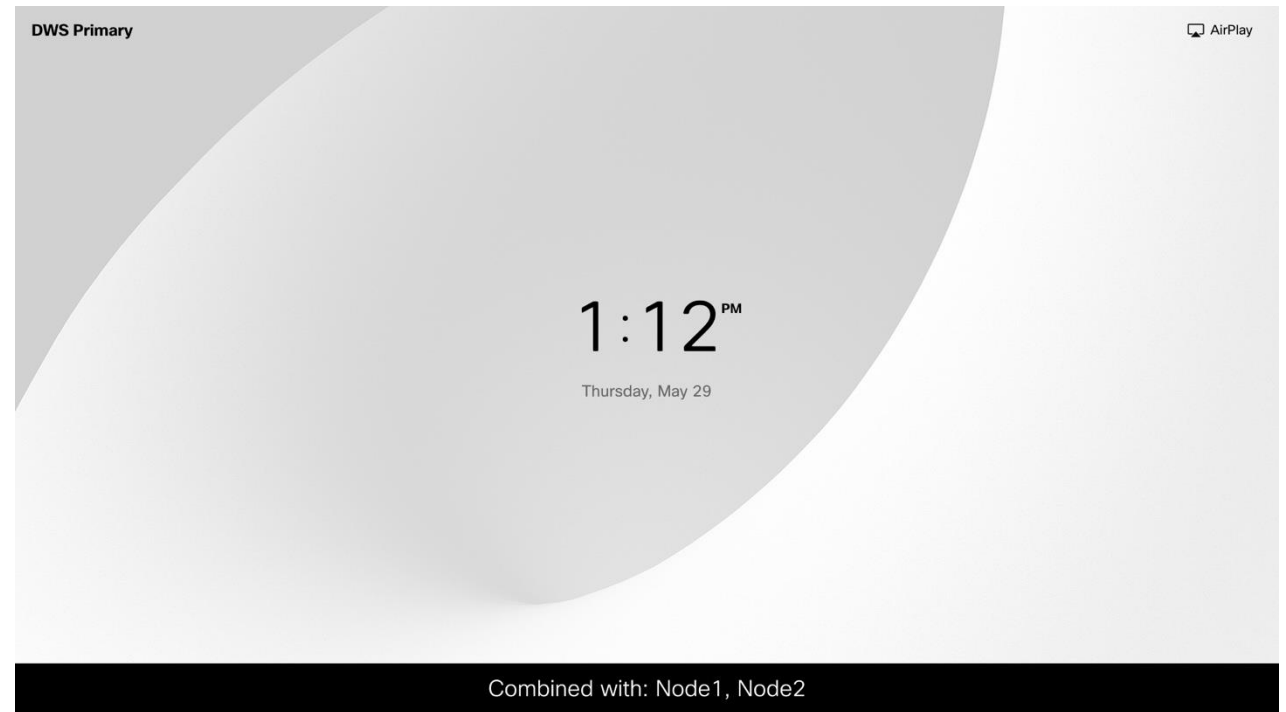

When in **Combined** mode, the displays will show a banner to inform you of the spaces that are currently combined.


Divisible Workspace: End User Guide

Tap the **Automation Enabled** or **Automation Disabled** button to toggle automatic mode **On** or **Off**.

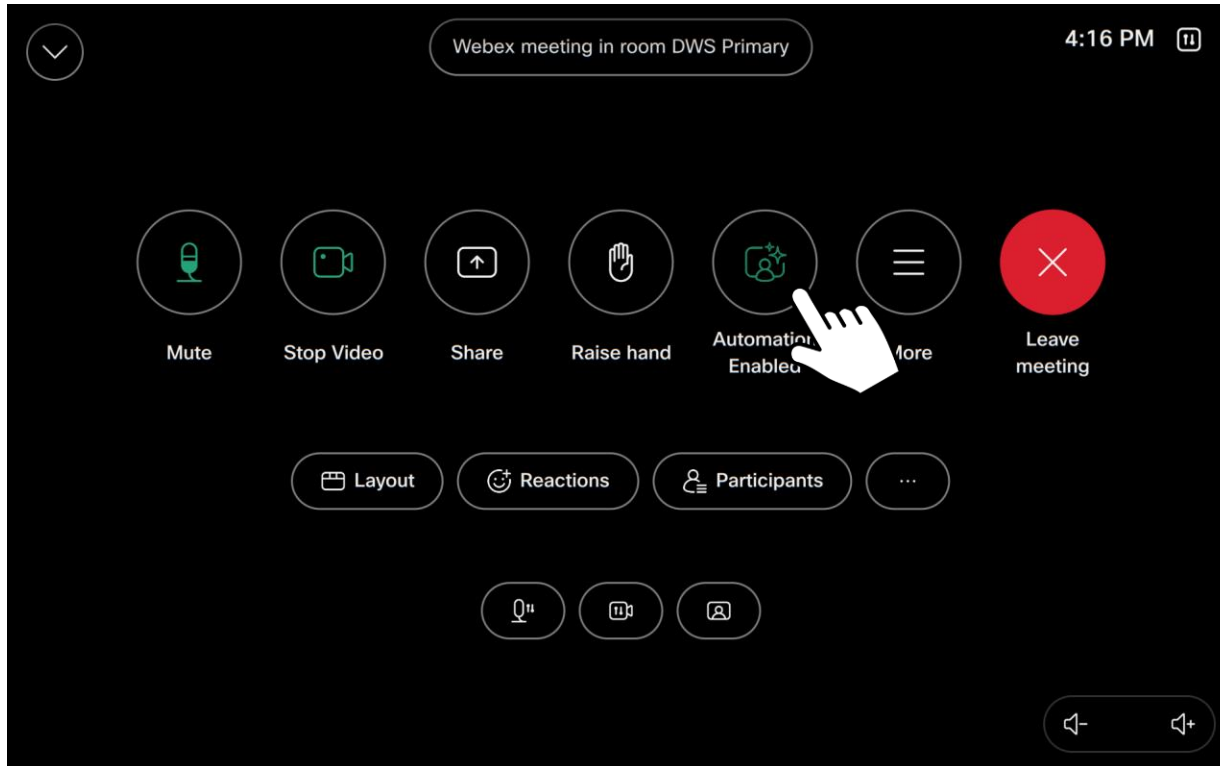


Automation Enabled: Uses Presenter Track detection to automatically transition to the rear Presenter Camera.

This mode will also automate the compositing and switching of the audience based on microphone activity if no presenter is detected.

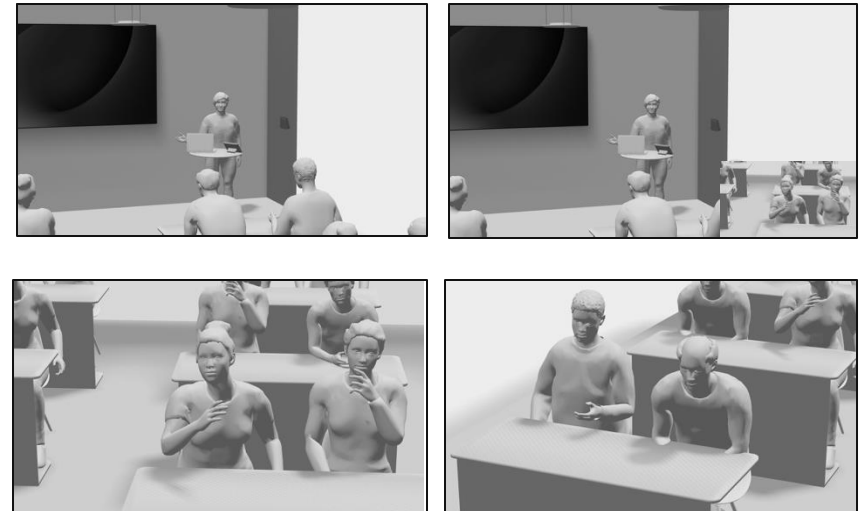


Divisible Workspace: End User Guide

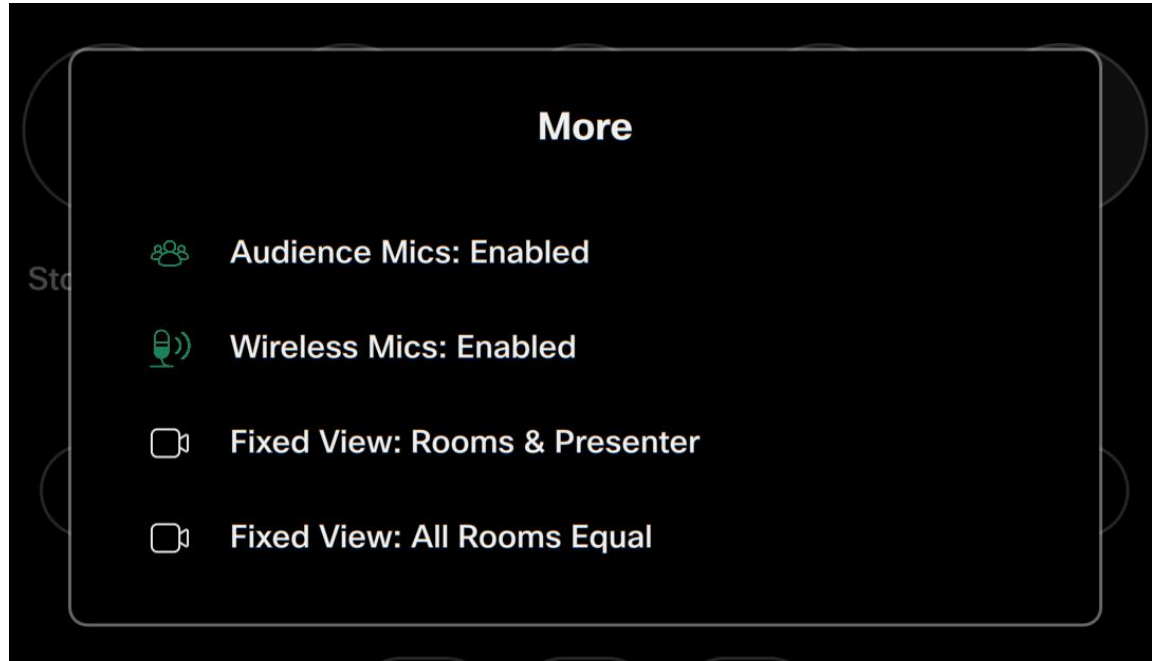


Tapping the Audience Mics button toggles all Cisco Ceiling Microphones (across all combined spaces) to be **On** or **Off**.

Tapping the Wireless Mics button toggles all third-party microphones (handhelds, lapels, etc) connected to the **Primary Room** to be **On** or **Off**.

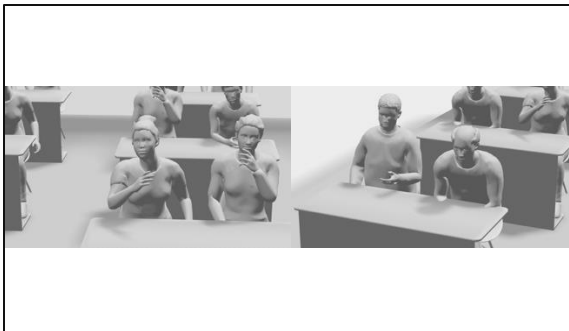

All Rooms Equal

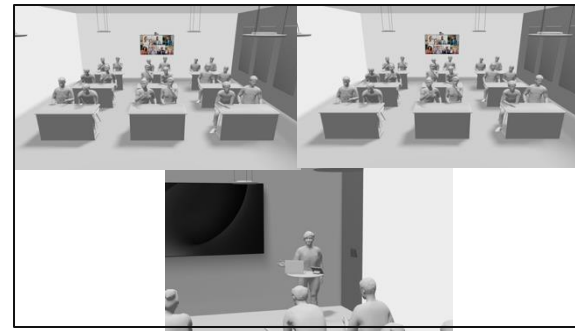

Rooms and Presenter

Fixed Camera Modes: These modes provide predefined compositions of multiple cameras or the ability to send only a single camera with automation disabled.

Tap any of the **Fixed** modes to trigger their respective experiences.