



Divisible Workspace: End User Guide

Combining Rooms


Tap the **Room Controls** button.

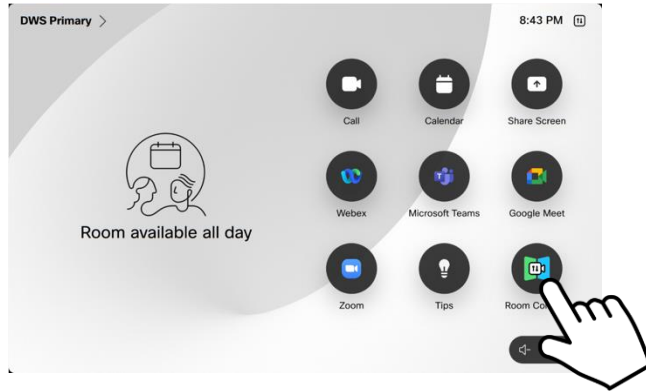

Tap the **Combine Rooms** button.

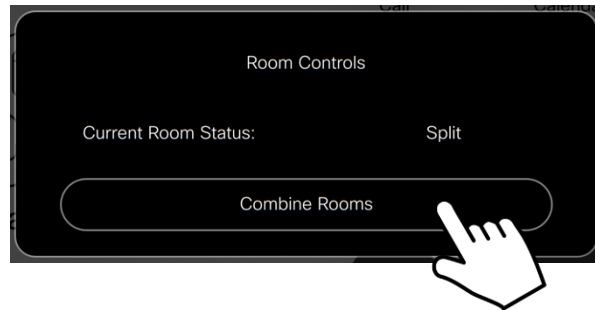


Confirm the request to combine the rooms.

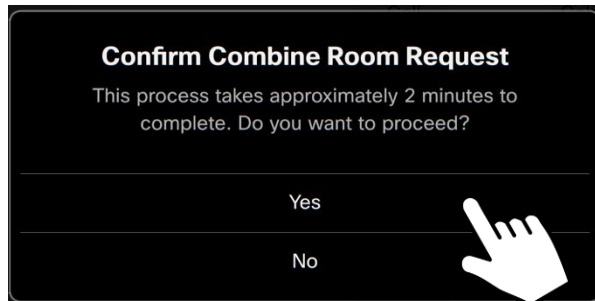


Splitting Rooms


Tap the **Room Controls** button.

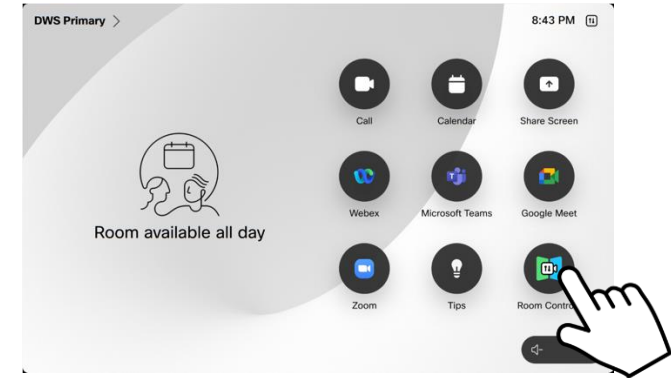

Tap the **Split Rooms** button from the Room Controls Page.

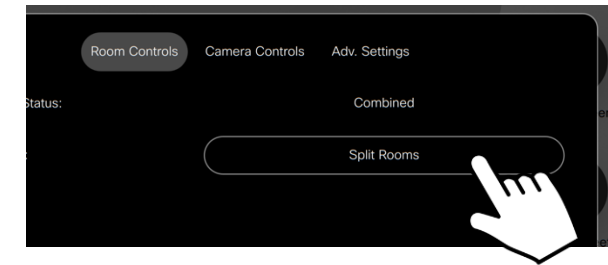


Confirm the request to Split the rooms.

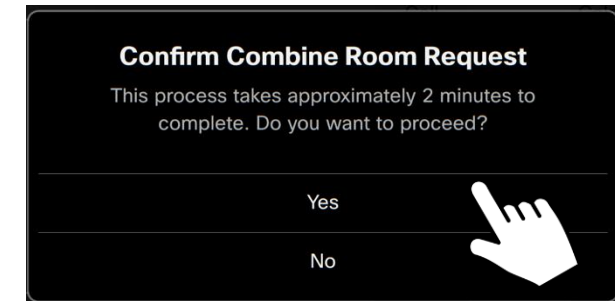


Divisible Workspace: End User Guide

In-call Operation

Tap the **Room Controls** button.

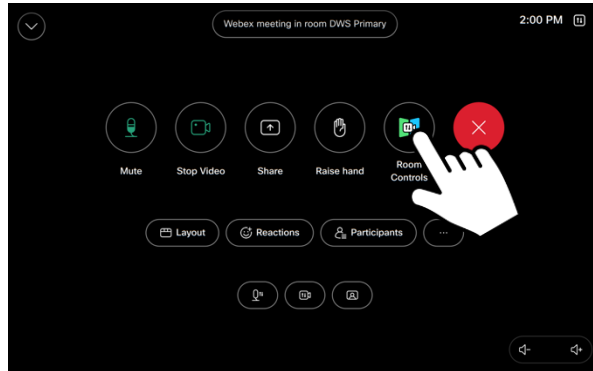

Any default **Automation** mode is toggled **On**.

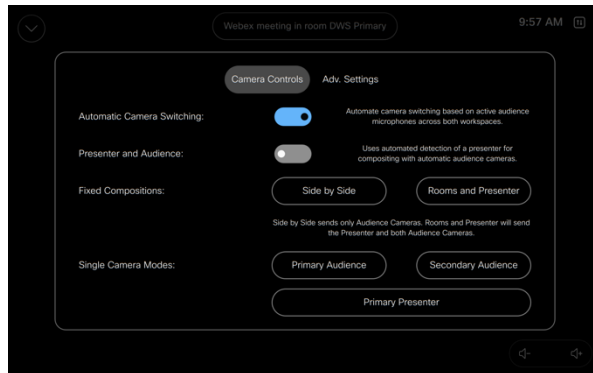


You can select **Presenter and Audience** or **Audience Only** automation modes by changing their respective toggle to **On**.

Tap any of the **Fixed** or **Single Camera** modes to trigger their respective experiences.


Audience Only (Automated) : Provides automatic switching between front of room audience cameras based on microphone activity.



Presenter and Audience (Automated) : Uses Presenter Track detection to automatically transition to the rear Presenter Camera. Will also automate the compositing and switching of the audience based on microphone activity.

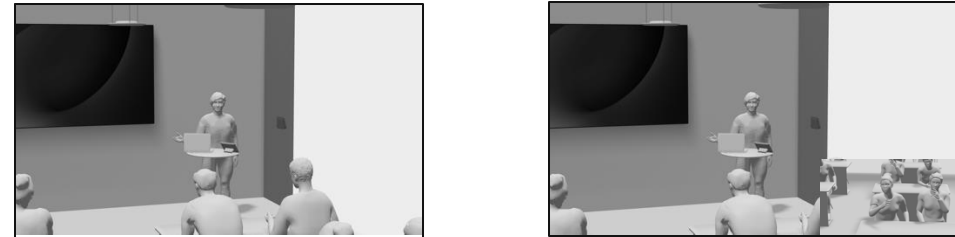

Fixed & Single Camera Modes: These modes provide predefined compositions of multiple cameras or the ability to send only a single camera with automation disabled.

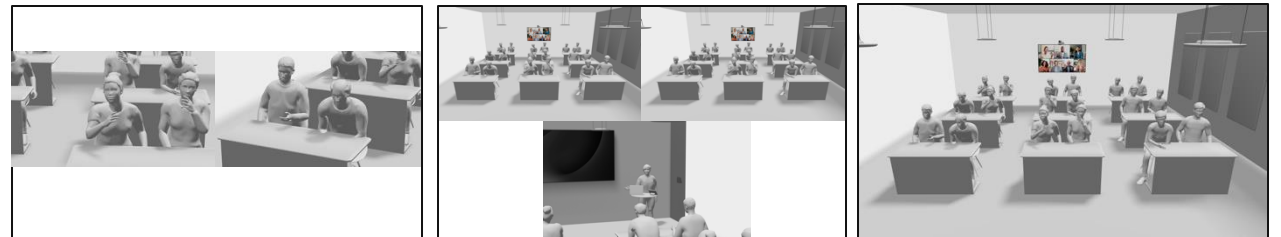

Side by Side

Rooms and Presenter

Single Camera