
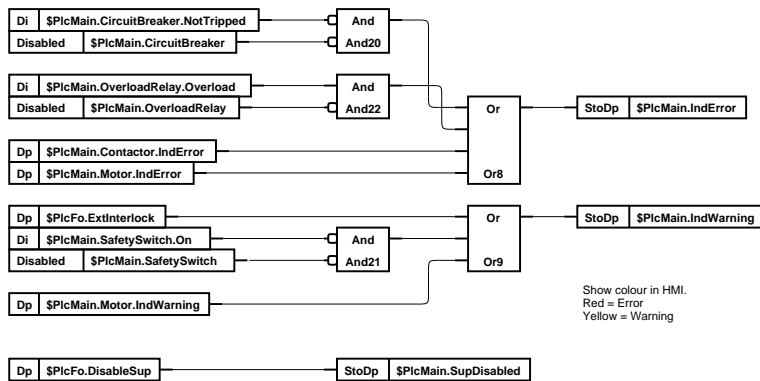


Runningtime logging



Show colour in HMI.
Red = Error
Yellow = Warning

Functionobject
Motor aggregat

Class-BaseMotorAggrFo-Code				
W		Proview		
01-OCT-2007 14:13			JE	2