


1. Get Pi a power supply and network.

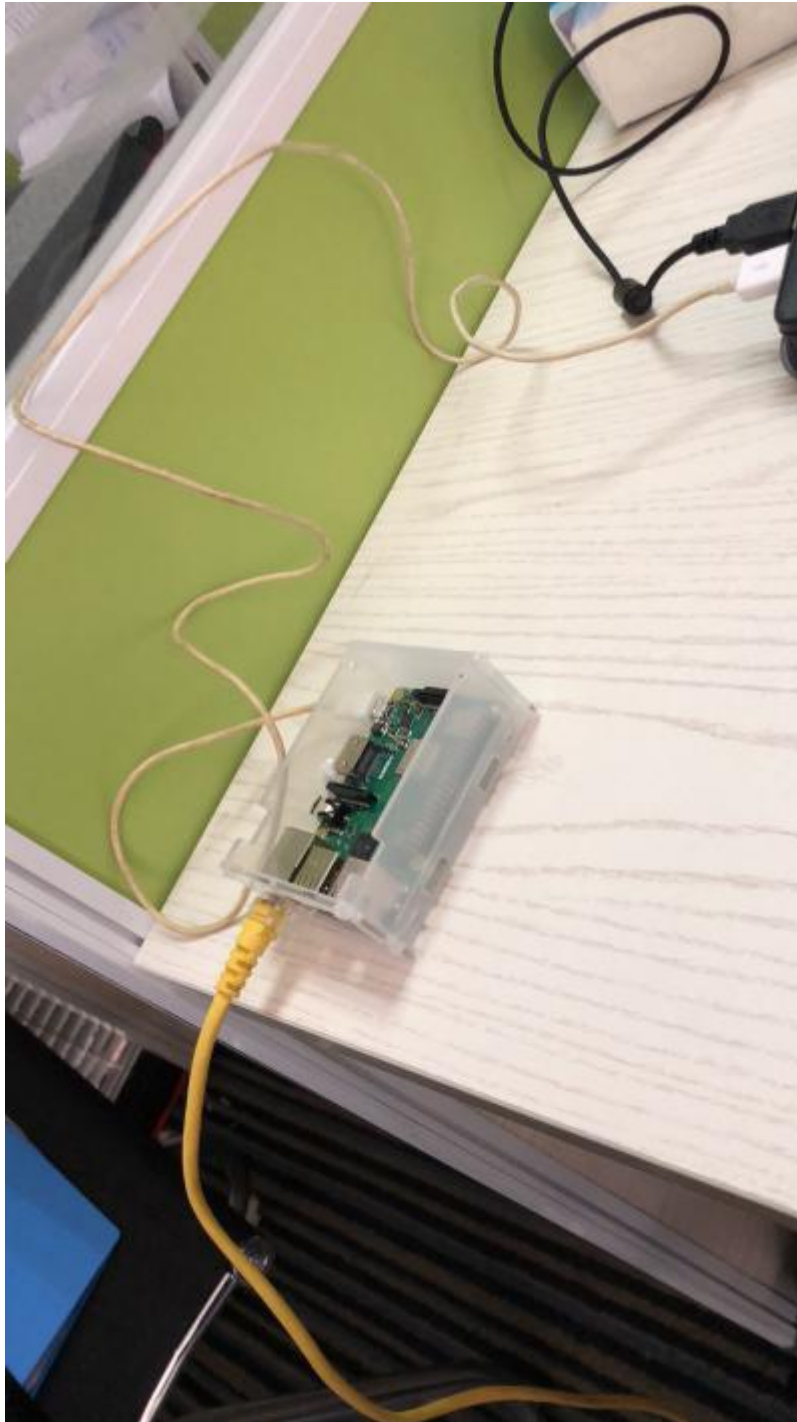


2. Connect Pi with moduels



3. Download VNC


Website: <https://www.realvnc.com/en/>

Installation pls refer to the instructions of official website, open vncviewer.exe



Input ip address of Pi, can use a IP searcher.

4. Input your Pi's account and password.

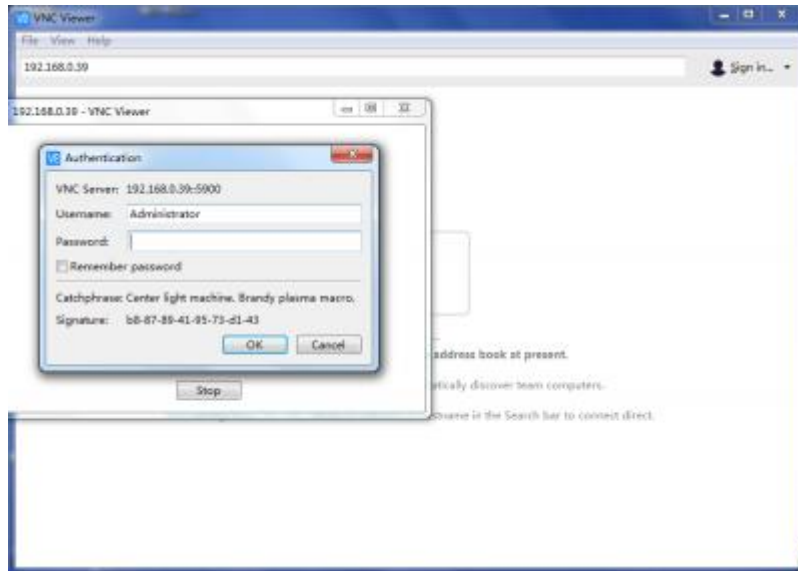

5. Upload the sample code to Pi.

