


# Instrument Control over Serial (Arduino Firmware)

[Run LED Control App](#)

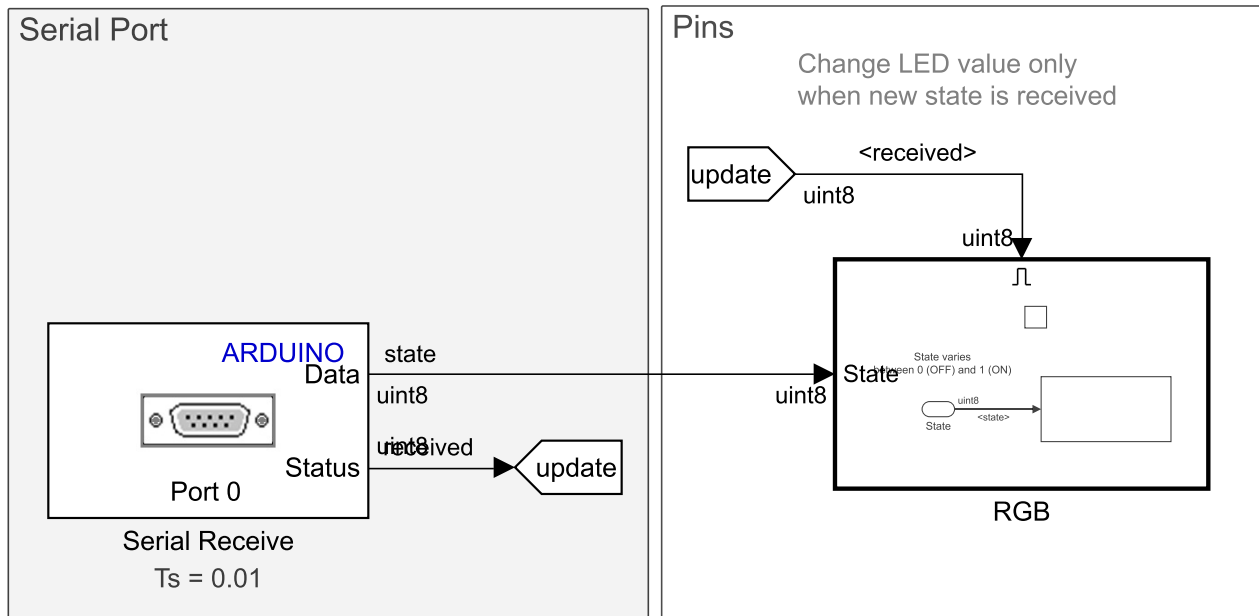

## How to deploy

1. Install [Simulink Support Package for Arduino Hardware](#)
2. Connect your Arduino board to computer
3. Go to model [Configuration Parameters](#)
4. On **Hardware Implementation** tab select and setup your Arduino board
5. Press **Deploy to Hardware** blue button on Simulink toolstrip (or Ctrl+B)

Explore [documentation](#)