

FUEL DISTRIBUTOR [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0114z9160000

Purpose, Function

- Distributes fuel pumped from the high pressure fuel pump to each fuel injector.


Construction

- The fuel distributor is installed to the cylinder head.

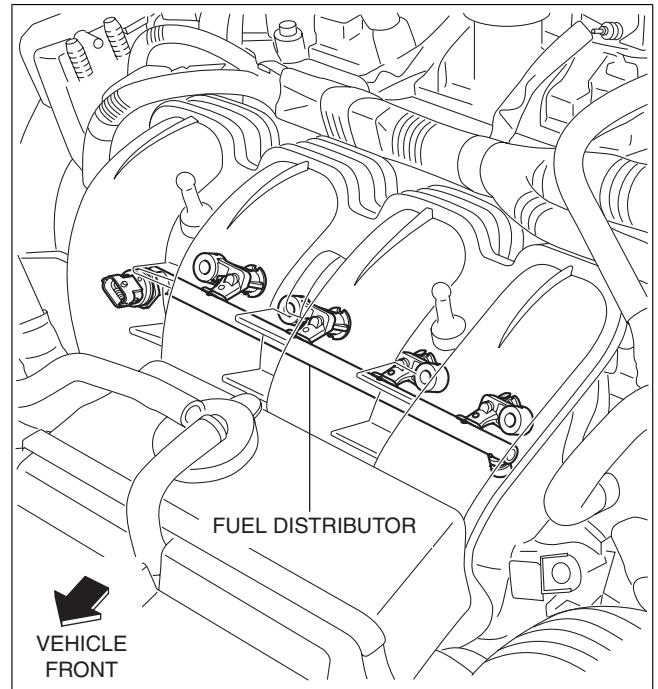

ac5uun00000057

- The fuel distributor is integrated with the fuel pressure sensor.

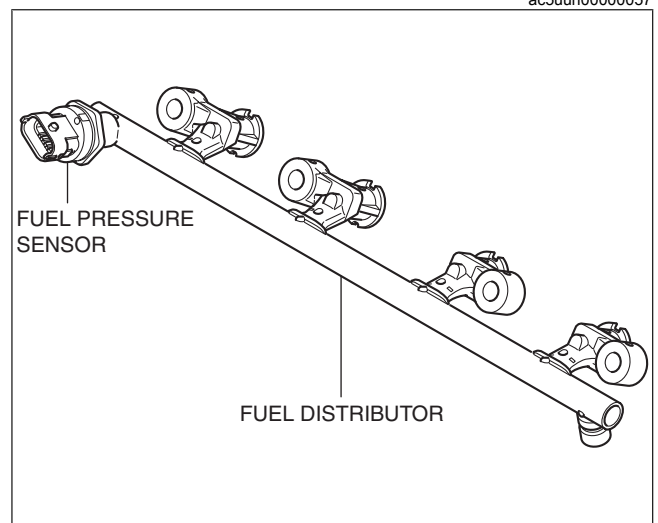

am3uun00002144