

KEYLESS ANTENNA [KEYLESS ENTRY SYSTEM]

id0914001080b3

Purpose


- Outputs a request signal and specifies the remote transmitter location.

Function

- The keyless antennas output request signals based on the signals from the start stop unit.

Construction, Operation

- Request signals are output by the keyless antenna installed in the rear console to produce the keyless antenna output range inside the vehicle.

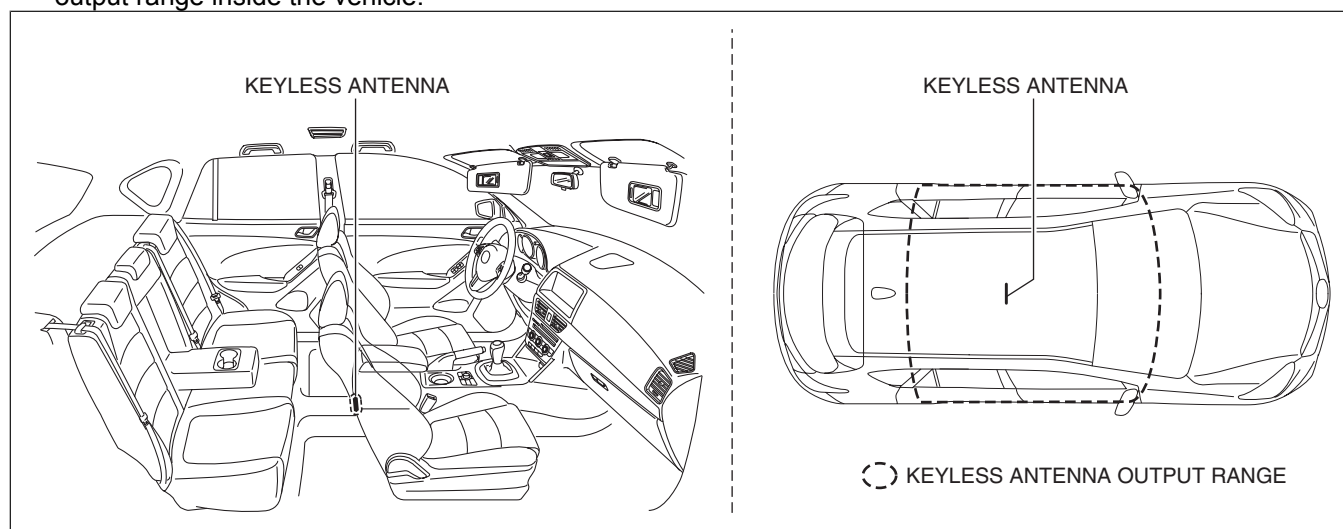

ac5wzn00000416

Fail-safe

- Function not equipped.