


## FRONT FENDER PANEL REMOVAL/INSTALLATION

id091000801000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Front bumper (See FRONT BUMPER REMOVAL/INSTALLATION.)
  - (2) Front combination light (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
  - (3) Front bumper slider (See BUMPER SLIDER REMOVAL/INSTALLATION.)
  - (4) Front over fender (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Remove bolts A and fasteners B.

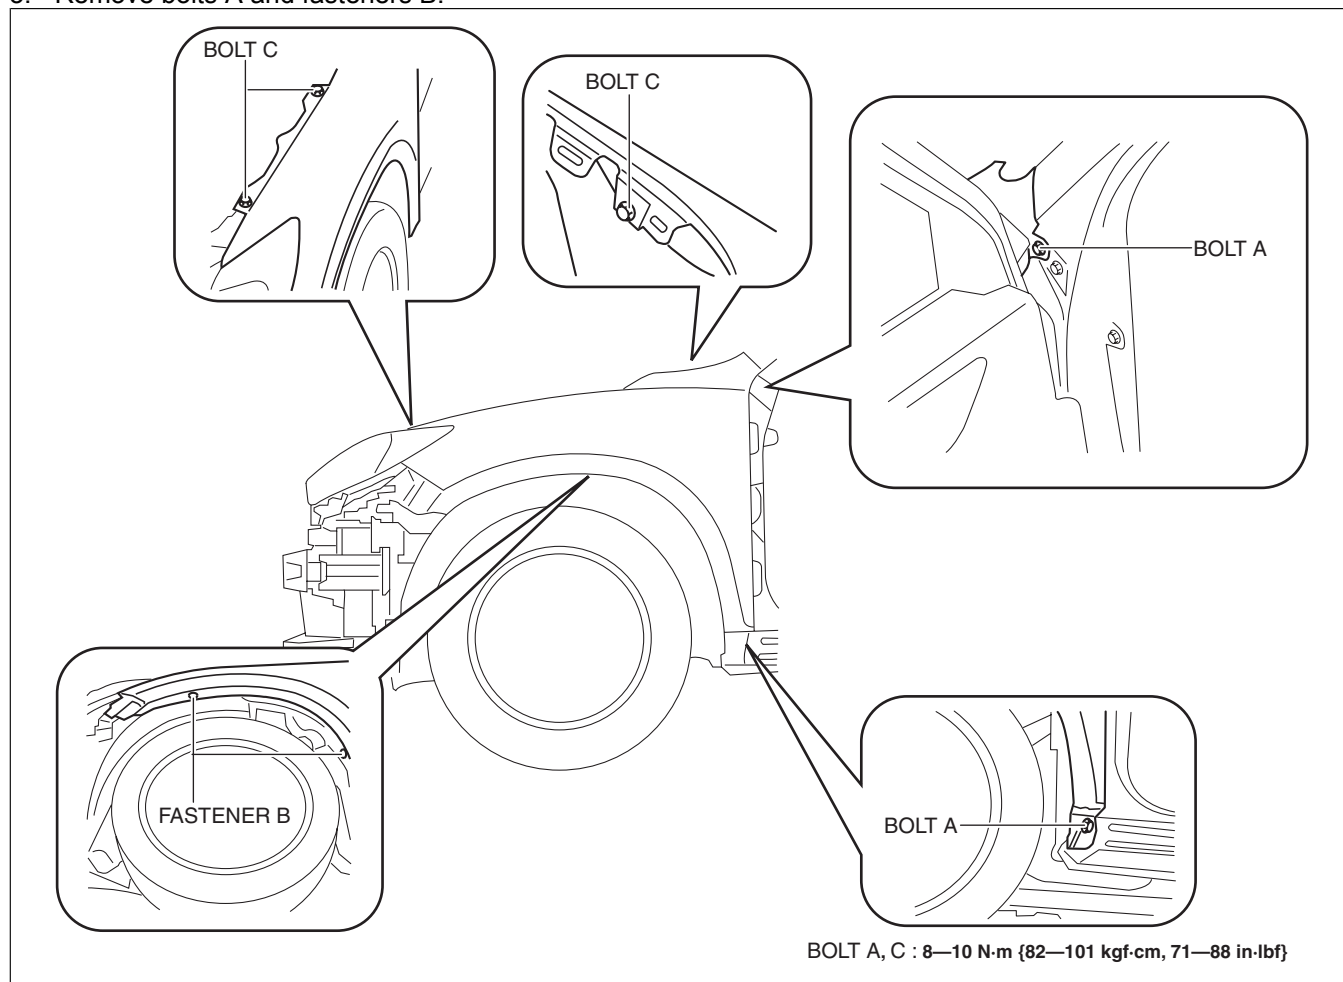

ac5wzw00001164

4. Remove bolts C.
5. Remove the front fender panel.
6. Install in the reverse order of removal.
7. Adjust the headlight aiming. (See HEADLIGHT AIMING.)
8. Adjust the front fog light aiming. (with front fog lights) (See FRONT FOG LIGHT AIMING.)