

DIFFERENTIAL OIL TEMPERATURE SENSOR REMOVAL/INSTALLATION

id031800805700

Warning


- Hot differential oil may cause severe burns. Do not perform maintenance while differential oil is hot.

1. Disconnect the negative battery cable.
2. Disconnect the differential oil temperature sensor connector.
3. Remove the differential oil temperature sensor.
4. Apply differential oil to the O-ring.
5. Install the differential oil temperature sensor.

Tightening torque

13—17 N·m {133—173 kgf·cm, 116—150 in·lbf}

6. Connect the differential oil temperature sensor connector.
7. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)

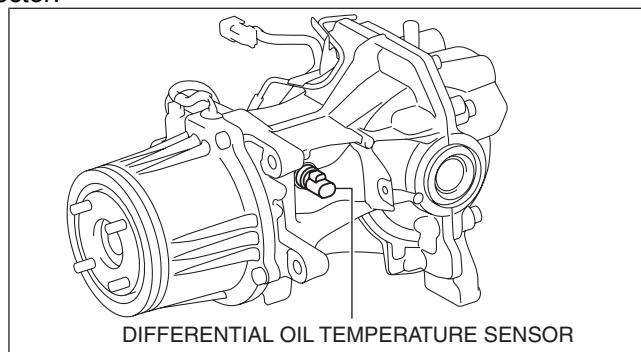

ac5wzw00002634