


FRONT SUSPENSION LOCATION INDEX

id021300800100

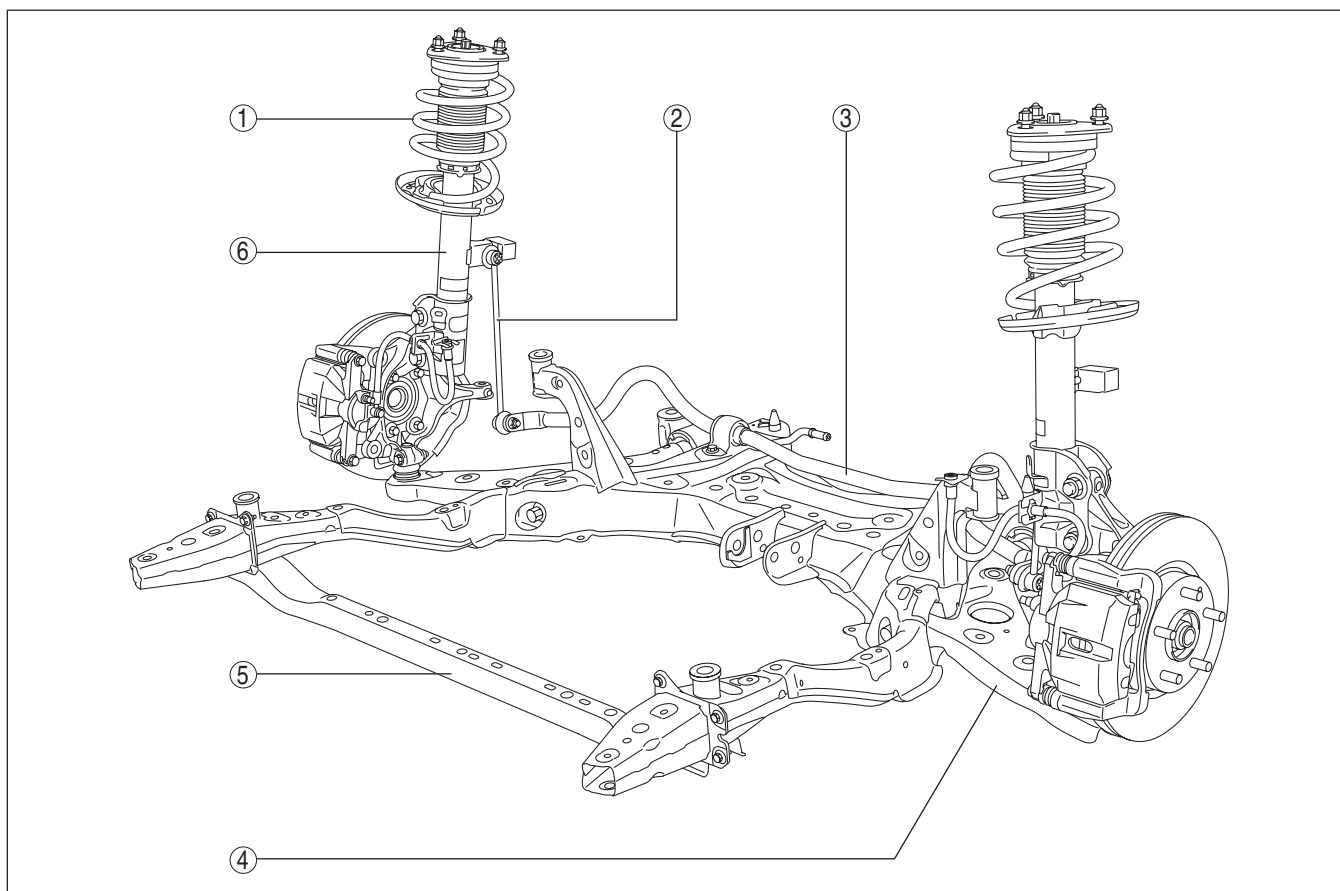

ac5uuw00000112

1	Front shock absorber and coil spring (See FRONT SHOCK ABSORBER AND COIL SPRING REMOVAL/INSTALLATION.) (See FRONT SHOCK ABSORBER AND COIL SPRING DISASSEMBLY/ASSEMBLY.)
2	Front stabilizer control link (See FRONT STABILIZER REMOVAL/INSTALLATION.) (See FRONT STABILIZER CONTROL LINK INSPECTION.)
3	Front stabilizer (See FRONT STABILIZER REMOVAL/INSTALLATION.) (See FRONT STABILIZER CONTROL LINK INSPECTION.)

4	Front lower arm (See FRONT LOWER ARM REMOVAL/INSTALLATION.) (See FRONT LOWER ARM INSPECTION.)
5	Front crossmember (See FRONT CROSSMEMBER REMOVAL/INSTALLATION.)
6	Front shock absorber (See FRONT SHOCK ABSORBER INSPECTION.) (See FRONT SHOCK ABSORBER DISPOSAL.)