

## ANTENNA FEEDER NO.3 REMOVAL/INSTALLATION


id092000812900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
  - (2) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
  - (3) B-pillar lower trim (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
  - (4) Front seat belt adjusting cover (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
  - (5) Front seat belt upper anchor installation bolt (See FRONT SEAT BELT REMOVAL/INSTALLATION.)
  - (6) B-pillar upper trim (See B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.)
  - (7) Trunk board (See TRUNK BOARD REMOVAL/INSTALLATION.)
  - (8) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
  - (9) Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
  - (10) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
  - (11) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
  - (12) Liftgate upper trim (with RDS (radio data system)) (See LIFTGATE UPPER TRIM REMOVAL/INSTALLATION.)
3. Remove the rear passenger's assist handle. (See ASSIST HANDLE REMOVAL/INSTALLATION.)
4. Partially peel back the headliner.

### Note


- If the headliner is peeled back excessively, the headliner could become creased. Be careful not to peel back the headliner excessively.

5. Disconnect antenna feeder No.2.

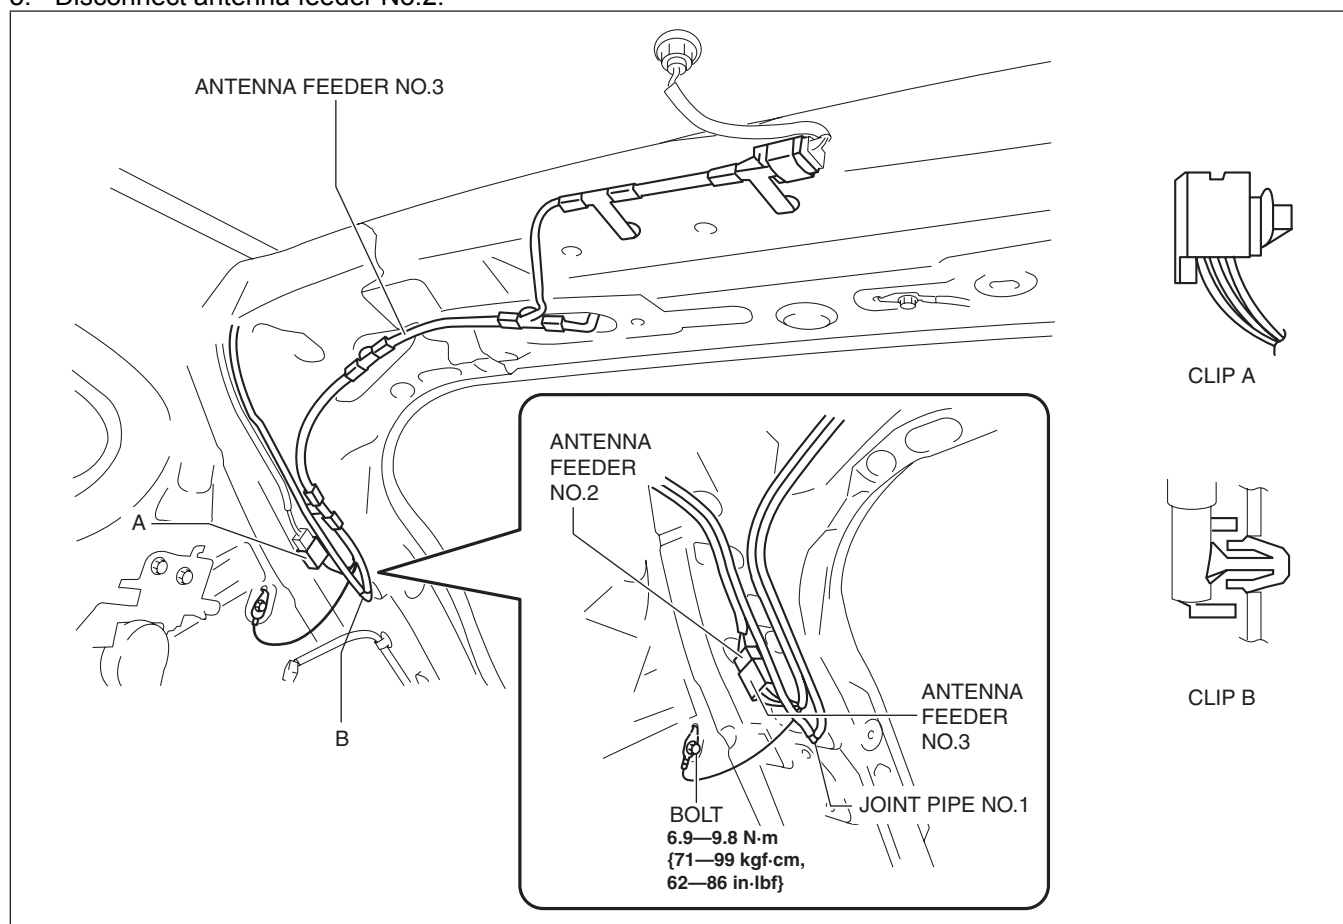


ac5jjw00002355

6. Remove the bolt.
7. Detach clip A.
8. Remove the joint pipe No.1 clip B.
9. Remove clips C and D.

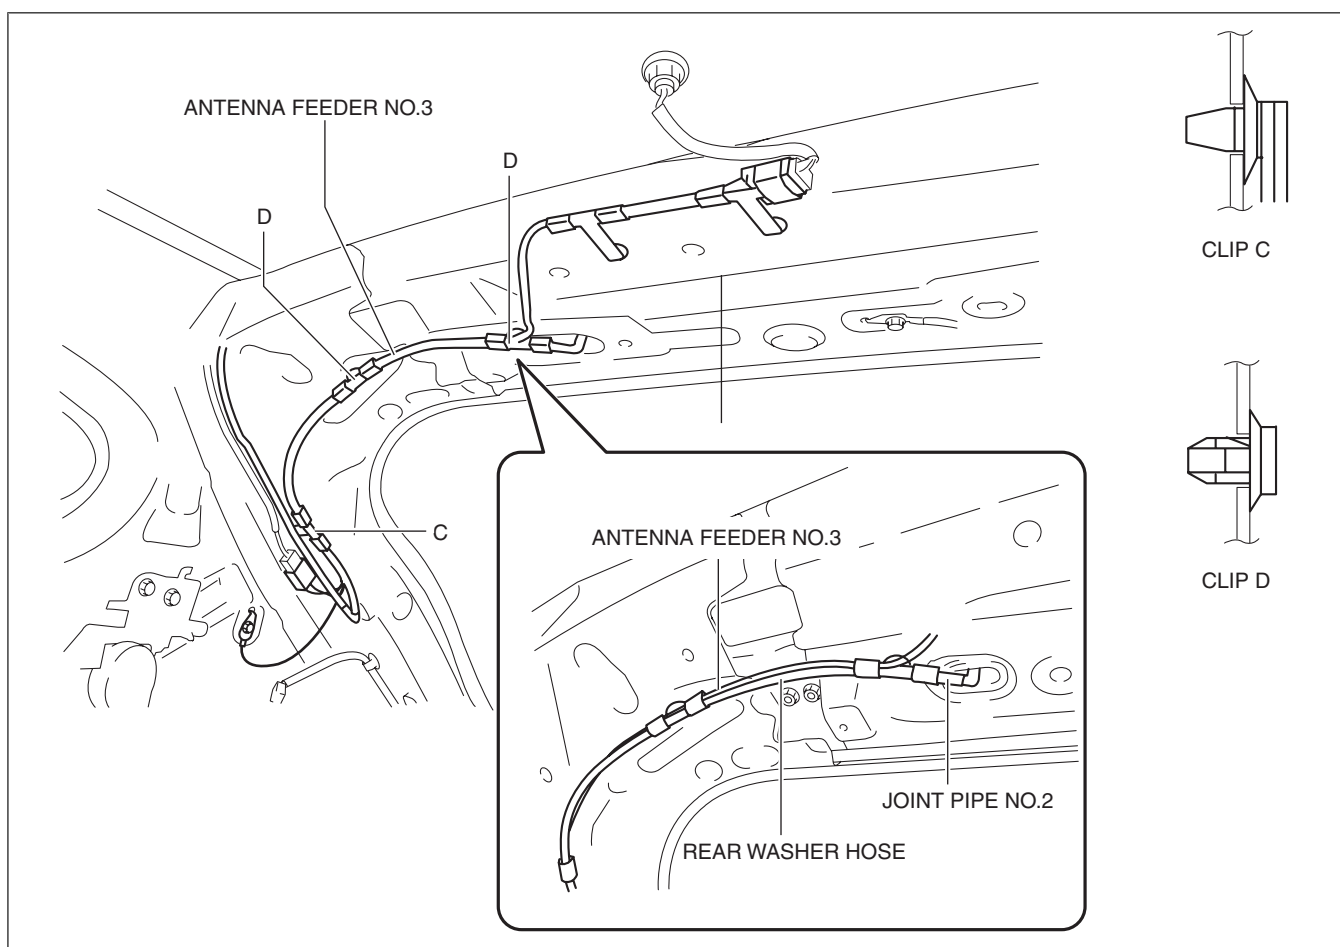


ac5jjw00002356

10. Disconnect joint pipe No.2.
11. Remove clips E and F.
12. Disconnect the center roof antenna.

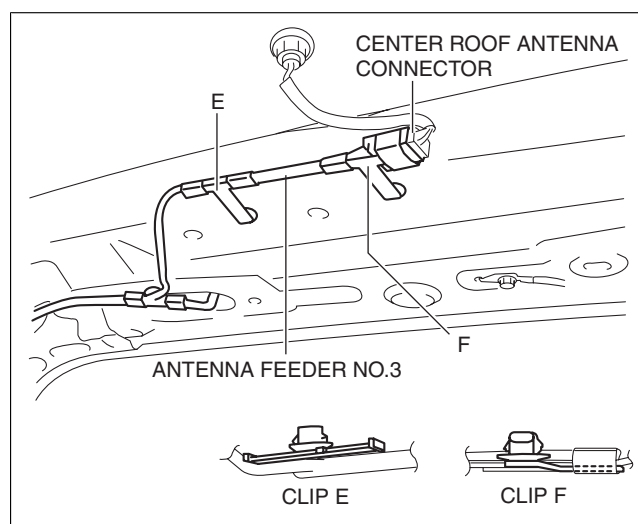


ac5jjw00002357

13. Using a screwdriver wrapped in protective tape, pull the connector in the direction of the arrow (2) shown in the figure while pressing glass antenna terminal in the direction of the arrow (1) shown in the figure, and disengage the glass antenna terminal from the connector. (with RDS (radio data system))
14. Disconnect the connector. (with RDS (radio data system))

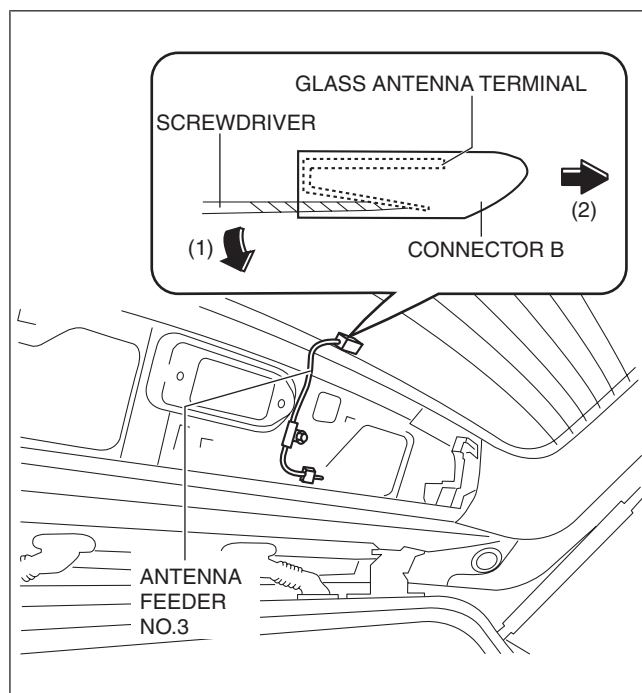


ac5jjw00002337

15. Remove the bolts. (with RDS (radio data system))
16. Remove the clip. (with RDS (radio data system))

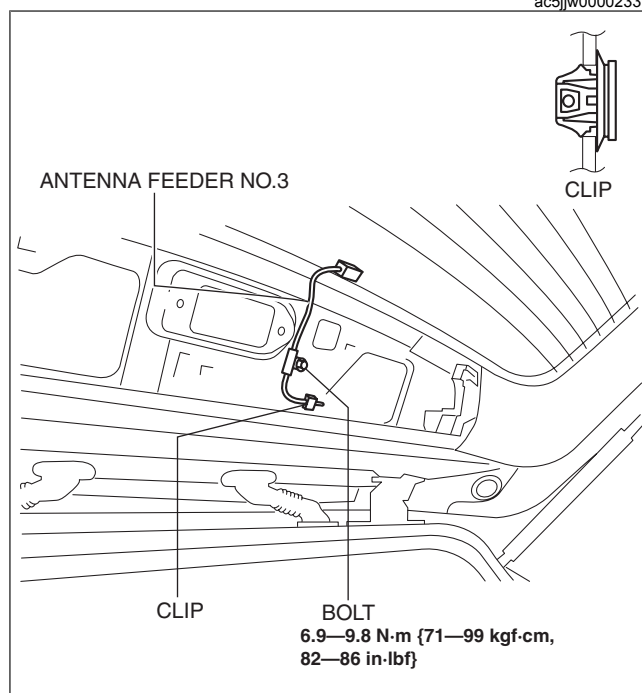


ac5wzw00003770

17. Partially peel the liftgate grommet in the direction of arrow (1) shown in the figure, and remove the liftgate grommet from the liftgate grommet inner. (with RDS (radio data system))

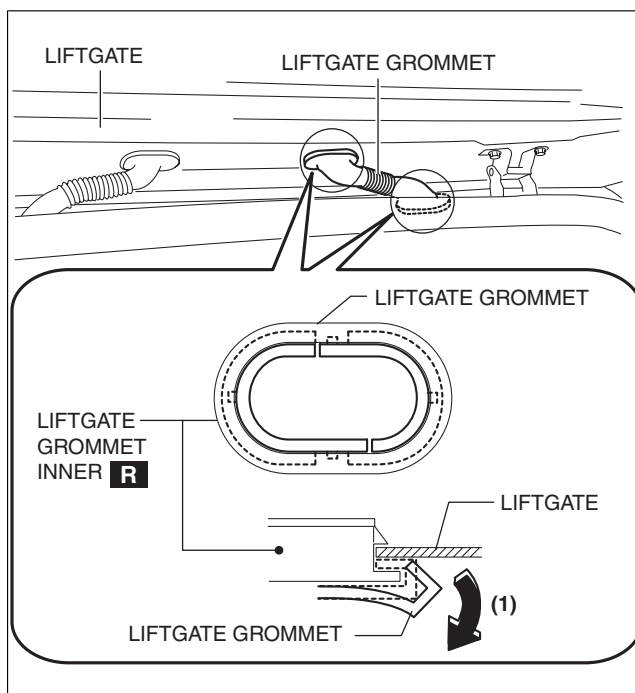


ac5jjw00001165

18. Using a screwdriver wrapped in protective tape, pull the liftgate grommet in the direction of the arrow (2) shown in the figure while pressing the liftgate grommet inner tab in the direction of the arrow (1) shown in the figure, and disengage the liftgate from the liftgate grommet. (with RDS (radio data system))

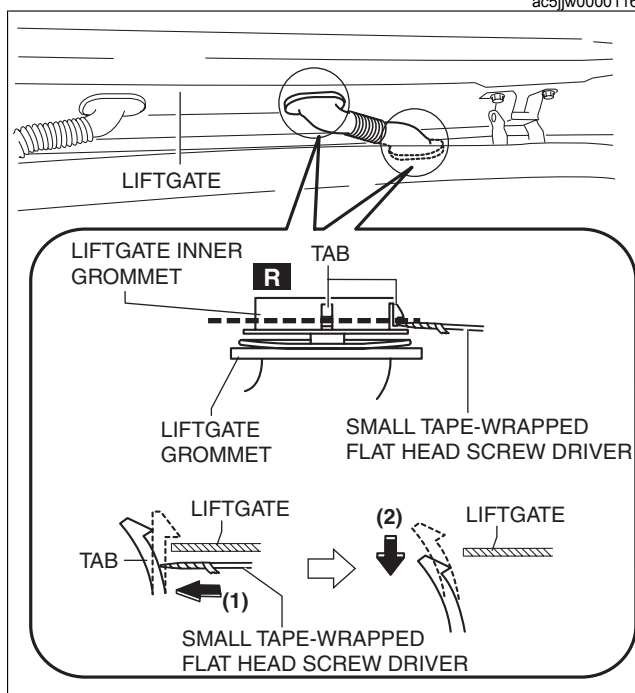

ac5wzw00005340

19. Pull the liftgate grommet in the direction of the arrow (1) shown in the figure and remove it.
20. Pull out the disconnected connectors on the liftgate side and vehicle interior side and antenna feeder No.3. (with RDS (radio data system))
21. Remove antenna feeder No.3.
22. Install in the reverse order of removal.

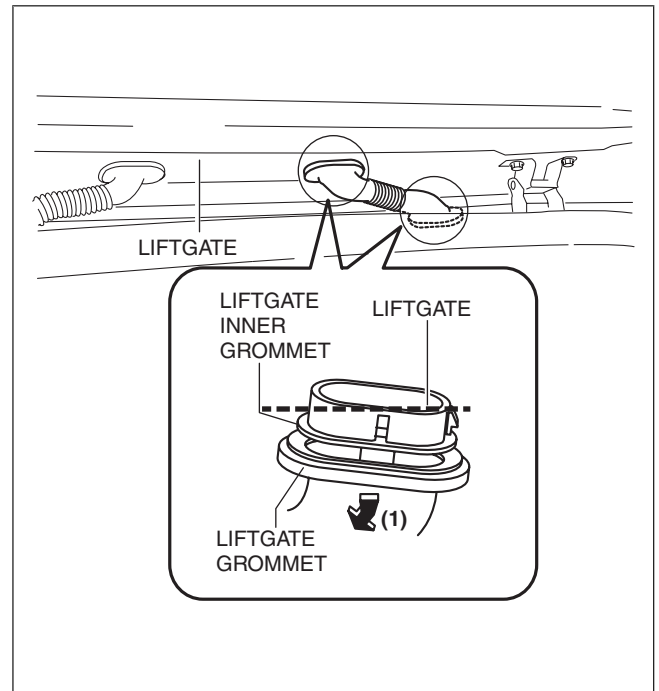

ac5jjw00002358