


FUEL-FILLER LID OPENER CABLE REMOVAL/INSTALLATION

id091400510800



L.H.D.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front scuff plate (LH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front seat (LH) (See FRONT SEAT REMOVAL/INSTALLATION.)
 - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (4) B-pillar lower trim (LH) (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
 - (5) Rear seat (4:2:4 split type) (See REAR SEAT REMOVAL/INSTALLATION.)
 - (6) Rear seat cushion (6:4 split type) (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
 - (7) Rear seat back (6:4 split type) (See REAR SEAT BACK REMOVAL/INSTALLATION.)
 - (8) D-pillar trim (LH) (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (9) C-pillar trim (LH) (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (10) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)
 - (11) Trunk side trim (LH) (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)
 - (12) Fuel-filler lid opener (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
 - (13) Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)
3. Remove the fuel-filler lid opener cable from clip A.

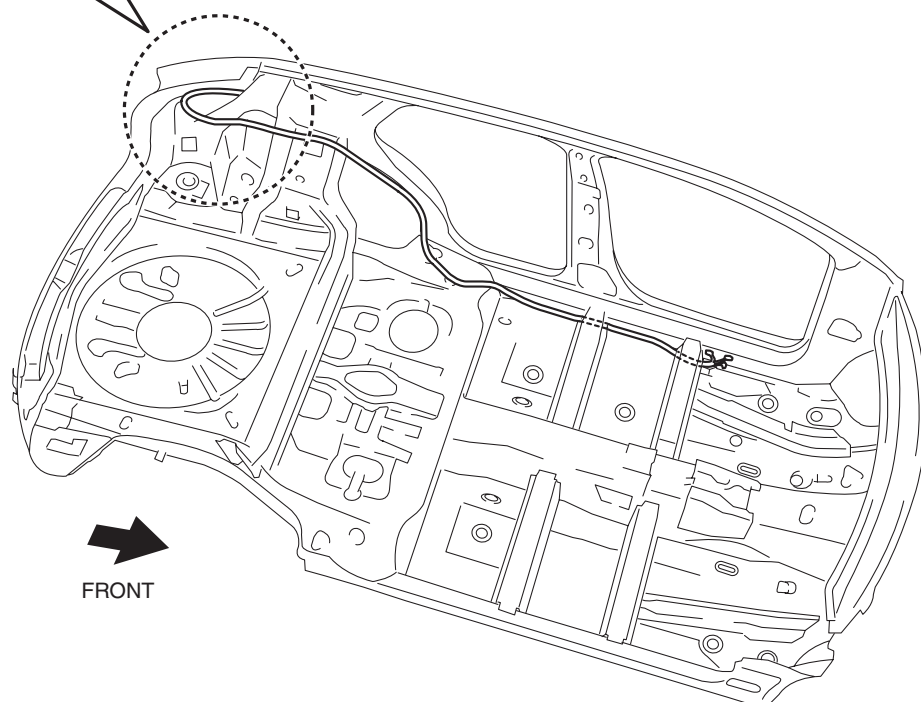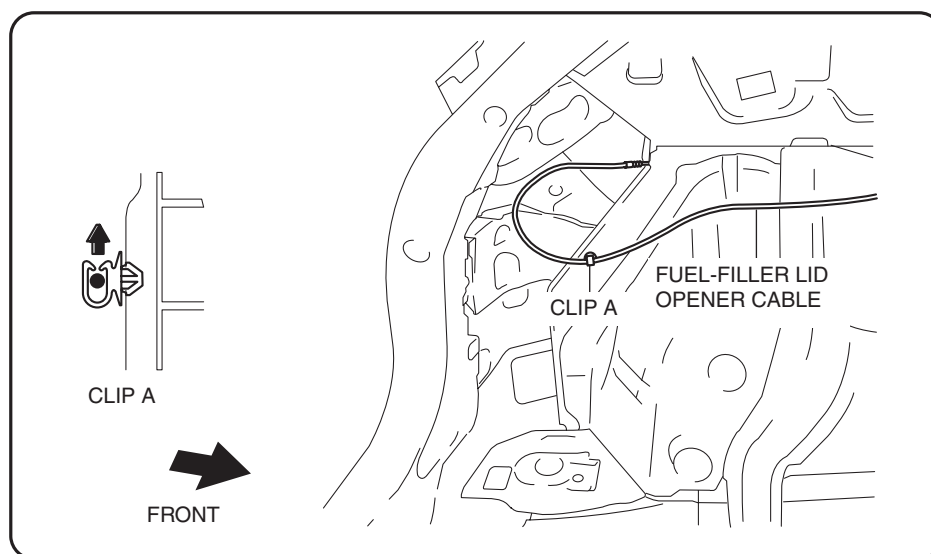


4. Remove the fuel-filler lid opener cable from clips B, C, and D.

ac5wzw00000686

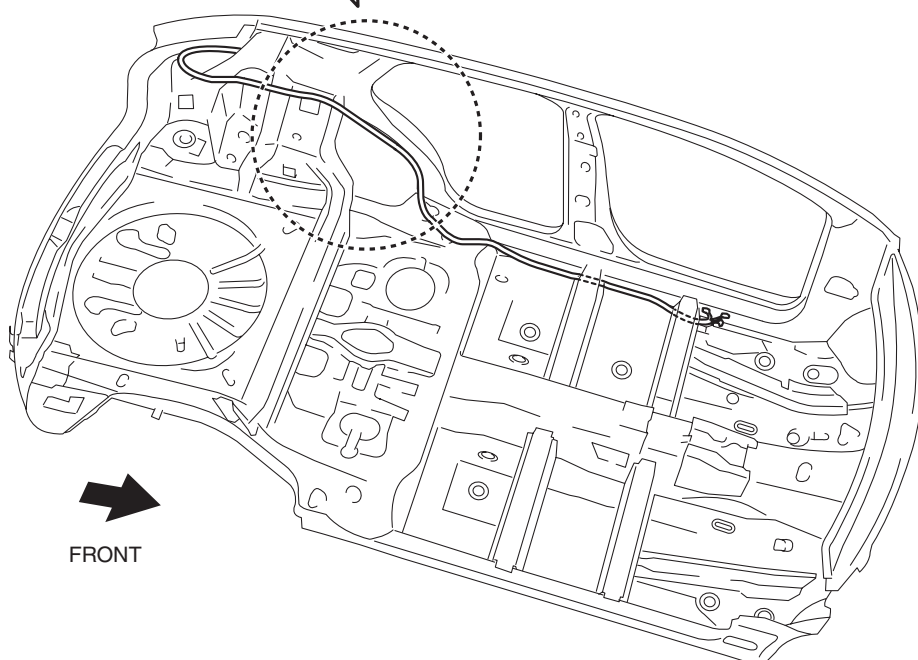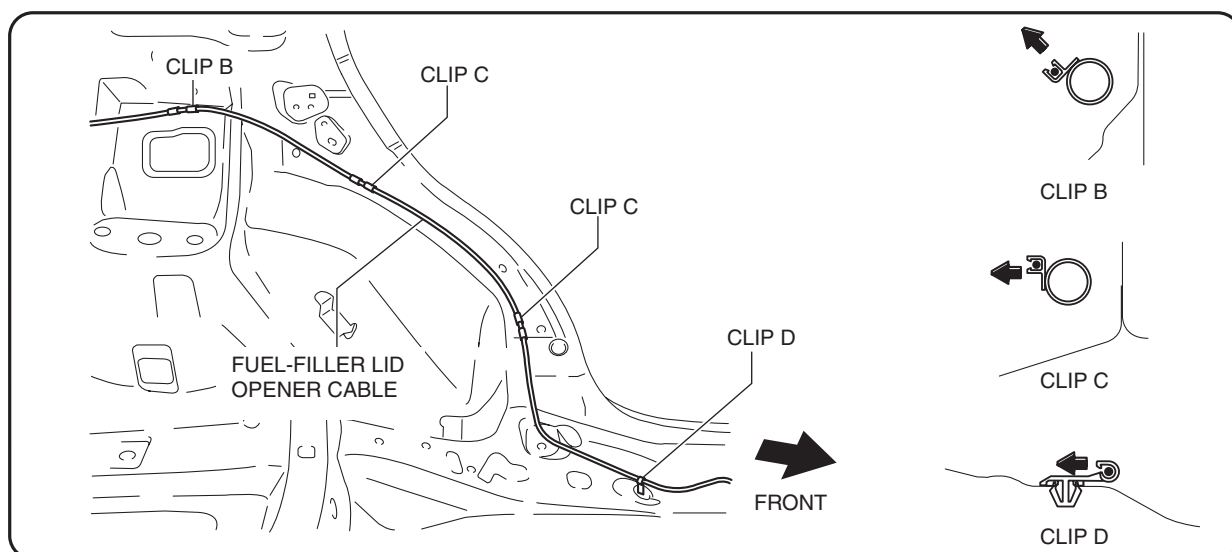

5. Remove the fuel-filler lid opener cable from clips E.

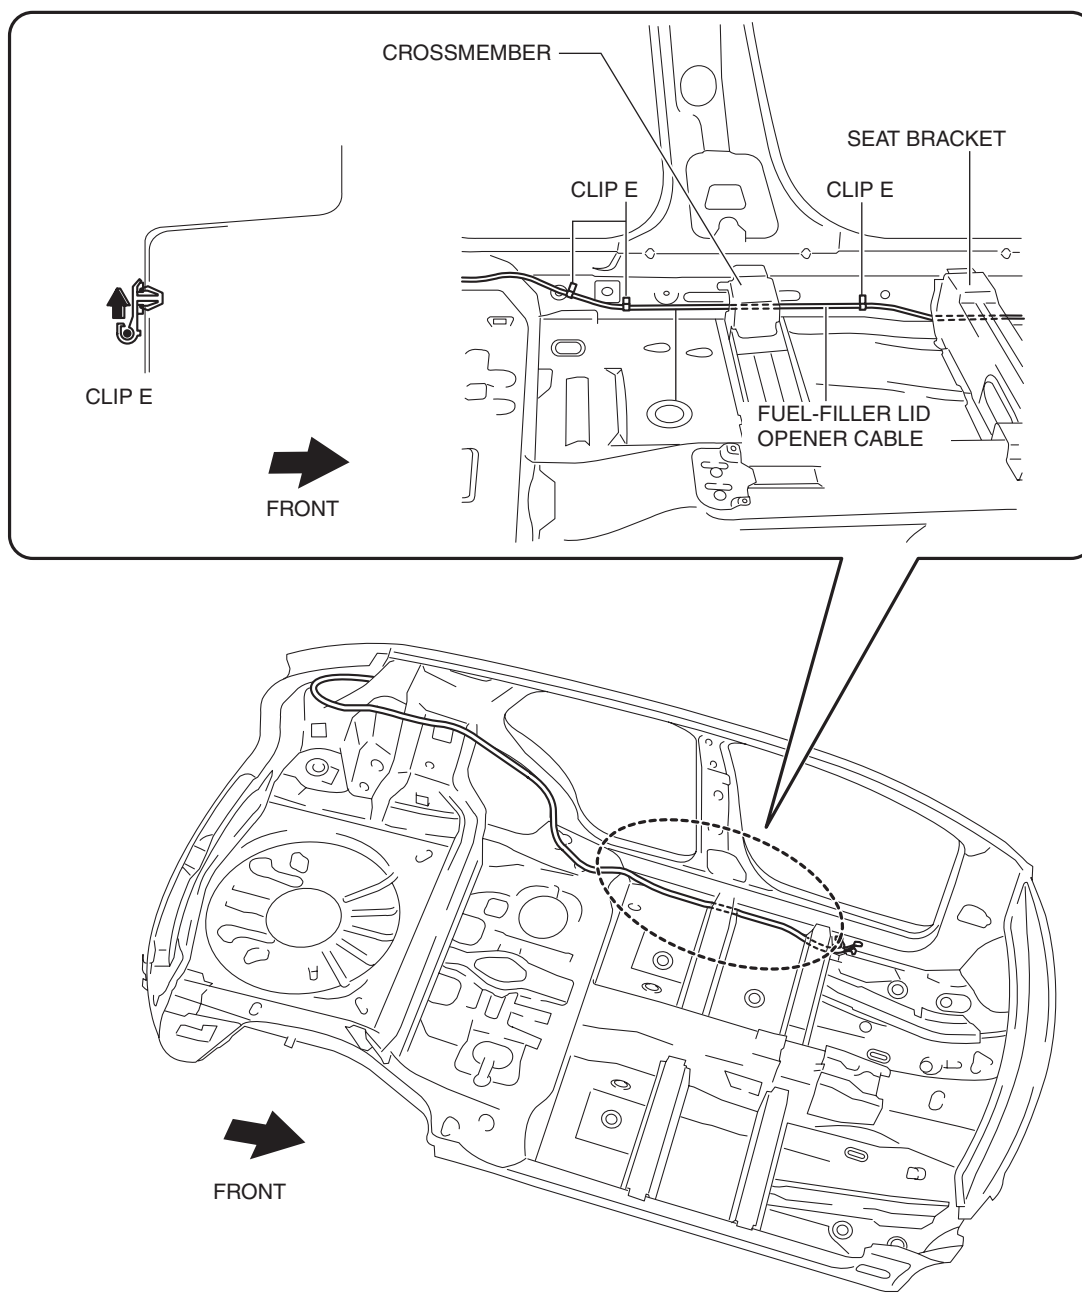

ac5wzw00000688

6. Pull the fuel-filler lid opener cable from the crossmember and the seat bracket.
7. Install in the reverse order of removal.

R.H.D.


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front scuff plate (RH) (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
 - (2) Front seat (RH) (See FRONT SEAT REMOVAL/INSTALLATION.)
 - (3) Rear scuff plate (See REAR SCUFF PLATE REMOVAL/INSTALLATION.)
 - (4) B-pillar lower trim (RH) (See B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.)
 - (5) Rear seat (4:2:4 split type) (See REAR SEAT REMOVAL/INSTALLATION.)
 - (6) Rear seat cushion (6:4 split type) (See REAR SEAT CUSHION REMOVAL/INSTALLATION.)
 - (7) Rear seat back (6:4 split type) (See REAR SEAT BACK REMOVAL/INSTALLATION.)
 - (8) D-pillar trim (See D-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (9) C-pillar trim (See C-PILLAR TRIM REMOVAL/INSTALLATION.)
 - (10) Trunk end trim (See TRUNK END TRIM REMOVAL/INSTALLATION.)

(11)Trunk side trim (See TRUNK SIDE TRIM REMOVAL/INSTALLATION.)

(12)Fuel-filler lid opener (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)



(13)Fuel-filler lid opener lever (See FUEL-FILLER LID OPENER AND LEVER REMOVAL/INSTALLATION.)

3. Remove the fuel-filler lid opener cable from clip A.

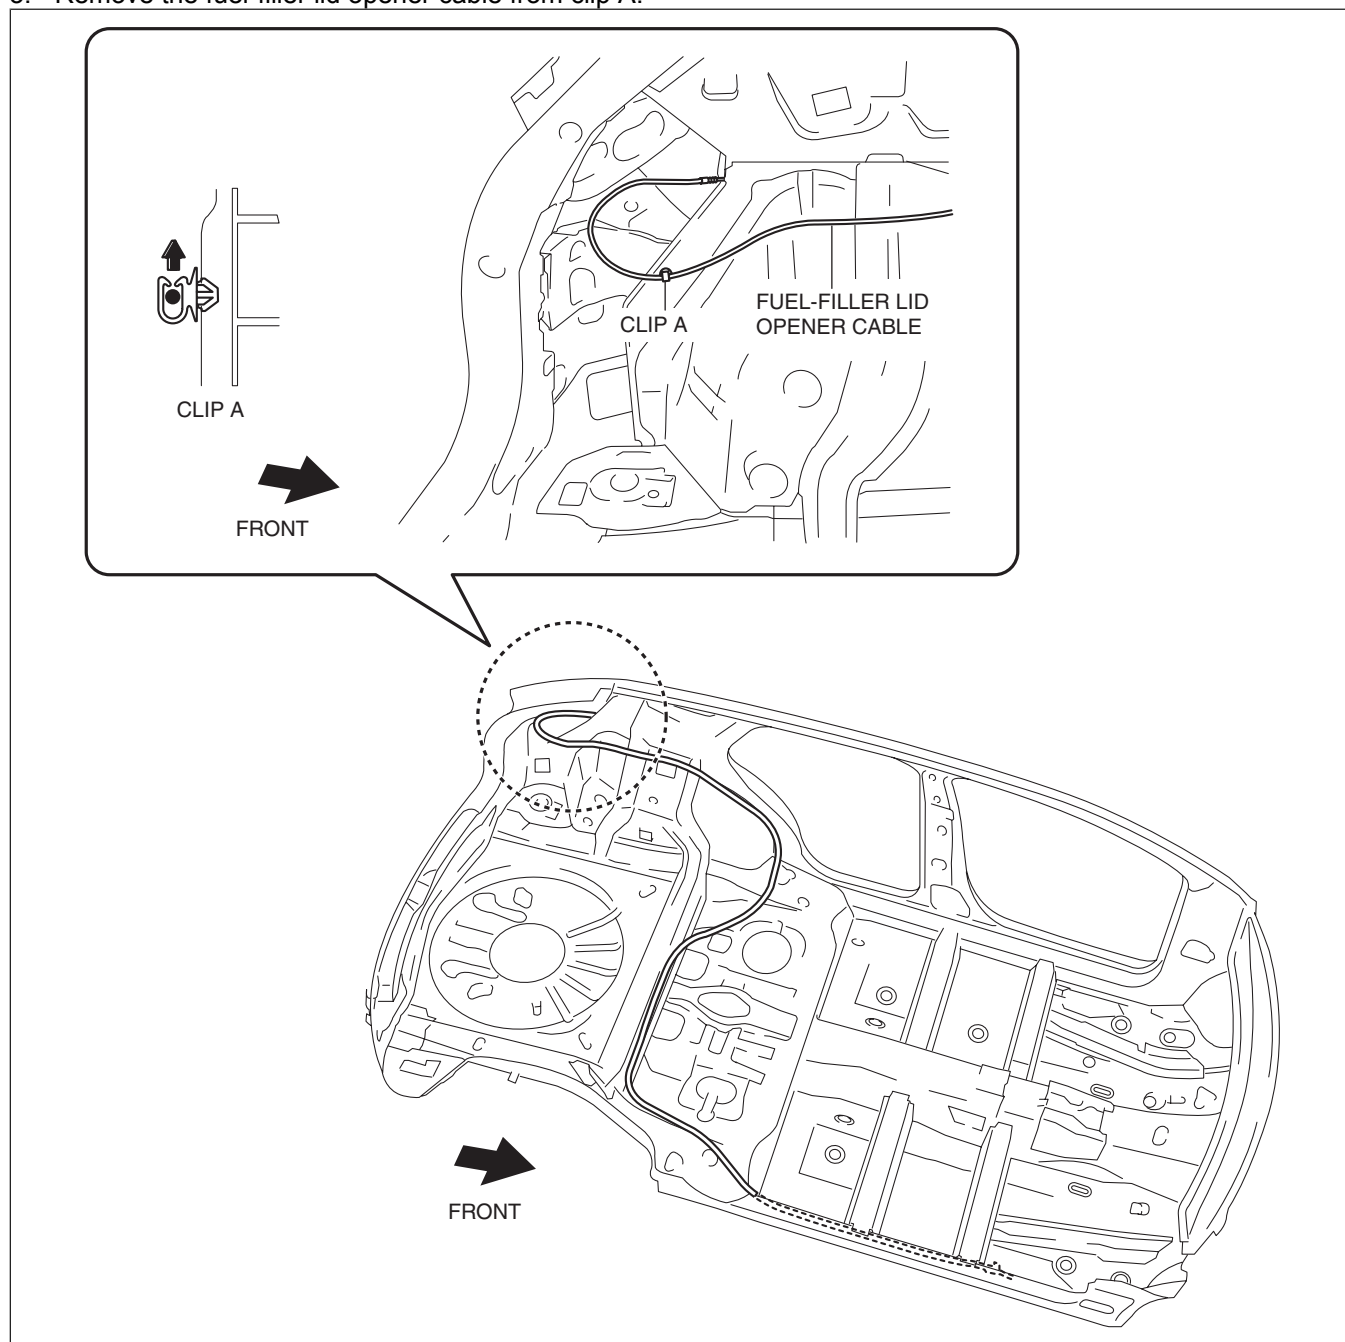


4. Remove the fuel-filler lid opener cable from clips B, C, and D.

ac5wzw00000317

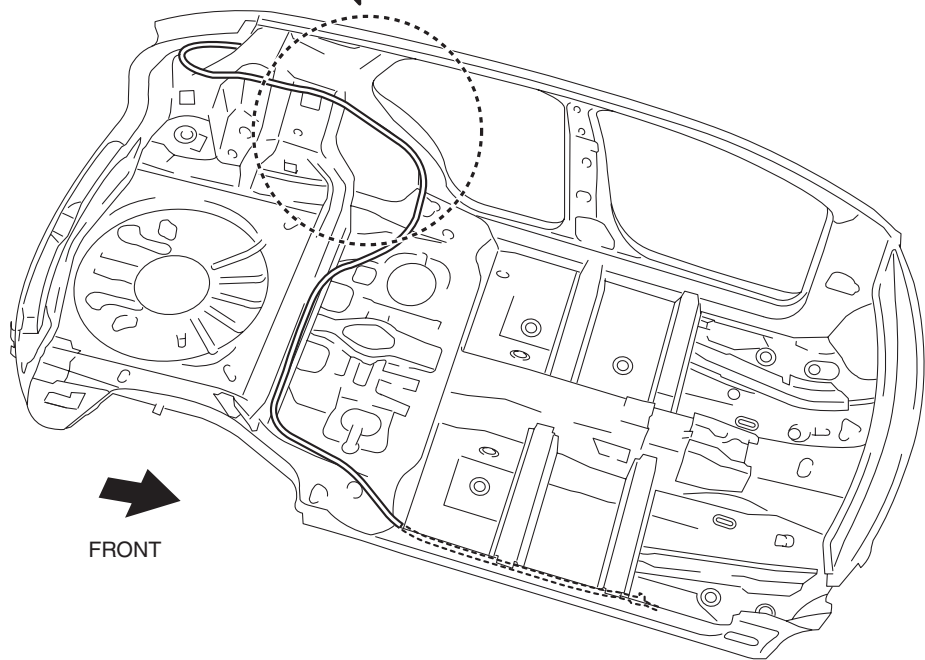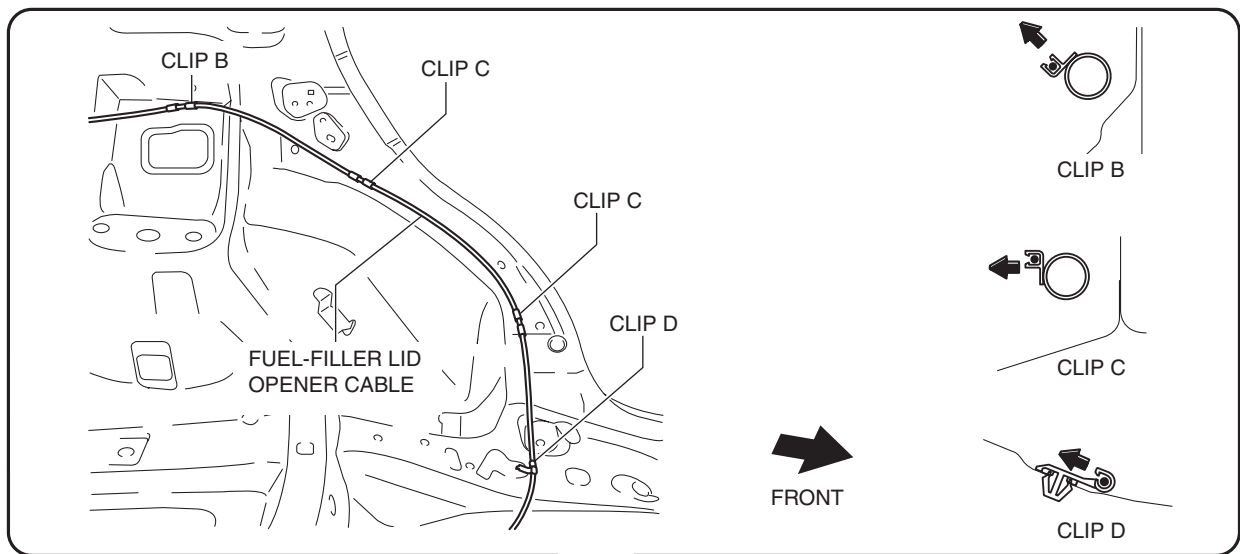


5. Remove the fuel-filler lid opener cable from clips E.

ac5wzw00000318

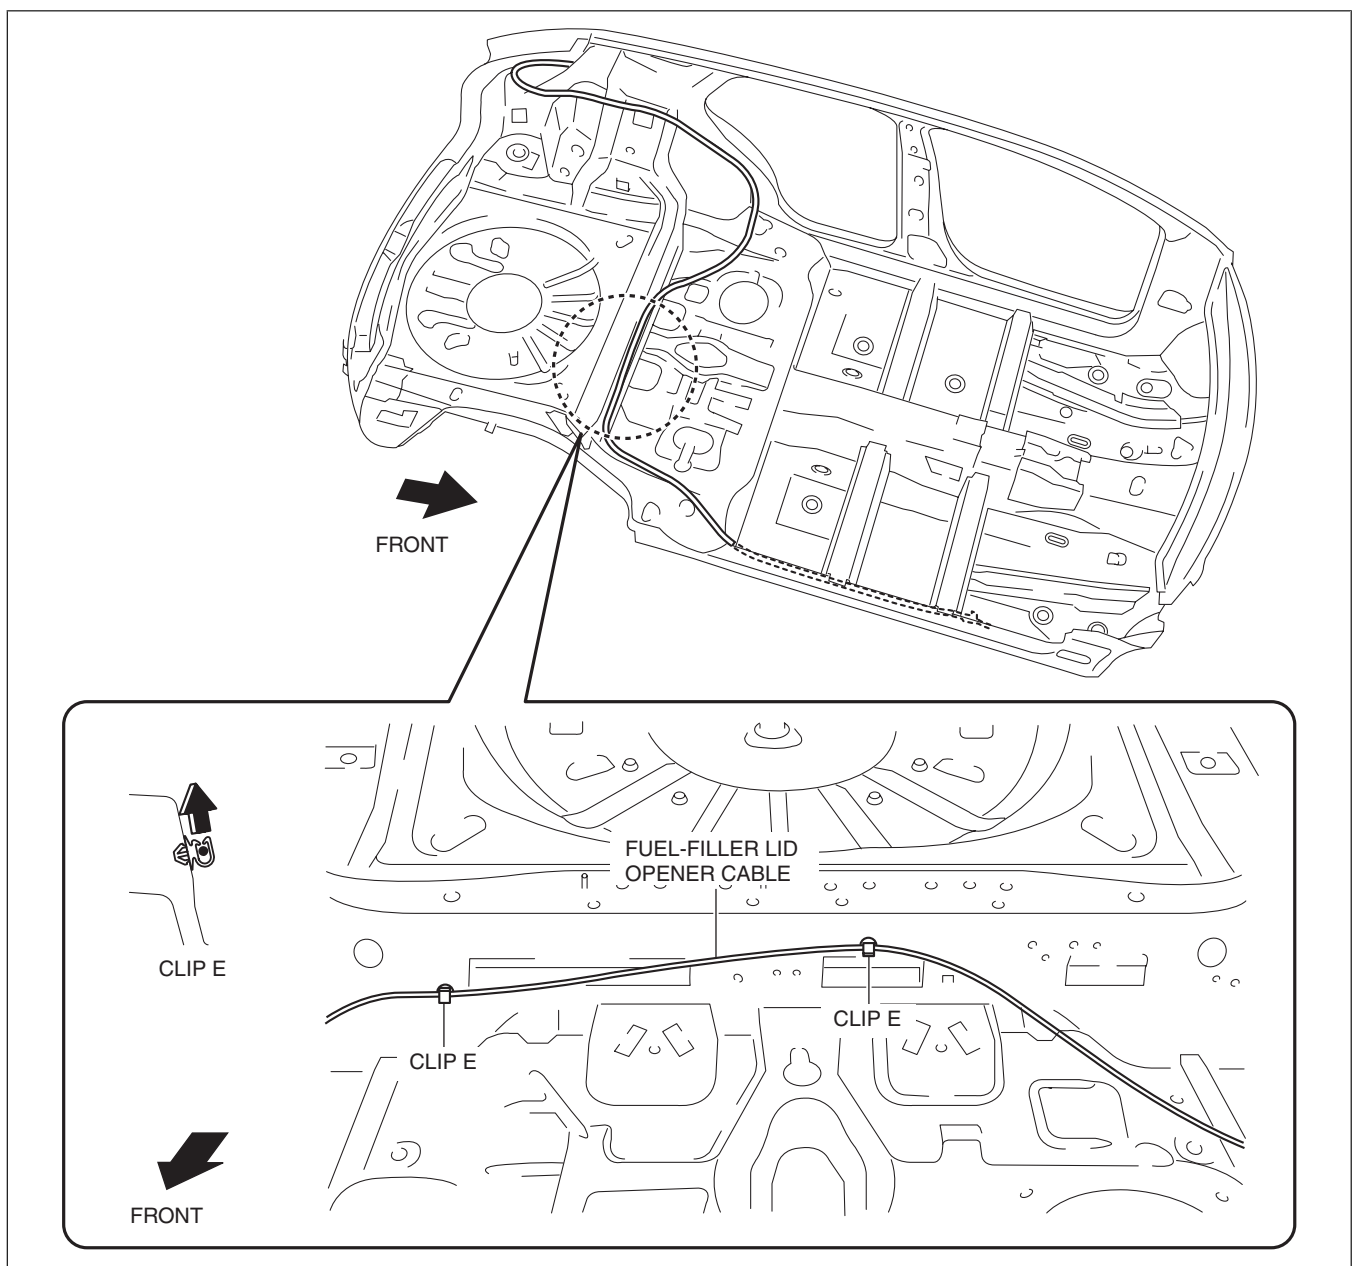

ac5wzw00000319

6. Remove the fuel-filler lid opener cable from clips F and G.

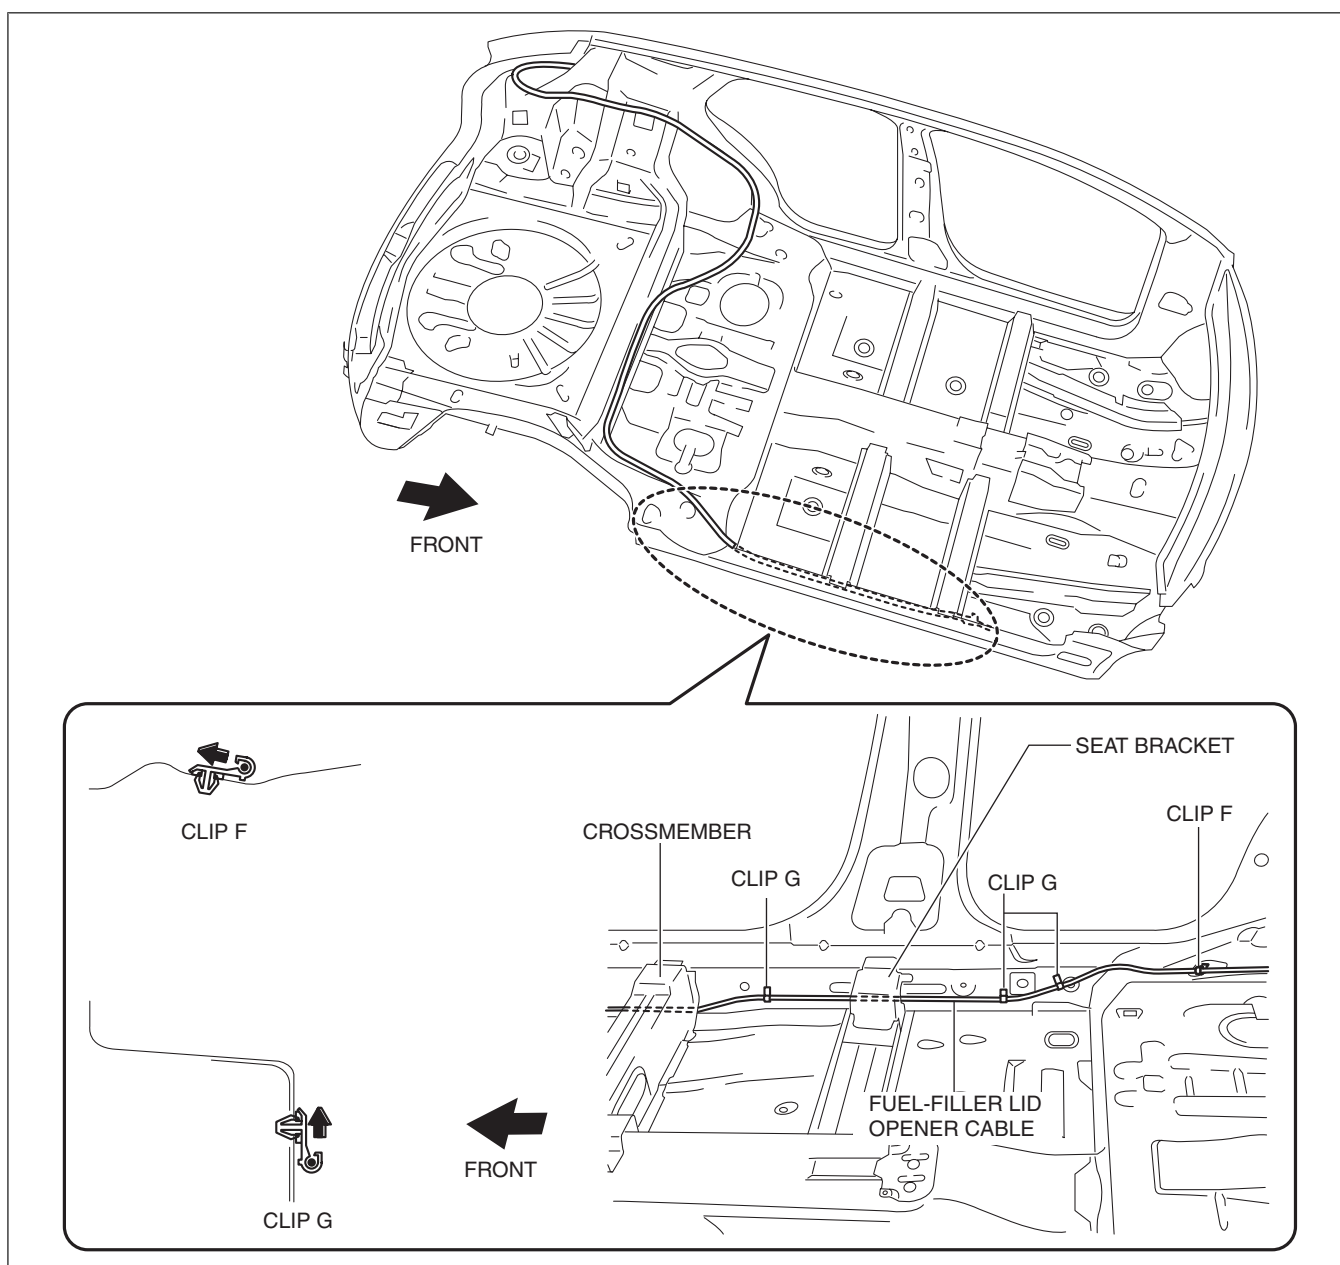

ac5wzw00000320

7. Pull the fuel-filler lid opener cable from the crossmember and the seat bracket.
8. Install in the reverse order of removal.