

## AUTOMATIC TRANSAXLE WARNING LIGHT [GW6A-EL, GW6AX-EL]


id0517i2361900

### Purpose/Function

- The automatic transaxle warning light illuminates when the transaxle has malfunction.

### Construction


- The automatic transaxle warning light is built into the instrument cluster.

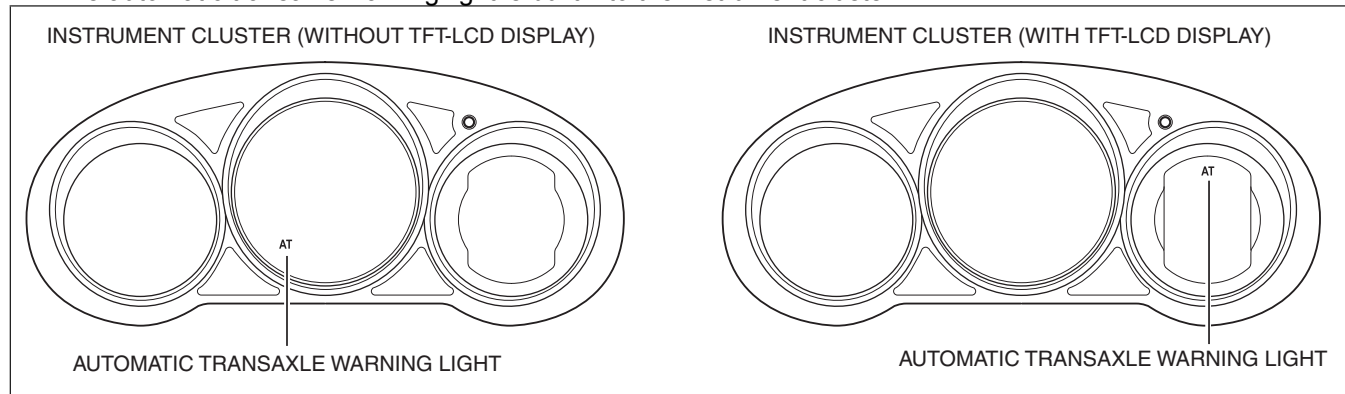

ac5wzn00000942

### Operation

- If the transmission has a malfunction, the TCM sends an automatic transaxle warning light illumination request signal to the instrument cluster.

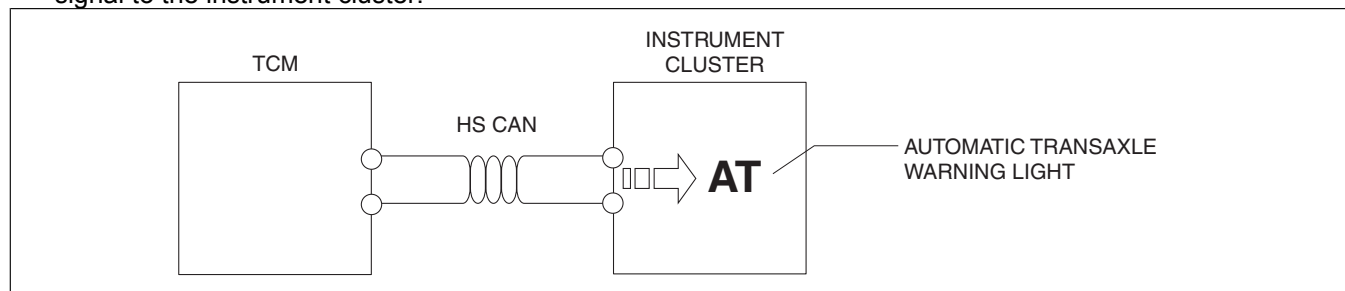

ac5uun00000652

- The TCM illuminates the automatic transaxle warning light for **approx. 2 s** after the ignition is switched ON to perform a bulb check of the automatic transaxle warning light. (Without TFT-LCD display)