

## SECONDARY GEAR [GW6A-EL, GW6AX-EL]


id0517i2352000

### Purpose/Function

- The secondary gear transmits the drive force from the primary gear to the output gear.

### Construction

- The secondary gear is engaged with the output gear and rotates as a single unit.

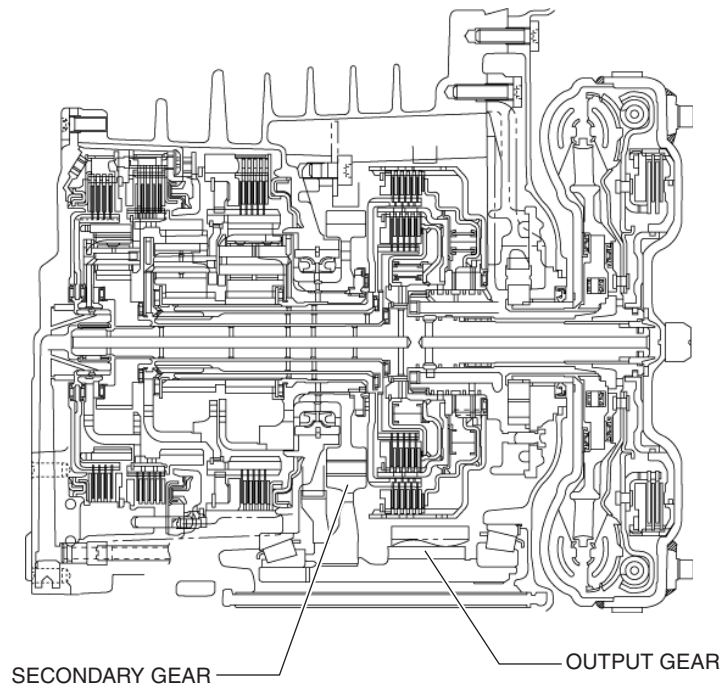

ac5wzn00001706