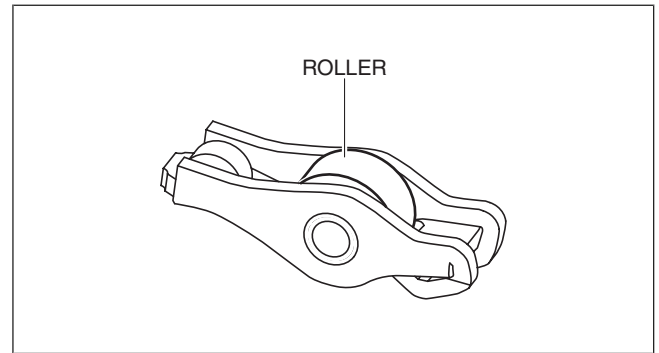

ROCKER ARM INSPECTION

id011000904800

1. Rotate the roller or the rocker arm by hand and verify that rotates smoothly.
 - If it does not rotate smoothly, replace the rocker arm.
2. Visually inspect the rocker arm surface where it contacts the HLA and valve stem for wear or damage.
 - If there is any malfunction, replace the rocker arm.



bpe2ue00000096