

CONTROL VALVE BODY [FW6A-EL, FW6AX-EL]


id0517h2355400

Purpose/Function

- The control valve body controls the hydraulic pressure generated by the oil pump by each solenoid valve. In addition, the oil passages which introduce hydraulic pressure to the pistons for each clutch and brake is formed by the switching of each built-in shift valve.

Construction

- The control valve body consists of integrated hydraulic control related parts and electronic control related parts.
- The hydraulic control related parts basically consist of the upper control valve body and main control valve body each with built-in shift valves, and the solenoid control valve body with built-in solenoid valves.

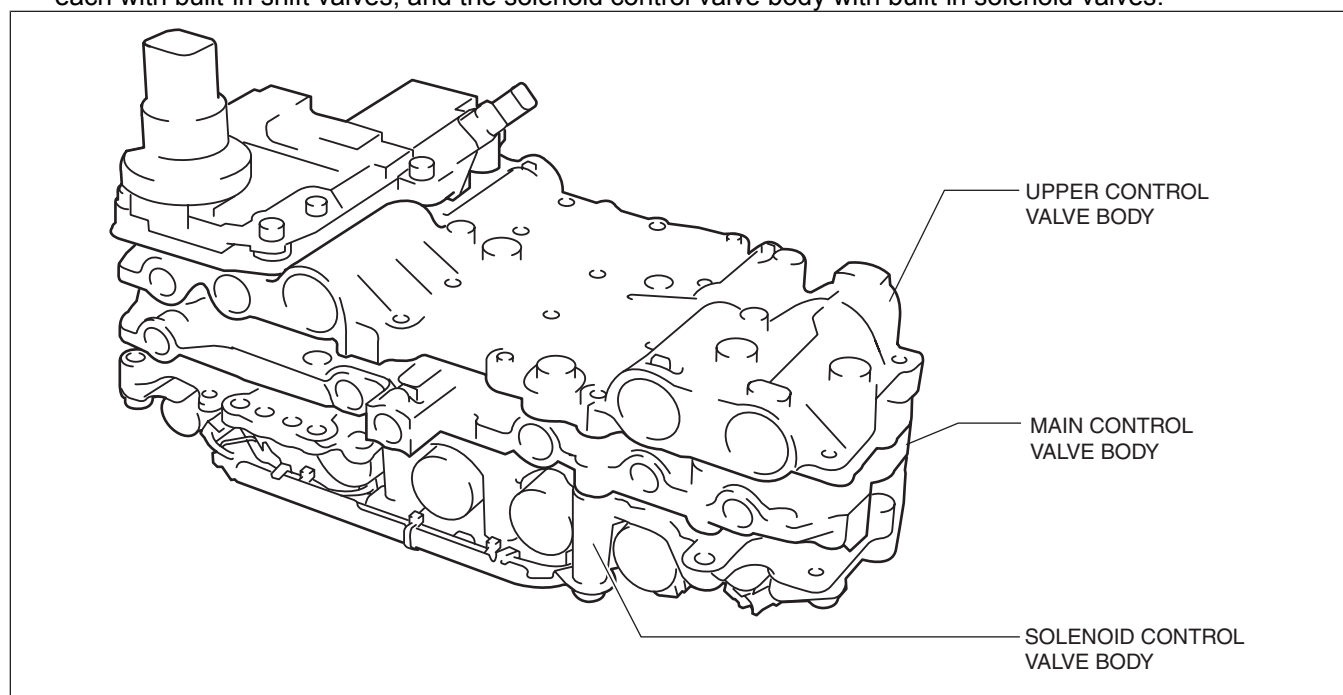

am3uun00002338