

MAIN RELAY [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0140g2008300

Purpose/Function

- Supplies power to each part.
- Supplies battery voltage to each part based on the signals from the PCM even though the ignition is switched ON or off.

Construction


- Installed to the relay and fuse block.

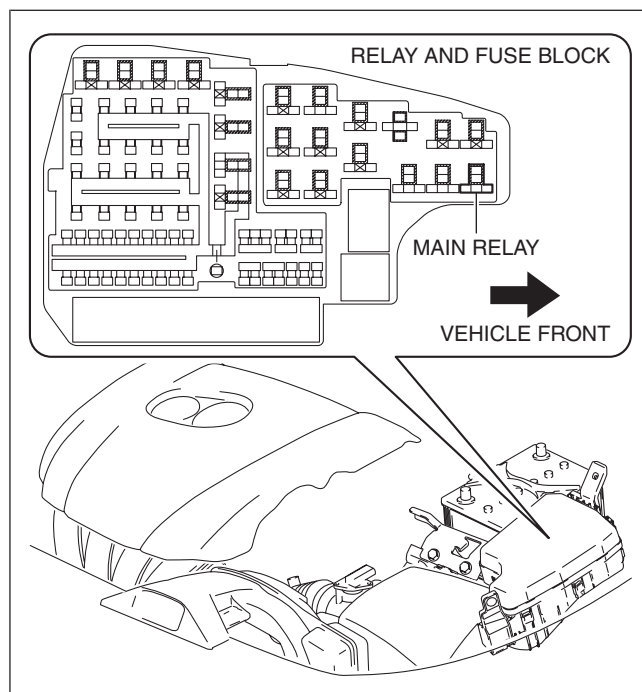

ac5wzn00002423

Operation

- After the contact point is on battery voltage is supplied to the coil based on the signals from the PCM.

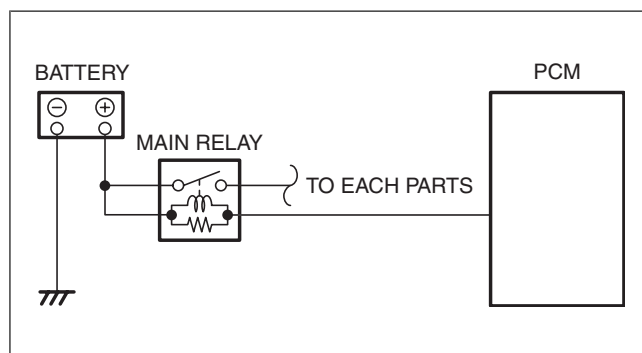

ac5wzn00002424

Fail-safe

- Function not equipped.