

OIL FILTER [SKYACTIV-D 2.2]


id0111s6002200

Purpose, Function

- Engine oil is filtered by passing engine oil through the oil filter element.


Construction

- The oil filter is installed on the left side surface of the cylinder block.
- A spin-on type (full-flow type) oil filter has been adopted.

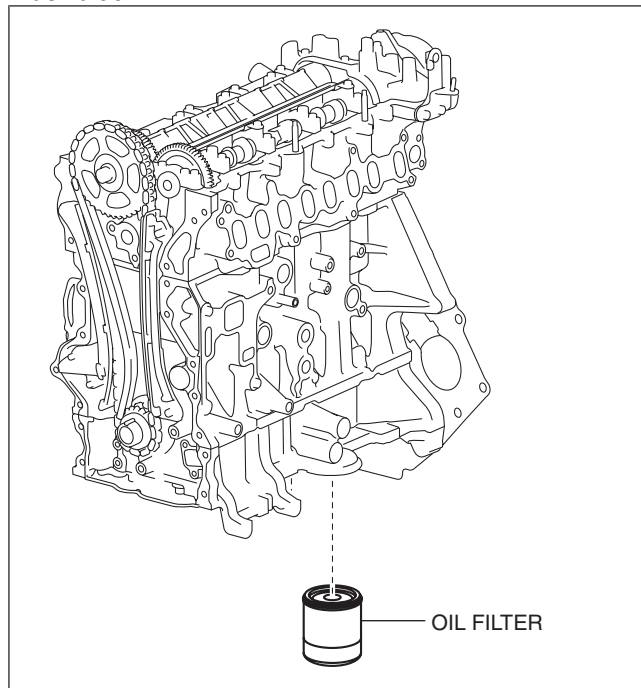

ac5wzn00001813

- The bypass valve is equipped as a detour if the oil filter element becomes clogged.

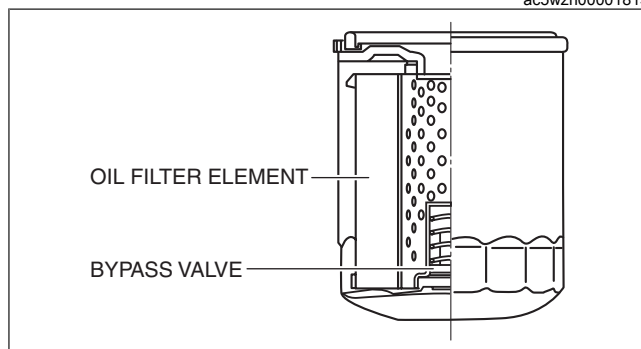

ac5wzn00001811