


HAZARD WARNING SWITCH INSPECTION

id091800803100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the decoration panel. (See DECORATION PANEL REMOVAL/INSTALLATION.)
3. Verify that the continuity between the hazard warning switch terminals is as indicated in the table.

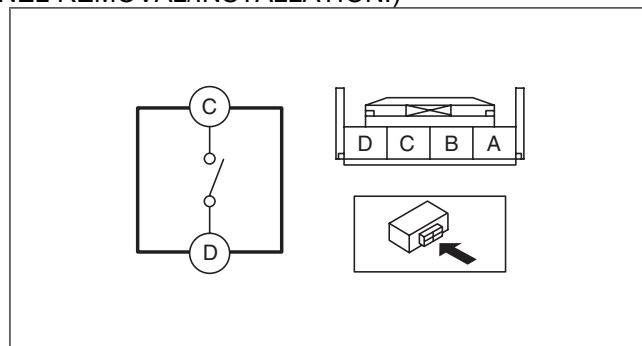

ac5wzw00000033


- If the continuity is as indicated in the table, go to the next step.
- If not as indicated in the table, replace the hazard warning switch. (See HAZARD WARNING SWITCH REMOVAL/INSTALLATION.)

○—○ : Continuity

Switch position	Terminal	
	C	D
On	○—○	○—○
Off		

ac5wzw00000047

4. Apply battery voltage to hazard warning switch terminal A, and connect terminal B to ground.

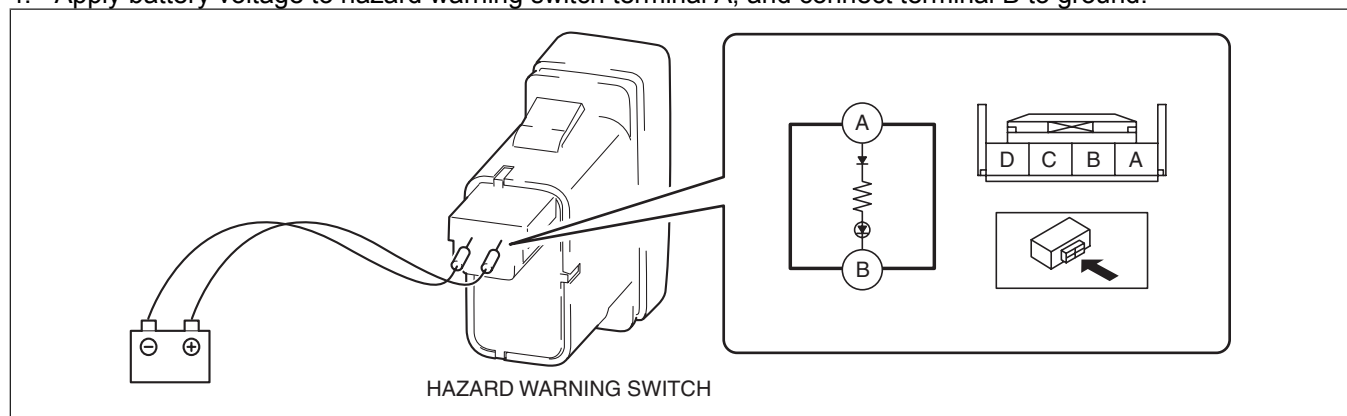

ac5wzw000000106

5. Verify that the LED illuminates.
 - If the LED does not illuminate, replace the hazard warning switch. (See HAZARD WARNING SWITCH REMOVAL/INSTALLATION.)